



PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	SPARES NUMBER
1	030-04-02300	ELECTRICAL COVER (NOT SHOWN)	
2	030-90-00200	TABLE TOP FRYER OVERLAY	
3	B704-92-001	BUZZER 240V / 50Hz	
4	B801-08-010	CONTACTOR TYPE GC25-30M5	
5	B804-17-004	CABLE GLAND	
6	B842-34-012	TIMER - EMZ3735	
7	B842-43-005	INDICATOR LIGHT (RED)	
8	B842-43-006	INDICATOR LIGHT (ORANGE)	
9	B852-50-016	TERMINAL BLOCK (BEIGE) TYPE WDU-6	
10	B852-50-023	TERMINAL BLOCK (BLUE) TYPE WDU-6	
11	B872-22-001	CIRCUIT BREAKER - TYPE A9F53101	
12	B873-30-010	THERMOSTAT (0-50 DEG C)	
13	B888-17-007	SPLIT COMPRESSION GLAND	
14	B888-30-002	THERMOSTAT - MANUAL RESET	


 QUEENSWAY
 SWANSEA WEST IND. PARK
 SWANSEA SA6 4EB
 TEL 01792 561234
 FAX 01792 561016

**FG030 Tabletop
 Doughnut Fryer**

Electrical Assembly Box