



ELECTRONIC FILLER UNIT (INJECTOR) SPARES MANUAL

When ordering spares please quote the **machine serial number** which can be found on the silver information plate of the machine and on the front cover of your manual.

MONO EQUIPMENT
Queensway
Swansea West Industrial Estate
Swansea. SA5 4EB UK

Tel. +44(0)1792 561234 email:spares@monoequip.com Spares Tel.+44(0)1792 564039 Fax. 01792 561016

SAFETY SYMBOLS

The following safety symbols are used throughout available product documentation and the operating manual (available at www.monoequip.com).

Pay special attention to information marked with the following symbols.



WARNING

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a hazardous situation which, if not avoided, will result in electric shock.



CAUTION

Indicates a hazardous situation which, if not avoided, will result in minor or moderate injury.

ELECTRICAL SAFETY AND ADVICE REGARDING SUPPLEMENTARY ELECTRICAL PROTECTION:

Commercial bakeries, kitchens and foodservice areas are environments where electrical appliances may be located close to liquids or operate in and around damp conditions or where restricted movement for installation and service is evident.

The installation and periodic inspection of the appliance should only be undertaken by a qualified, skilled and competent electrician, and connected to the correct power supply suitable for the load as stipulated by the appliance data label. The electrical installation and connections should meet the necessary requirements of the local electrical wiring regulations and any electrical safety guidelines.

No work should be undertaken without disconnecting the power.

We Recommend:

- Supplementary electrical protection with the use of a residual current device (RCD)
- Fixed wiring appliances incorporate a locally situated switch disconnector to connect to, which is easily accessible for switching off and safe isolation purposes. The switch disconnector must meet the specification requirements of IEC 60947.



The supply to this machine must be protected by a 30mA RCD

SECTION 1 Page 4

EXTERNAL PARTS Hopper etc

SECTION 2

Page 8

INTERNAL PARTS Motor etc

SECTION 3 REAR PARTS

Page 11




WARNING

Isolate the injector by disconnecting from the mains supply before attempting any maintenance or fault investigation

SECTION 1

EXTERNAL PARTS

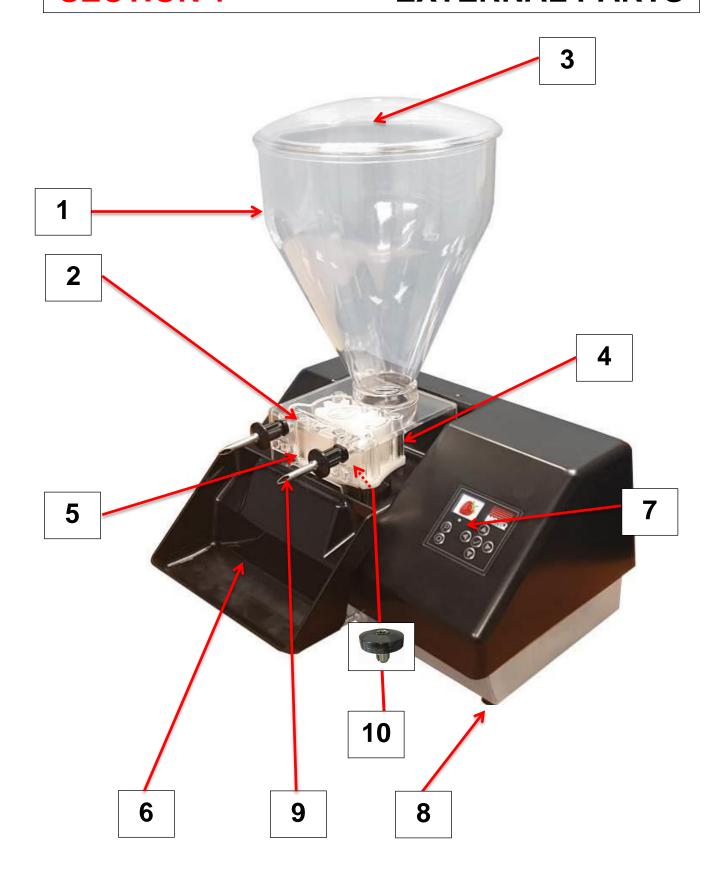

Part numbers and descriptions are on the following pages



PART NUMBER 053-02-02000

Consisting of parts below:

HOPPER LID - 053-02-02100 3 HOPPER CHAMBER - 053-02-20000 1 DRIVEN GEAR - 053-02-00100 7 DRIVE GEAR - 053-02-00200 7 HOPPER SEAL - A900-12-126 5 PUMP COVER ASSEMBLY WITH 2 DRIVE PINS - M053-KSX002 4

OTHER FILLER UNIT PARTS AVAILABLE:





DRIVEN GEAR

053-02-00100

DRIVE GEAR 053-02-00200





RUBBER FOOT B900-18-098

8



NOZZLE

C

053-03-03900 8.0mm diameter -- SHORT 053-03-03904 10.0mm diameter -- LONG 053-03-04700 11.0mm diameter -- SHORT

053-03-04000 4 prong nozzle





M053-03-05000 4 prong nozzle protection cap




Take care when inserting nozzles as they may be sharp.



MOTOR DRIVE SHAFT 053-01D05300

10

INTERNAL PARTS

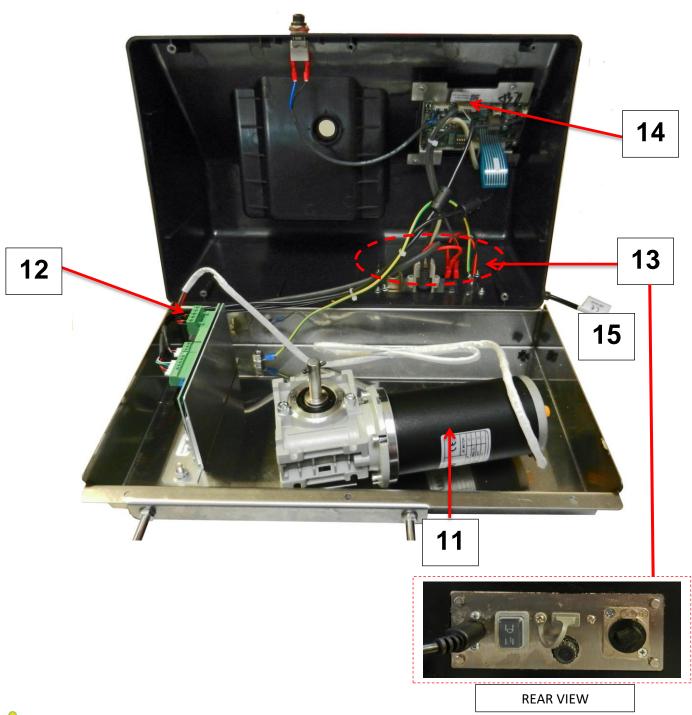



WARNING

 Isolate the injector by disconnecting from the mains supply before attempting any maintenance or fault investigation



MOTOR KIT B053-25-001

11




DRIVE SHAFT WITH LOCKING PIN 053-01-03900



MOTOR DRIVE BOARD

12

B053-25-002

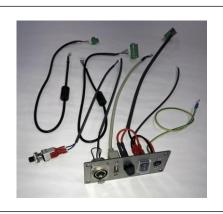

REAR PANEL AND INTERNAL CABLES

13

B053-25-004



MAIN BOARD WITH OLED DISPLAY

B053-25-003

14



POWER SUPPLY CONNECTING CABLE

UK - B842-06-037

EUROPE - B842-06-038

USA - B842-06-039

JAPAN - B842-06-040

15

SECTION 3 REAR PARTS

