



www.monoequip.com

Enter **Serial Nos.** here.

PROVER

DIVIDER

MOULDER

In the event of an enquiry please quote these serial numbers.

WARRANTY RUNS FROM:

TO:

FOR SERVICE AND SPARES RING: **01792 564044 (24HRS)**



FUSION

BREAD PLANT

OPERATING AND MAINTENANCE MANUAL

IMPORTANT NOTES

- **DO NOT TRY TO DISABLE ANY SAFETY DEVICES, THEY ARE FITTED FOR YOUR SAFETY.**

• WARNING! ----- DIVIDER OIL
DO NOT USE ORDINARY VEGETABLE OIL
FROM SHOP SHELVES, IN THE DIVIDER

*THIS WILL FORM A GUM-LIKE RESIDUE,
 CAUSING STICKING AND POSSIBLE DAMAGE TO THE MACHINE.*

MONO RECOMMENDS THE USE OF “CRODA SUPER WUNDROL”
 (AVAILABLE FROM MONO. PART NUMBER “A900-25-272”)

MONO FUSION PLANT MOULDER SETTINGS GUIDE

PLEASE NOTE THAT THESE ARE APPROXIMATE SETTINGS AND SHOULD ONLY BE USED AS A STARTING POINT


PRODUCT	WATER	MIX TIME	SHEETER	INITIAL FLAP	REAR FLAP	FRENCH LENGTH	LOAF LENGTH	MOULDING PRESSURE
980G BREAD	9	2-8 MINS	11	UP	DOWN	N/A	10	260-280
520G BREAD	9.3	2-8 MINS	11	UP	DOWN	N/A	6	260-280
550G FRENCH	9.1	2-8 MINS	5	DOWN	UP	5	N/A	N/A
260G BATON	9.1	2-8 MINS	5	UP	UP	7	N/A	N/A



DECLARATION OF CONFORMITY

We hereby declare that this machine complies with the essential health and safety requirements of :-

- The Machinery Directive 2006 / 42 / EC
- The Low voltage Directive 2006 / 95 / EC
- The requirements of the Electromagnetic Compatibility Directive 2004 / 108EC, 91 / 263 / EEC, 92 / 31 / EEC
- The General Safety of Machinery and food processing Standards applicable
- Materials and Articles intended to come into contact with food - Regulation (EC) No. 1935 / 2004
- Good manufacturing practice for Materials intended to come into contact with food - Regulation (EC) No. 2023 / 2006

Signed	
G.A. Williams – Quality Manager	

Date	
-------------	--

Machine FG Code.		Machine Serial No.	
-----------------------------	--	-------------------------------	--

A technical construction file for this machine is retained at the following address:

MONO EQUIPMENT
Queensway,
Swansea West Industrial Park,
Swansea
SA5 4EB
UK

MONO EQUIPMENT is a business name of **AFE GROUP Ltd**
Registered in England No.3872673 VAT registration No.923428136

Registered office: Unit 35,
Bryggen Road,
North Lynn Industrial Estate,
Kings Lynn Norfolk,
PE30 2HZ



SECTION 1 BREADPLANT ASSEMBLED
INSTALLATION
CLEANING
MAIN CONTROLS
BREAD PLANT OPERATION

SECTION 2 - DOUGH DIVIDER
MAIN INSTRUCTIONS

SECTION 3 - MOULDER
MAIN INSTRUCTIONS

CONTENTS

SECTION 1 - BREADPLANT ASSEMBLED

1.0	INTRODUCTION -----	Description of plant	page 8
2.0	GENERAL DIMENSIONS ---	Prover, Divider, Moulder.	page 9
2a	OVERALL DIMENSIONS -----	Breadplant assembled	page 10
3.0	SPECIFICATIONS -----	Power etc.	page 11
4.0	SAFETY -----	Precautions when using the equipment.	page 12
5.0	INSTALLATION -----	General, Divider, Moulder.....	page 13
6.0	ISOLATION	Emergency stop and turning off for cleaning, servicing.	page 18
7.0	CLEANING INSTRUCTIONS	<ul style="list-style-type: none">□ Prover - page 19<ul style="list-style-type: none">Daily Cleaning page 20Weekly Cleaning page 21Carrier pocket removal page 21□ Divider page 22<ul style="list-style-type: none">Daily Cleaning page 22Weekly Cleaning page 25□ Moulder page 26<ul style="list-style-type: none">Daily Cleaning page 26Weekly Cleaning page 32	

8.0 OPERATING INSTRUCTIONS page 33

A. OPERATION OF THE BREAD PLANT – THE CONTROLS EXPLAINED	page 33
WARNING LIGHTS	page 35
MOULDER INFEED CONVEYOR CURLING CHAIN SETTING	page 36
FLOUR DUSTER OPERATION	page 37
B. HOW TO OPERATE THE BREADPLANT.....	page 38

9.0 ELECTRICAL INFORMATION (WIRING DIAGRAMS) page 39

PLEASE READ THESE MORE DETAILED SECTIONS BEFORE USING THIS PLANT

SECTION 2 - DOUGH DIVIDER page 49

SECTION 3 - MOULDER page 80

SECTION 2 - DOUGH DIVIDER

1.0 Introduction	page 52
2.0 General Dimensions	page 53
3.0 Specifications	page 53
4.0 Safety	page 54
5.0 Installation	page 55
6.0 Isolation	page 57
7.0 Cleaning Instructions	page 58
• Daily	page 58
• Weekly	page 62
8.0 Operating Machine	page 63
9.0 Maintenance	page 66
10.0 Troubleshooting	page 68
11.0 Spares and Service Information	page 75
FOR SERVICE AND SPARES RING: 01792 564044 (24HRS)	
12.0 Electrical Information Section	page 76

SECTION 3 - MOULDER


Section - 1.0	Introduction	page 83
Section - 2.0	Overall Dimensions	page 83
Section - 3.0	Specifications	page 84
Section - 4.0	Safety	page 85
Section - 5.0	Installation	page 86
Section - 6.0	Isolation	page 87
Section - 7.0	Cleaning	page 88
	○ Daily	page 88
	○ Weekly	page 94
<hr/>		
Section - 8.0	Operating Information	page 95
Section - 9.0	Operating Machine	page 96
	○ Moulding between belts (French stick and petit pan)	page 97
	○ Moulding Between Rear Belt & Pressure Board (Tin and Bloomers)	page 98
<hr/>		
Section - 10.0	Maintenance	page 99
Section - 11.0	Troubleshooting	page 100
Section - 12.0	Service and Spares	page 101
FOR SERVICE AND SPARES RING: 01792 564044 (24HRS)		
Section - 13.0	Electrical Information	page 104

1.0 INTRODUCTION

The **Mono FUSION** bread plant is a fully integrated unit enabling rapid change of product lines without moving any items of equipment.


It consists of three machines:

1. **DIVIDER** Divides the dough to size required
2. **PROVER** Allows the dough to prove
3. **MOULDER** Moulds dough to shape required

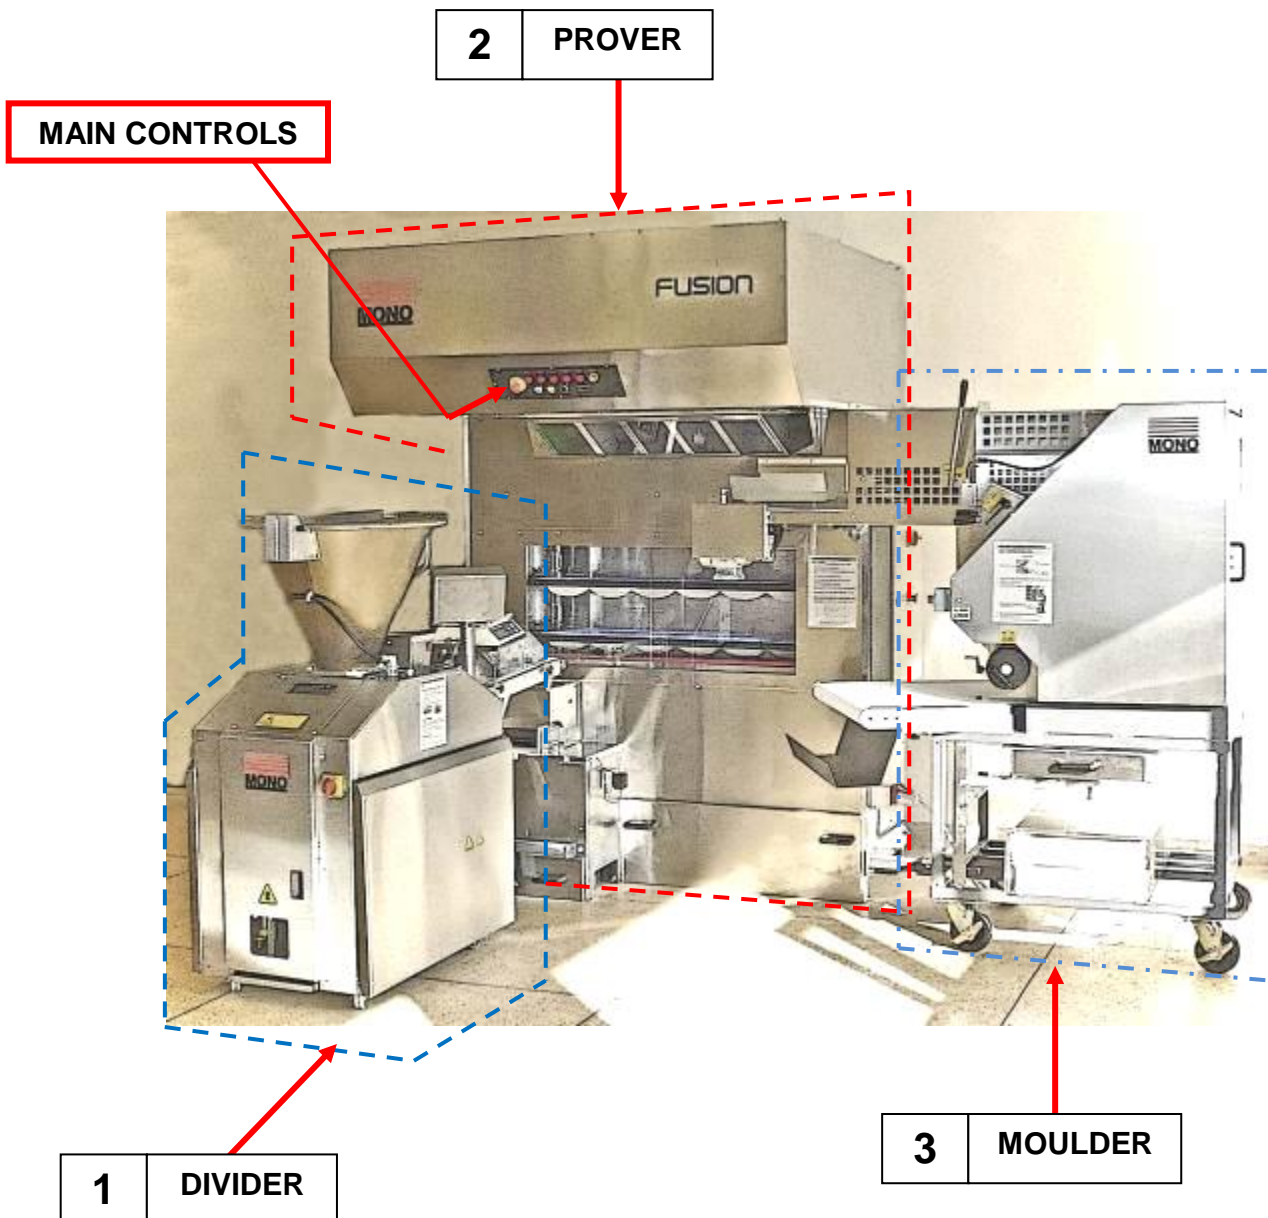


2.0 GENERAL DIMENSIONS

PROVER

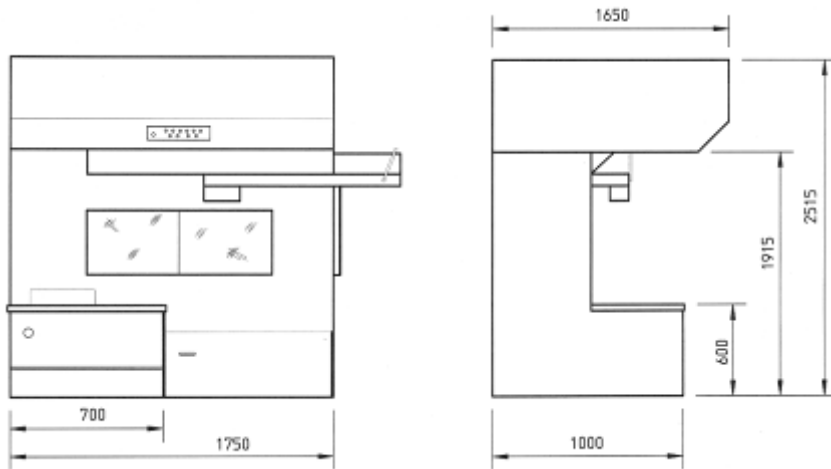


Height:
2515mm.
Depth:
1650mm.
Width:
1750mm.

MOULDER

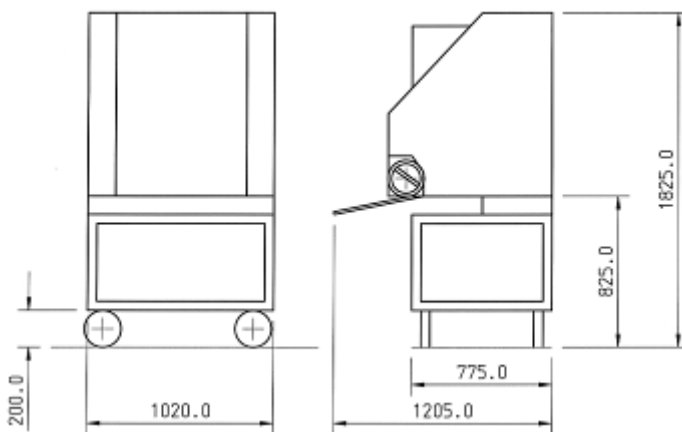


Height:
1825mm.
Depth:
1205mm.
Width:
1020mm.

DIVIDER

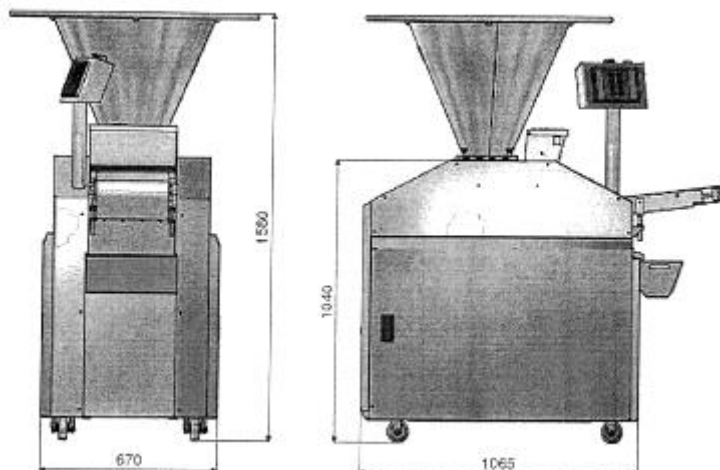

Height:
1580mm
Depth:
1065mm.
(inc. conveyor 1400mm)
Width:
670mm

2a OVERALL DIMENSIONS

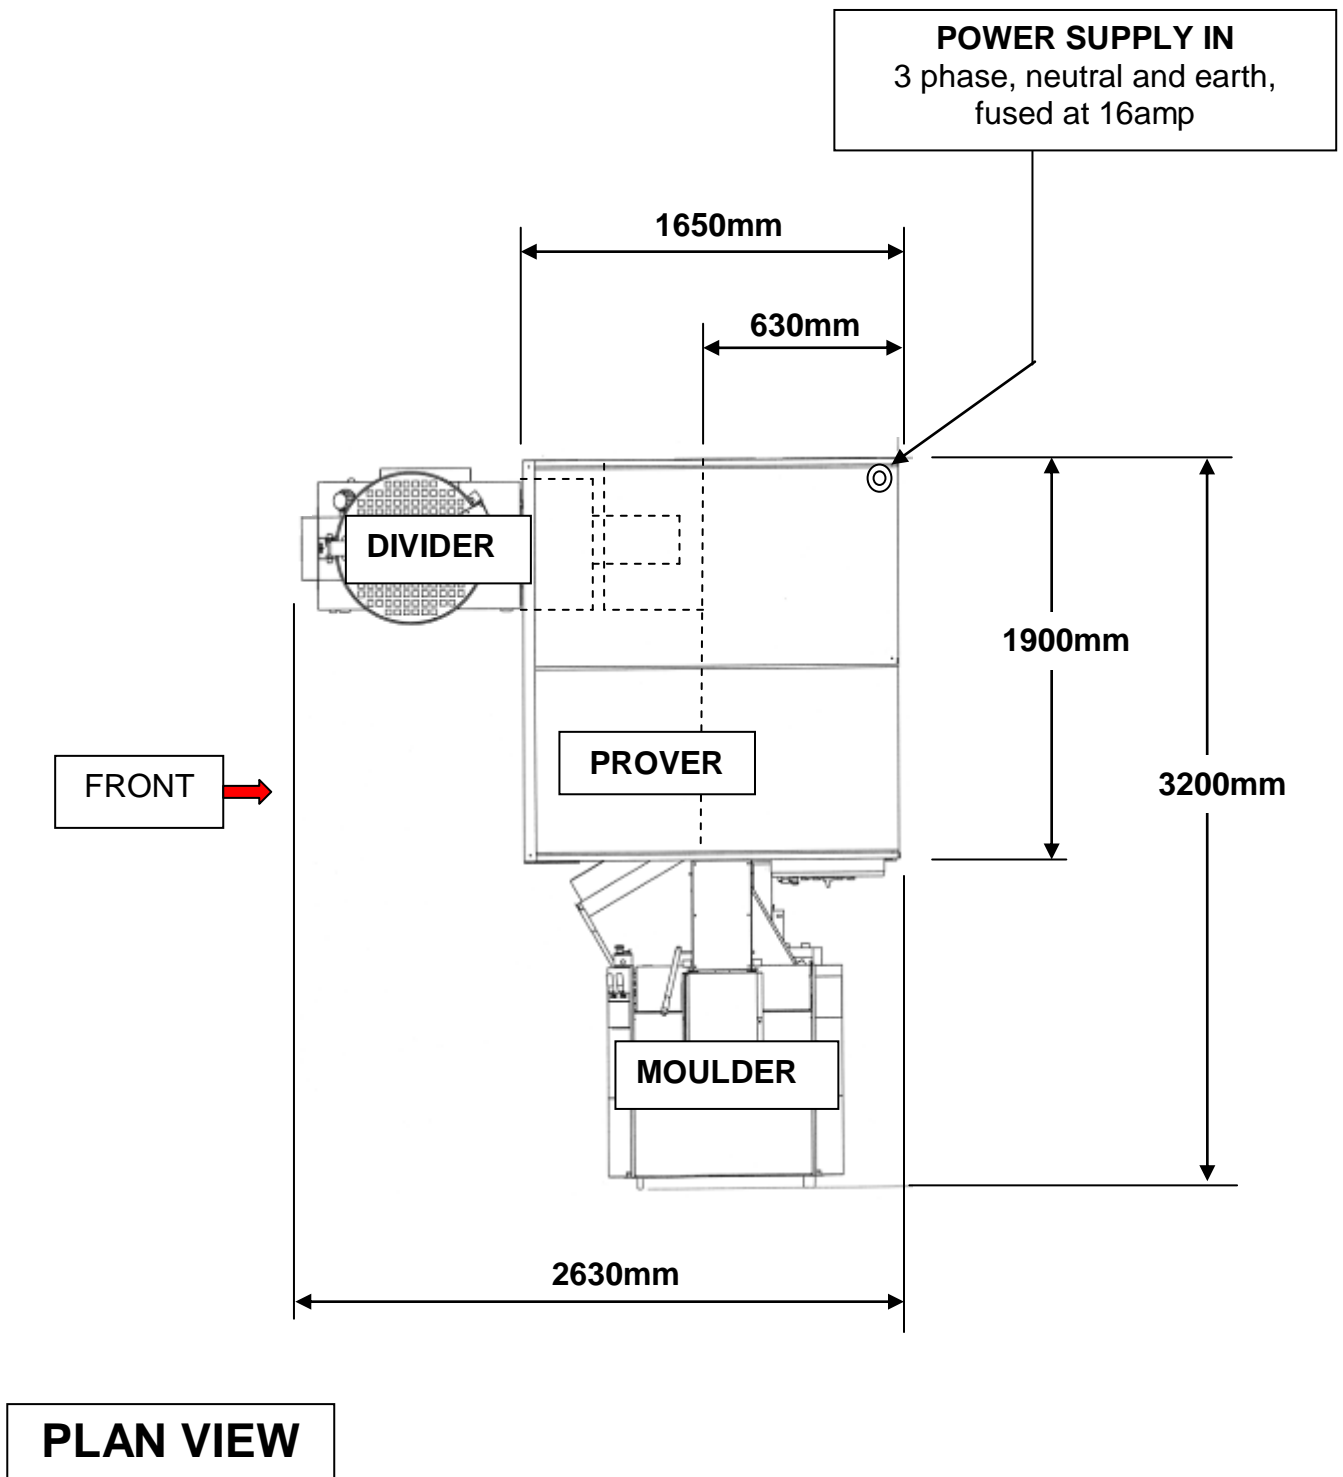

TOTAL AREA REQUIRED = 2630 X 3200
HEIGHT (PROVER) = 2520

DIMENSIONS IN MILLIMETRES

3.0 SPECIFICATIONS

TOTAL PLANT

3 phase, neutral and earth, fused at 16amp
(ALL MACHINES CONNECTED TOGETHER)

POWER: 4.81kW

PROVER

POWER: 0.86kW

WEIGHT: 1470kg

NOISE LEVEL: Less than 85dB

MOULDER

POWER: 0.75kW

WEIGHT: 430kg

NOISE LEVEL: Less than 85dB

DIVIDER


POWER: 3.2kW

WEIGHT: 500kg

NOISE LEVEL: Less than 85dB


4.0 SAFETY

IF YOU ENCOUNTER ANY ISSUE WITH THIS EQUIPMENT THAT YOU HAVE NOT BEEN TRAINED FOR, YOU MUST CONTACT YOUR INSTORE TECHNICIAN OR MANAGER..

- 1 **Never use a machine in a faulty condition** and always report any damage.
- 2 **Only trained engineers may remove any part** that requires a tool to do so.
- 3 **People undergoing training on this machine must be under direct supervision** of a fully trained person.
- 4 **Use of this machine can prove dangerous** if:
 - ❑ the machine is operated by untrained or unskilled staff
 - ❑ the machine is not used for its intended purpose
 - ❑ the machine is not operated correctly
- 5 **Always ensure hands are dry before touching any electrical appliance** (including cable, switches and plugs).
- 6 **Do not operate the machine with any panels or guards removed.**
 - ❑ *All safety devices applied to the machine during manufacture and the operating instructions in this manual are required to operate this machine safely. The owner and the operator are responsible for operating this machine safely.*
-  ❑ ***DO NOT TRY TO DISABLE ANY SAFETY DEVICES, THEY ARE FITTED FOR YOUR SAFETY.***
- 7 **NEVER move machinery by pulling on the power cords or cables.**
- 8 **No loose clothing or jewellery** should be worn while operating this machine
- 9 **The bakery manager or the bakery supervisor must carry out daily safety checks** on this machine.
- 10 **No one under the age of 16 may operate** this machine.
- 11 **No one under the age of 18 may clean** this machine under any circumstances.
- 12 **DO NOT STAND ON ANYTHING TO LOAD THE DIVIDER HOPPER.**
- 13 **DO NOT STAND ON OR STORE ITEMS ON THE PROVER ROOF.**

ALL CLEANING AND MAINTENANCE OPERATIONS MUST BE MADE WITH MACHINE DISCONNECTED FROM THE POWER SUPPLY.

5.0 GENERAL INSTALLATION

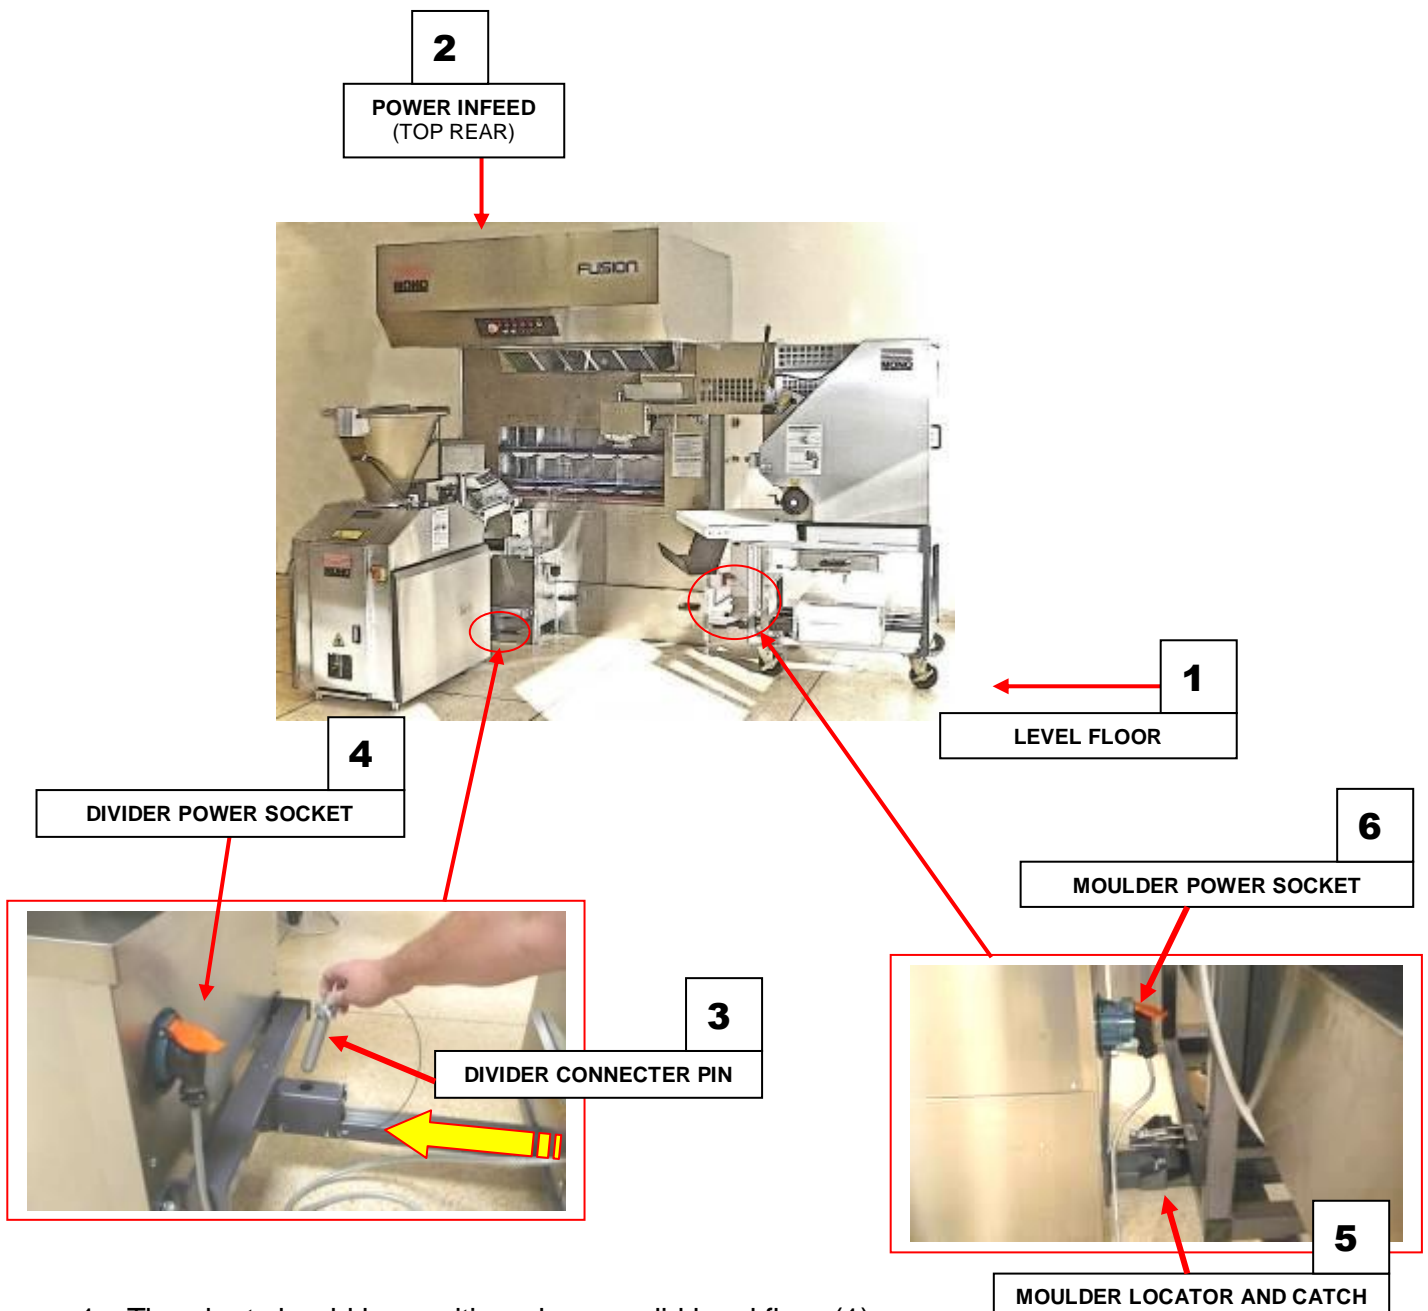

1. The plant should be positioned on a solid level floor (1).
2. The plant should be connected to a mains wall isolator.
(Mains infeed from top/rear of prover) (2)
3. Connect the divider to the prover using the connecting pin (3).
4. Insert plug into the correct socket on the front of the prover drive box.
5. Connect the moulder to the prover, using the locator on the moulder base and close the catch (5).
6. Plug moulder lead into the socket on the side of the prover (6).

DO NOT ATTEMPT TO LIFT THE DIVIDER BY HUMAN FORCE (LIFTING)

- Use of a **forklift or crane** is recommended for lifting or the machine can be pushed on the castors provided.
- **To lift with a forklift** - the machine must be secured to a pallet.
- **To lift with a crane** - lifting eyes are provided.



LIFTING EYES

Check that the power rating on the serial number plate matches the supply that the machine is to be connected to.


- The Dough Divider should be connected to the correct socket on the prover.

DIVIDER SOCKET



- Connect the electrical cable to the socket on the prover drive box front.
- Check the machine after installation to ensure the belt moves in the correct direction indicated (see arrow in photo below).

*(If wrong - swap positions of any two of the three phase carrying wires in the plug.
This should be factory set and not need to be done)*

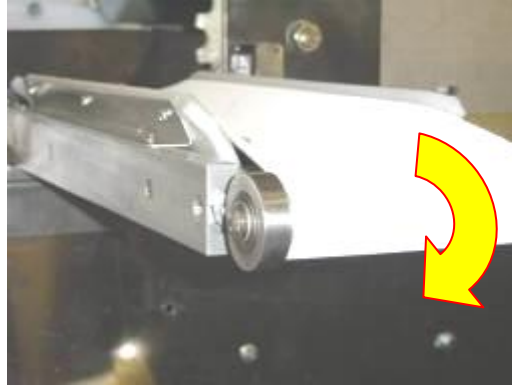


- Fill oil tank to 2/3 level, with your company recommended food safe oil.

○ WARNING!


DO NOT USE ORDINARY VEGETABLE OIL FROM SHOP SHELVES, IN THE DIVIDER
*THIS WILL FORM A GUM-LIKE RESIDUE,
CAUSING STICKING AND POSSIBLE DAMAGE TO THE MACHINE.*

MONO RECOMMENDS THE USE OF “**CRODA SUPER WUNDROL**”
(AVAILABLE FROM MONO. PART NUMBER “**A900-25-272**”)

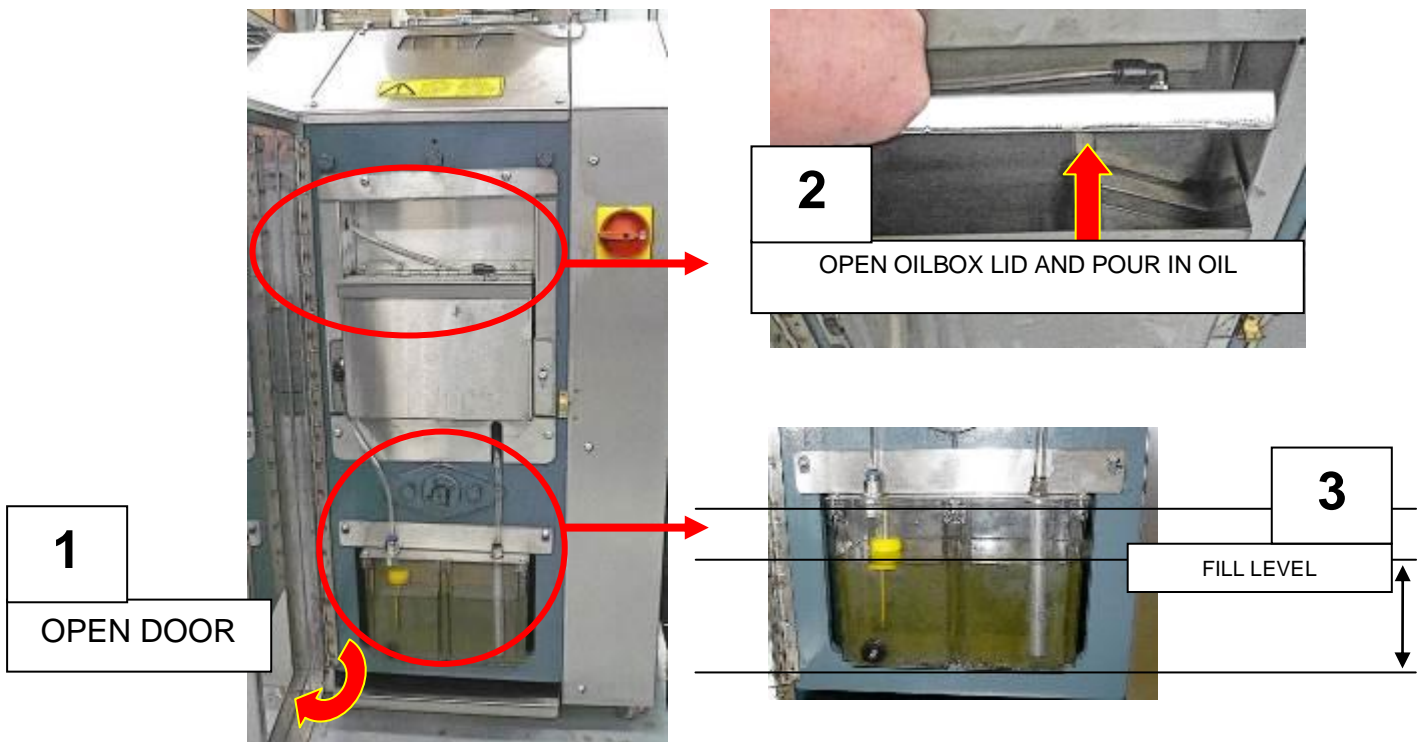


Positioning Divider.

- 1 Ensure the divider is standing on a solid level floor.
- 2 Correctly position the divider using the male locator.
- 3 The locator should be pushed in until the end of it pushes up against the stop and the holes line up.
- 4 Drop the keeper pin in the holes.
- 5 After the connection is made, lock the two front castors into place.

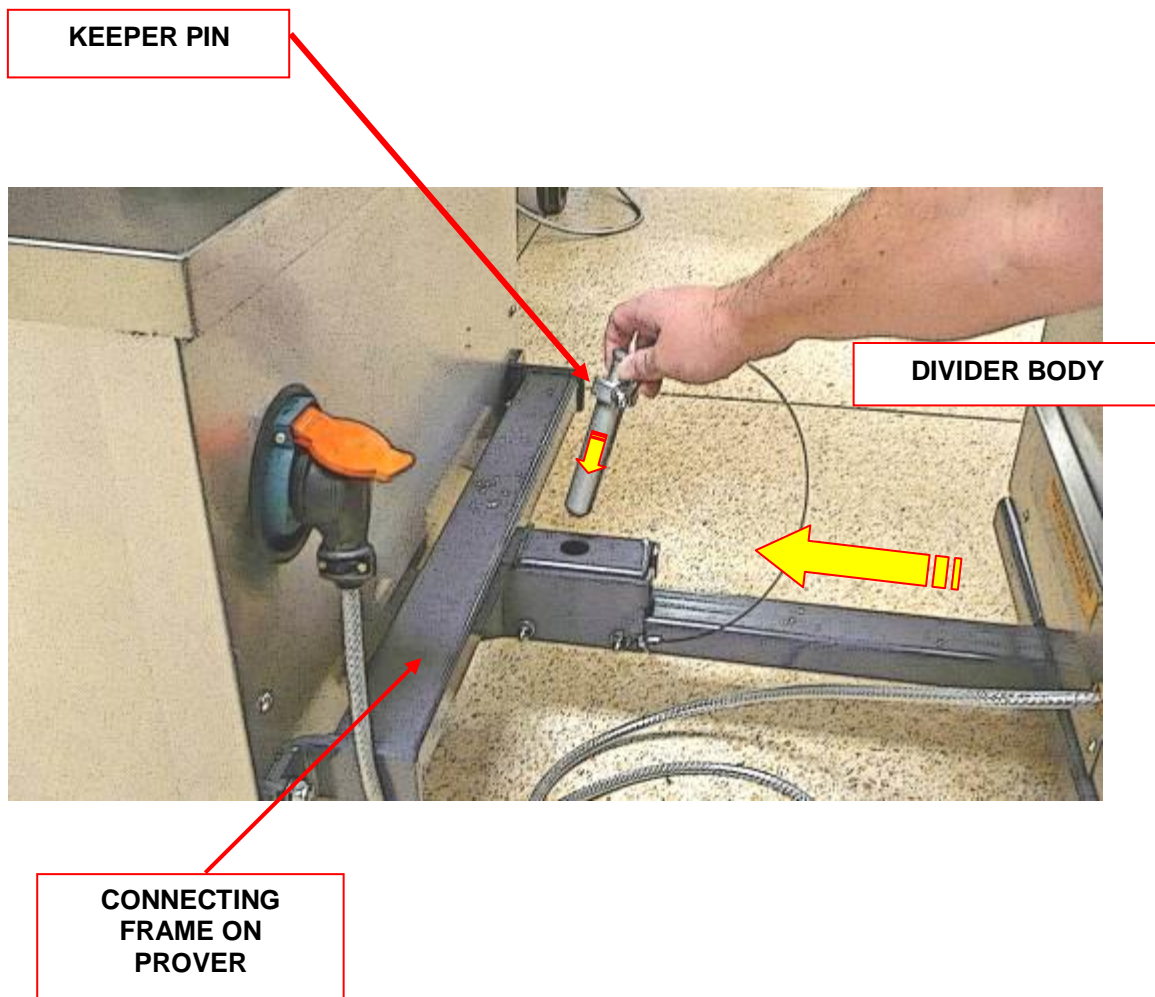

Positioning Moulder.

- 1 Ensure the moulder is standing on a solid level floor.
- 2 Correctly position the moulder using the male locator on the base.
- 3 The locator should be pushed in until the end of it pushes up against the stop and the clip lines up.
- 4 Fasten the clip
- 5 After the connection is made, lock the two locking castors into place.

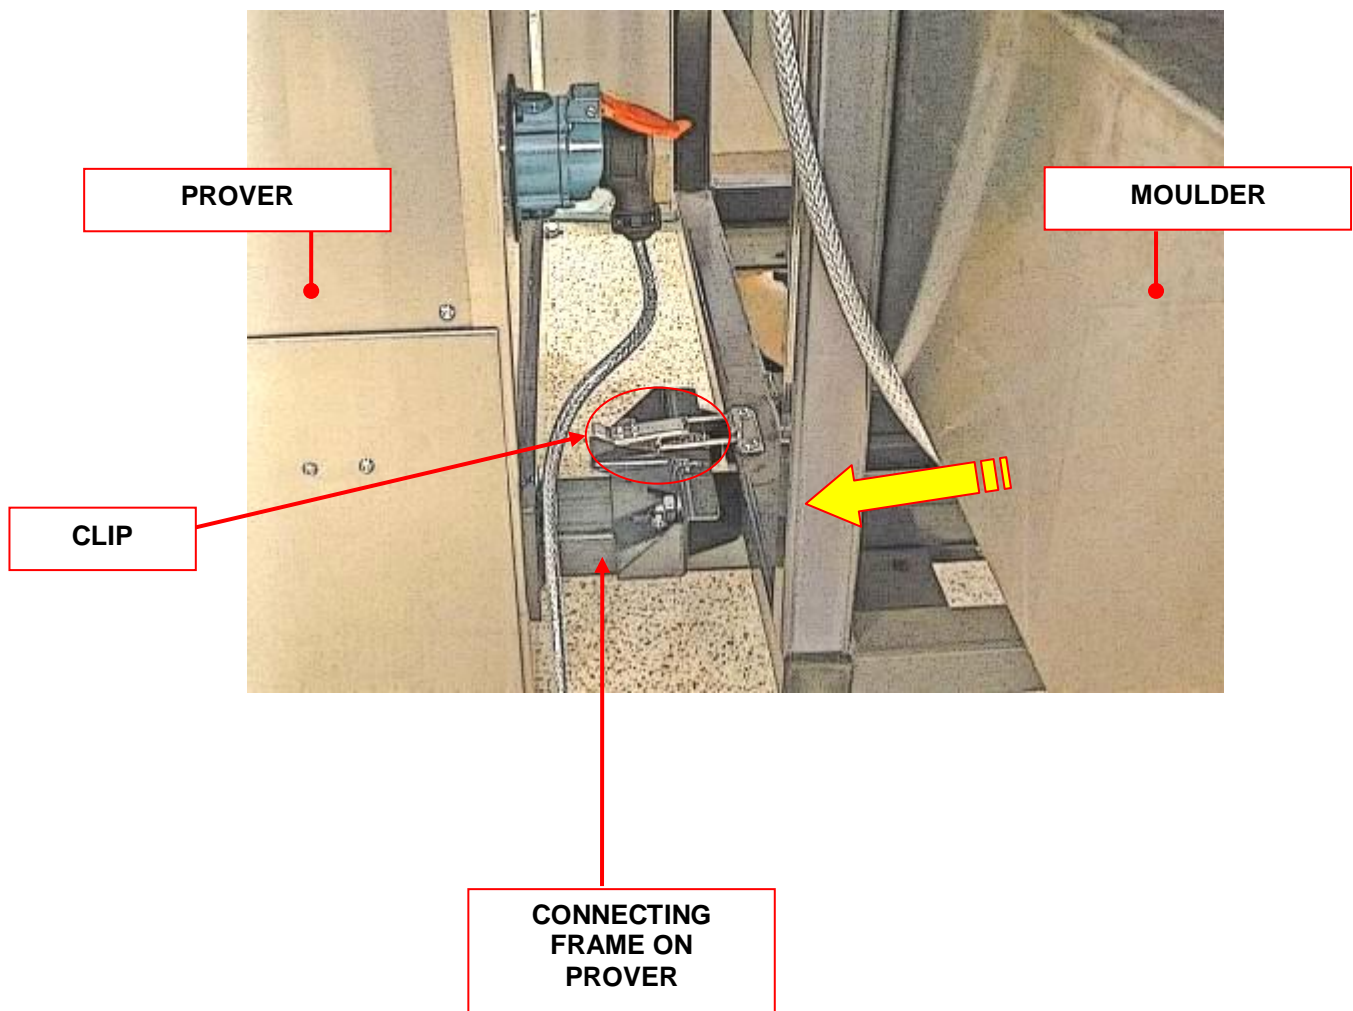

6.0 ISOLATION

EMERGENCY STOP BUTTONS


TO STOP THE BREAD PLANT IN AN EMERGENCY

Switch off at the main isolator, or use the **emergency stop button** on the overhead panel

PROVER OVERHEAD PANEL



PROVER MAIN ISOLATOR

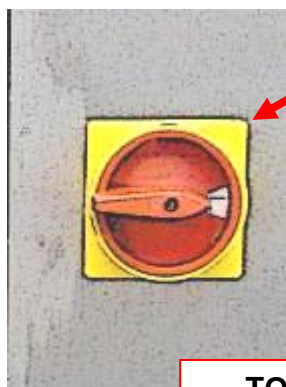

TO STOP DIVIDER

TO STOP MOULDER
EMERGENCY STOP BUTTON



EMERGENCY STOP BUTTON

WARNING

Except in an emergency, do not halt the prover with dough in the carriers and leave it. Dough will adhere to the pockets and may cause the prover to malfunction.

USE THE "PARK" BUTTON TO STOP THE PROVER IF NOT AN EMERGENCY.

7.0 CLEANING

PROVER
DIVIDER
MOULDER

SWITCH OFF AND ISOLATE THE MACHINES FROM MAINS SUPPLY BEFORE COMMENCING CLEANING



MAINS SUPPLY ISOLATOR


NOTES

- 1. Except in an emergency,** do not halt the prover with dough in the carriers and leave it. Dough will adhere to the pockets and may cause the machine to malfunction.
- 2.** ALWAYS CHECK THE POCKETS FOR ADHERING DOUGH AND REMOVE AS SOON AS POSSIBLE. DO NOT WAIT FOR DAILY CLEANING IF IN DOUBT.
- 3. If not an emergency,** use the “PARK” button.
This will stop the prover in the correct position.
- 4.** NEVER LEAVE THE DIVIDER WITH DOUGH IN THE DOUGH CHAMBER
AS PRESSURES CAN BUILD UP AS THE DOUGH PROVES.

PROVER CLEANING INSTRUCTIONS

DAILY CLEANING

1. Brush the infeed chute [1] ensuring the dough sensor and reflector are clean.
2. Remove the drive box drawer [2] and wash thoroughly, dry and replace.
3. Lift slightly and withdraw the cleaning drawer [3] and remove any dough. Wash thoroughly, dry and replace.
4. Remove the clear transfer window [4] by lifting out of the location channels. Wash and dry.
5. Wipe the window location channels and replace the window.
6. Open the main overhang door [5] (lift, slide back, then hinge down) and check for fallen pieces of dough inside. Brush rear of door and close.
7. Brush the conveyor area [6] and wipe clean the metalwork, paying attention to the inner sides where dough can collect.
8. Wipe over the control box [7] with a damp cloth (do not allow moisture to enter the panel).
9. Brush down the outer sheeting of the machine.

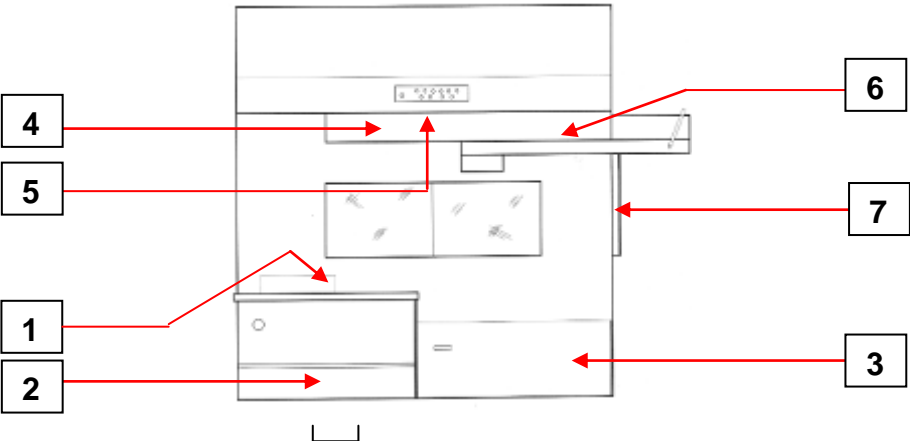

KEEP WATER AWAY FROM THE MAIN CONTROL PANEL AND ELECTRICAL CONNECTION SOCKETS.

LEFT HAND VERSION SHOWN

CAUTION
ISOLATE THE PROVER FROM THE POWER SUPPLY BEFORE CLEANING.

As daily cleaning and also: -

1. Wipe over all outer sheeting and doors with sanitising solution.

KEEP WATER AWAY FROM THE MAIN CONTROL PANEL AND ELECTRICAL CONNECTION SOCKETS.

2. Ensure the top roofing sheeting is clear and clean as required.
Do not stand on or store items on the roof
3. Inspect the floor area inside and clean as required.

CARRIER and POCKET REMOVAL

1. Open the front windows to access carriers.
2. Although not necessary when cleaning and replacing pockets, carriers can be removed if required by pulling chain sideways off the locating pins on the end of the carrier. It is not advisable to remove more than one at a time and note that the carriers are positioned at three link intervals. Note that the end roller should always be towards the rear.
3. Hold the carrier body and pull the blue carrier pocket gently upwards to unclip.
(Note that there are 6 pockets to a carrier and each one can be replaced individually without removing the carrier from the prover)



MOULDED CLIPS



CARRIER

DIVIDER CLEANING INSTRUCTIONS


DAILY

NOTE:

ISOLATE THE DIVIDER FROM THE MAINS SUPPLY BEFORE CLEANING.

- CLEANING SHOULD ONLY BE CARRIED OUT BY FULLY TRAINED PERSONNEL
- DO NOT USE A HIGH PRESSURE WASHER
- DO NOT USE SOLVENTS OF ANY KIND
- KEEP CLEANING FLUIDS AWAY FROM ELECTRICAL SWITCHES

- 1 Remove any dough residue from interior of the hopper.
(Only use **plastic scraper**)
- 2 Smear the interior of the hopper with divider oil.
- 3 Check the oil level is correct (refill if required).
Then run the divider for a minute, using on/off buttons on the control console.
(This will stop the machine from seizing up by coating the drum with oil)

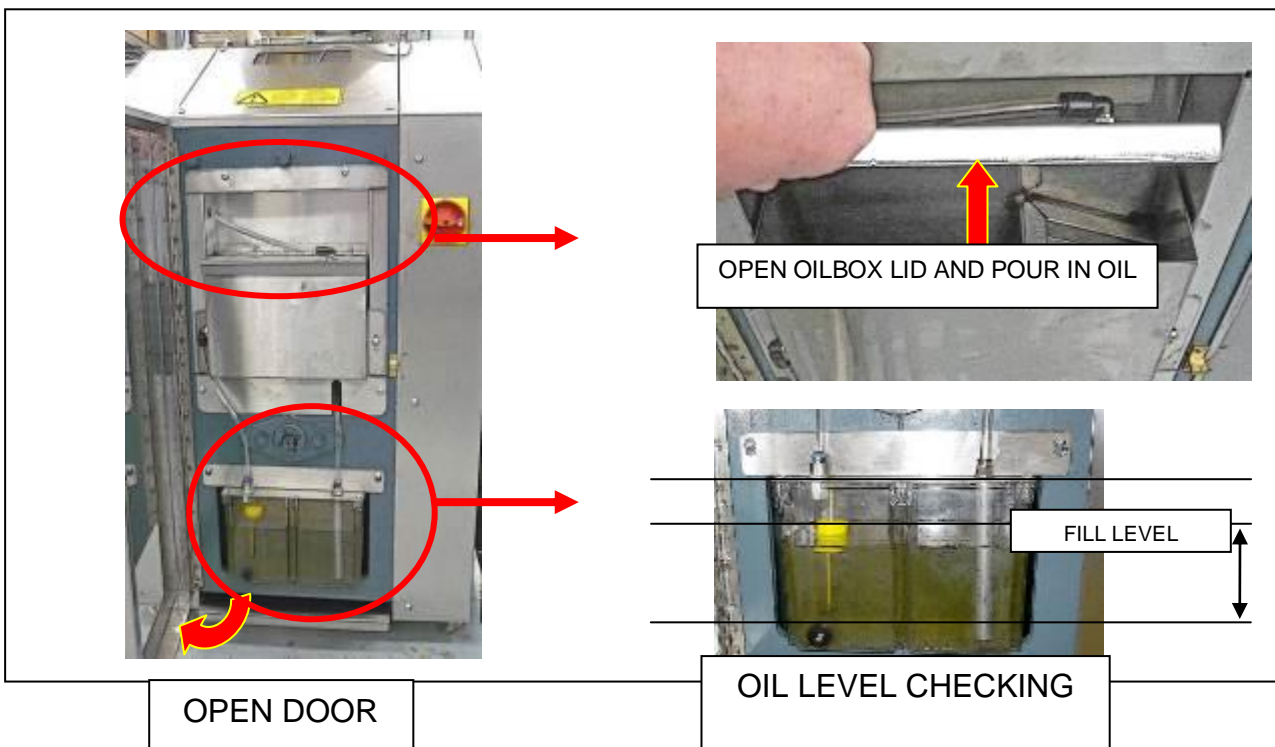


NOTE:


THE ABOVE STEPS MUST BE FOLLOWED DAILY, OTHERWISE IT WILL LEAD TO THE BUILD UP OF STARCH AND SEIZURE OF THE MACHINE.

□ **OFF TAKE CLEANING**

REMOVE SCALES IF FITTED.
Unplug and lift off.

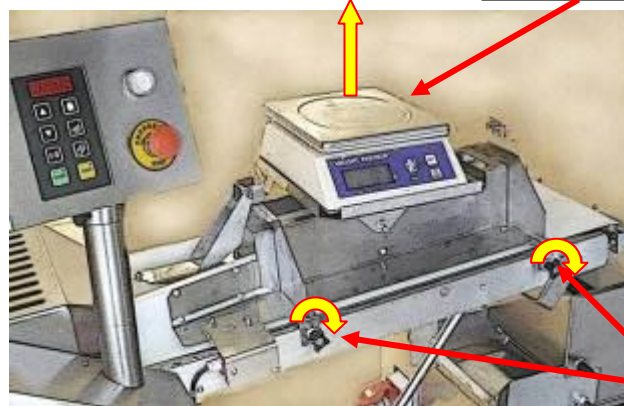

LOOSEN KNOBS | 1

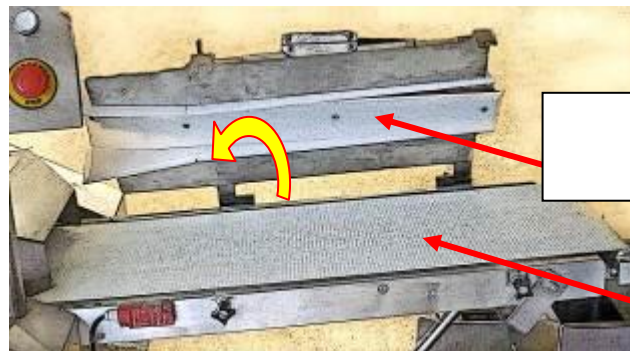

PIVOT
PRESSURE BOARD | 2

BELT


- 1 Unplug and remove the scales.
- 2 Loosen the two black knobs on the side of the pressure board.
- 3 Pivot the pressure board away from you.
Help may be required to hold the pressure board while cleaning takes place.
- 4 Remove any dough residue and brush exposed parts.
- 5 Scrape and wipe down the belt. (Only use **plastic scraper**).
- 6 Remove any dough residue from the conveyor metal work and belt surface.
- 7 Lower the pressure board and tighten the two black knobs on the side of the pressure board.
- 8 Replace and plug in the scales.

□ **EXTERNAL CLEANING**

- 1 Brush off any flour residue and scrape as necessary. (Only use **plastic scraper**)
- 2 Brush off loosened dough.
- 3 Make up sterilising solution and hot water.
- 4 Clean the exterior of the divider as necessary working from top to bottom.
- 5 Swab dry with disposable tissue.


□ **UNDER CONVEYOR COLLECTION BOX**

- 1 Brush the chute debris into the collection box.

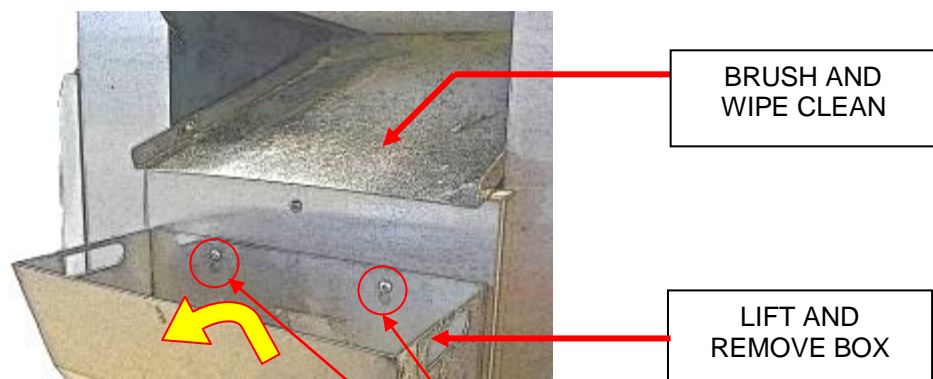

- 2 Lift and remove the collection box and clean.

- 3 Replace the collection box, making sure it is pushed right down on locating screws.

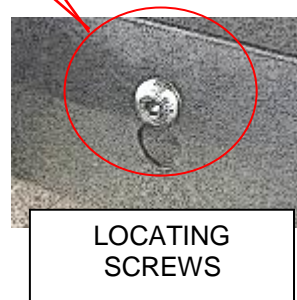

WEEKLY

NOTE:

CLEANING SHOULD ONLY BE CARRIED OUT BY FULLY TRAINED PERSONNEL

WARNING:


ISOLATE DIVIDER FROM MAINS SUPPLY

1. Scrub wheels with a small nylon cleaning brush or scouring pad and hot water sterilising solution.
2. Clean entire exterior surfaces of the divider, working from top to bottom.

MOULDER CLEANING INSTRUCTIONS

DAILY CLEANING INSTRUCTIONS


NOTE! - PRIOR TO CLEANING, USE PLASTIC SCRAPERS TO REMOVE SUBSTANTIAL DOUGH PIECES.

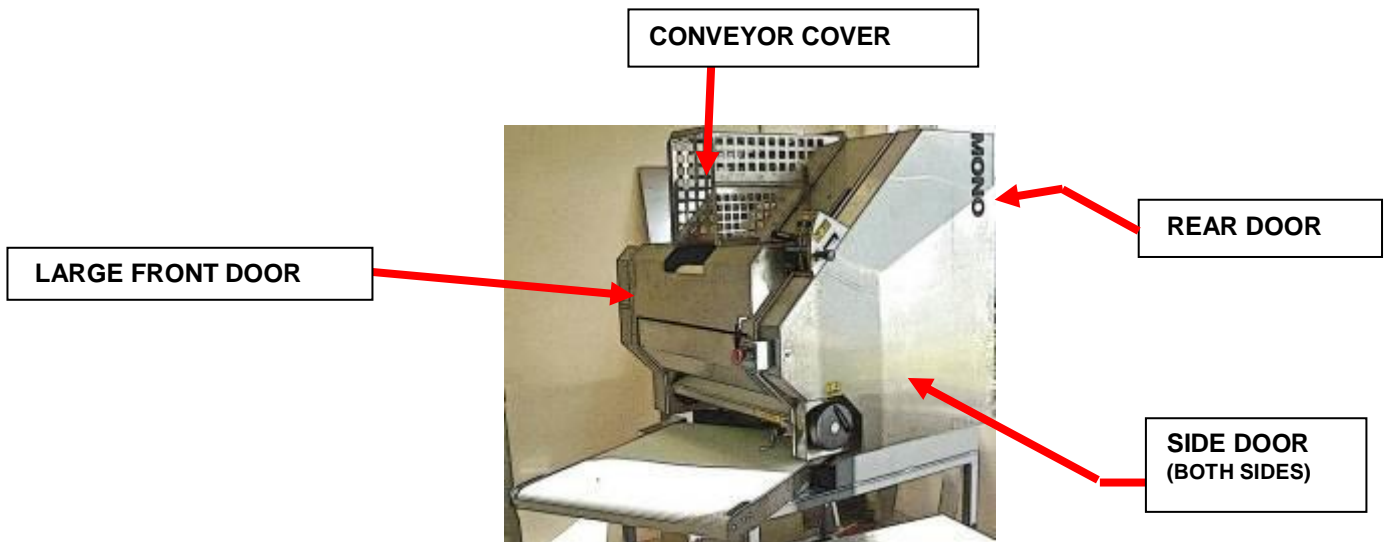

1. Isolate the mains supply (unplug from prover).
2. Open large front door.





SET SHEETING GAP

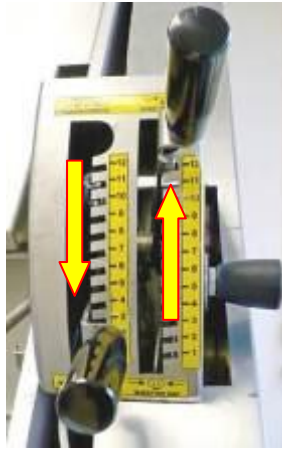

4. Set sheeting gap to the widest mark and brush out residue from the area, using a plastic scraper on the rollers if required.
5. Clean any residue that has been trapped at the bottom of the belt. Scrape exposed surface of the dough-moulding belt with **plastic** scraper.
7. Brush/vacuum the area.


SCRAPER AND CURLING CHAIN REMOVAL

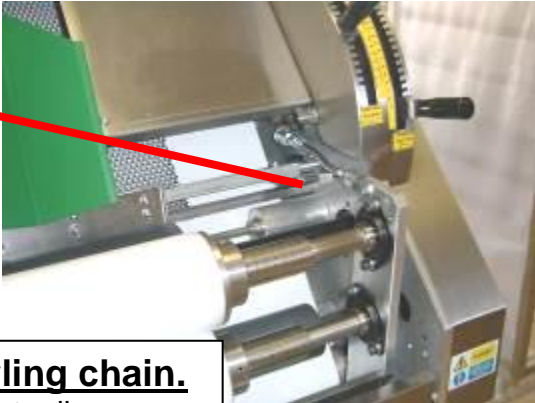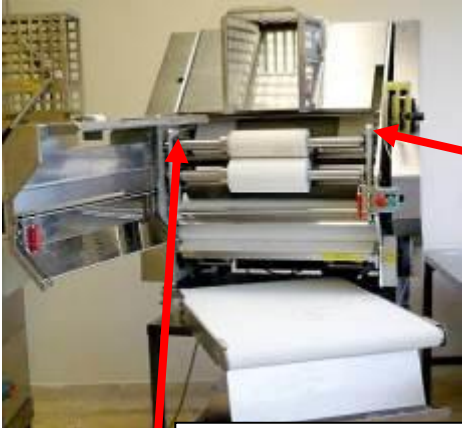

To remove scraper and curling chain.
Slide clips sideways and lift up bar to disengage (one each side).




CLIP CLOSED

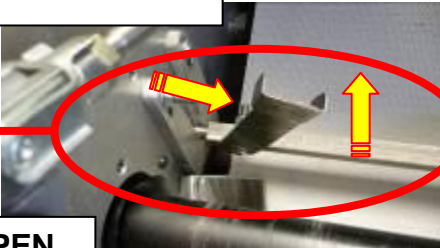

CLIP OPEN

Detach top of curling chain
Lift chain off top bar and remove curling chain and scraper.

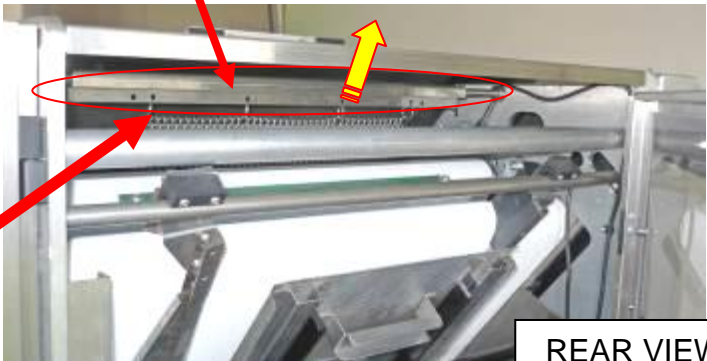


REAR VIEW




To replace scraper and curling chain.


Clean and then replace the curling chain by dropping it down the conveyor from the back and clipping in place at the front. (Reverse of removal).

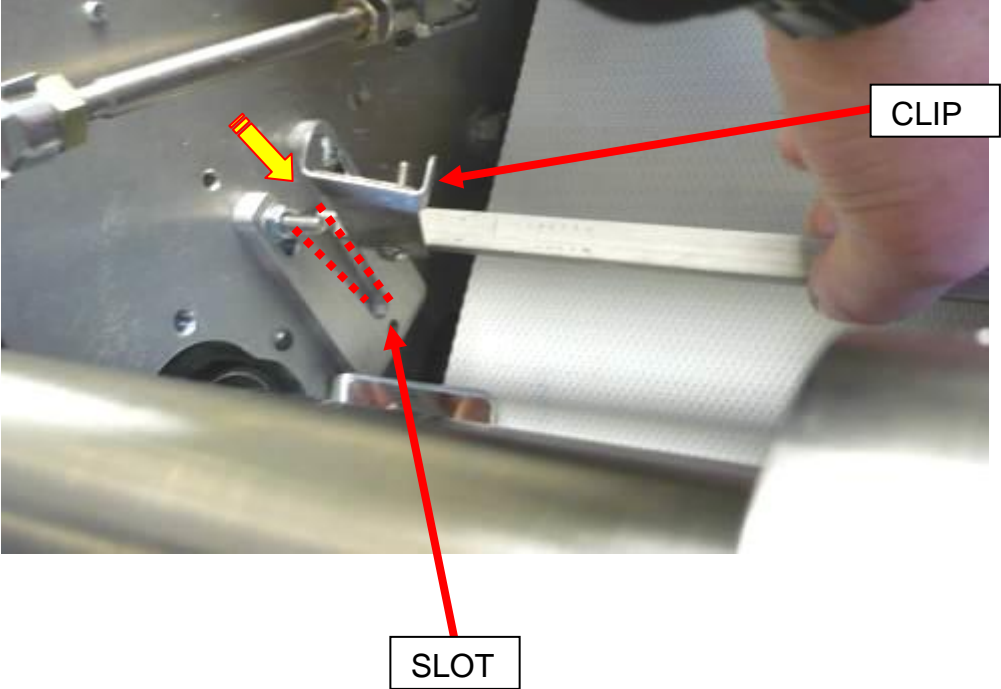

Pressure Board Removal

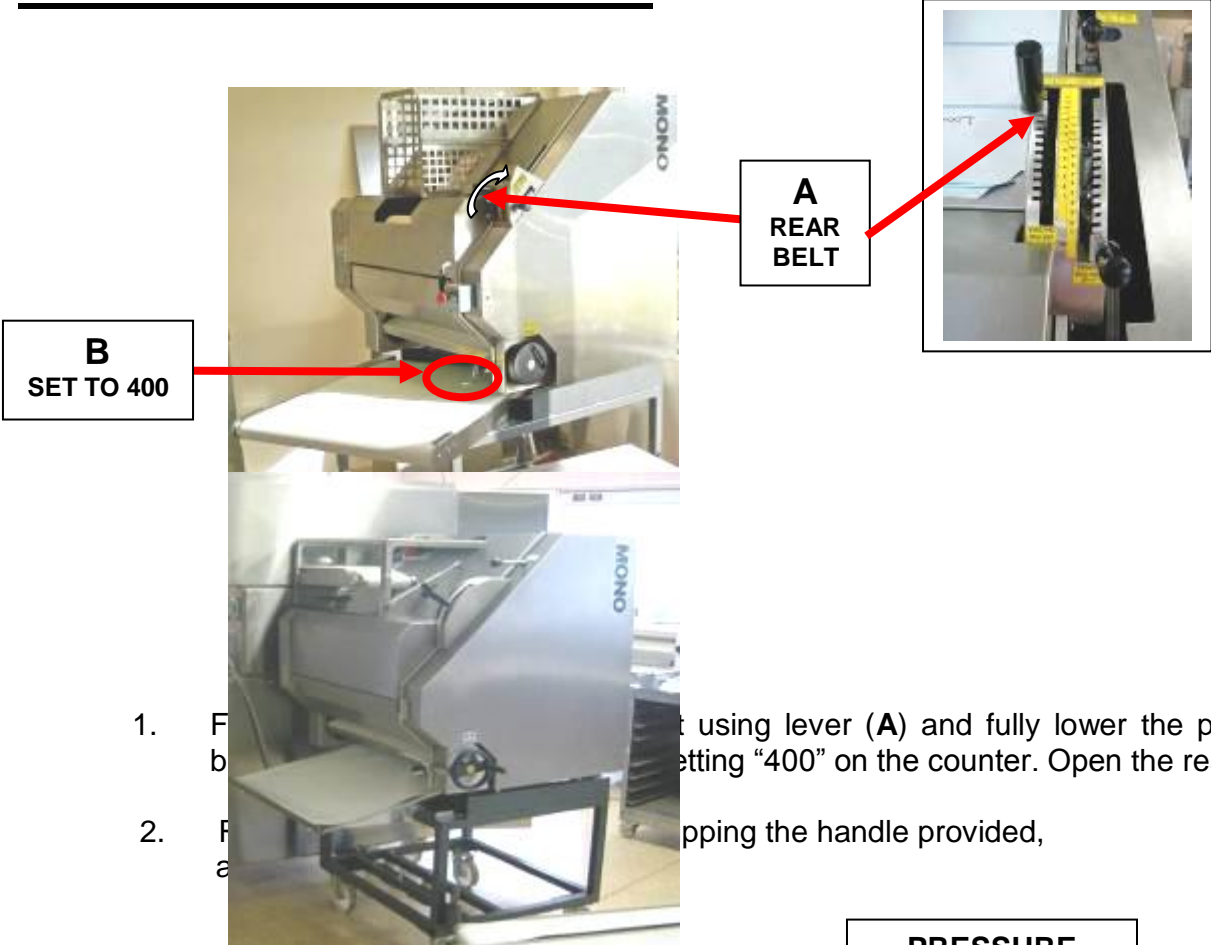

1. Fully lower the pressure board using lever (A) and fully lower the pressure setting "400" on the counter. Open the rear door.
2. Fully open the rear door by pulling the handle provided,

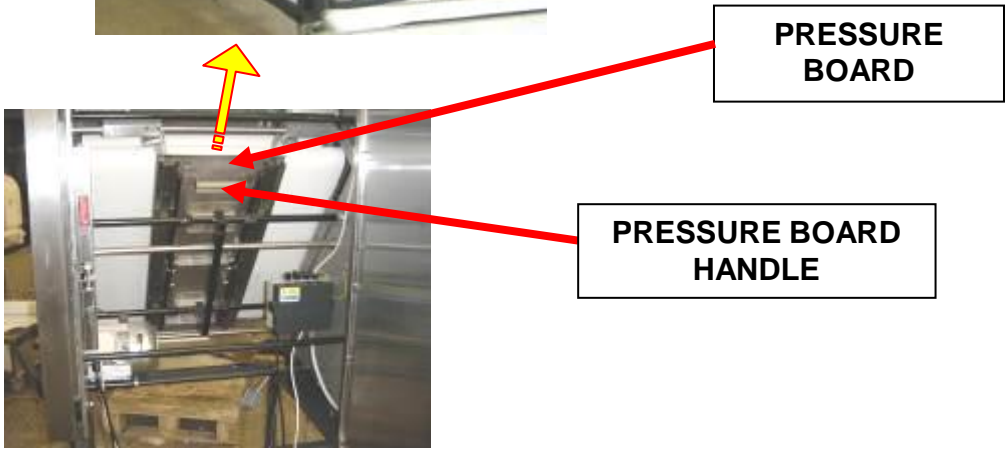


3. Wash dough contact surfaces of the pressure board and side guides with sanitising solution and hot water. Dry with a cloth.
4. Remove any dough from the bottom belt with a plastic scraper.
5. Replace the pressure board, making sure the hooks on the board are fully engaged.

Close the rear door firmly to make the safety switch connection.

OFF TAKE CONVEYOR

This should be scraped clean with a plastic scraper.

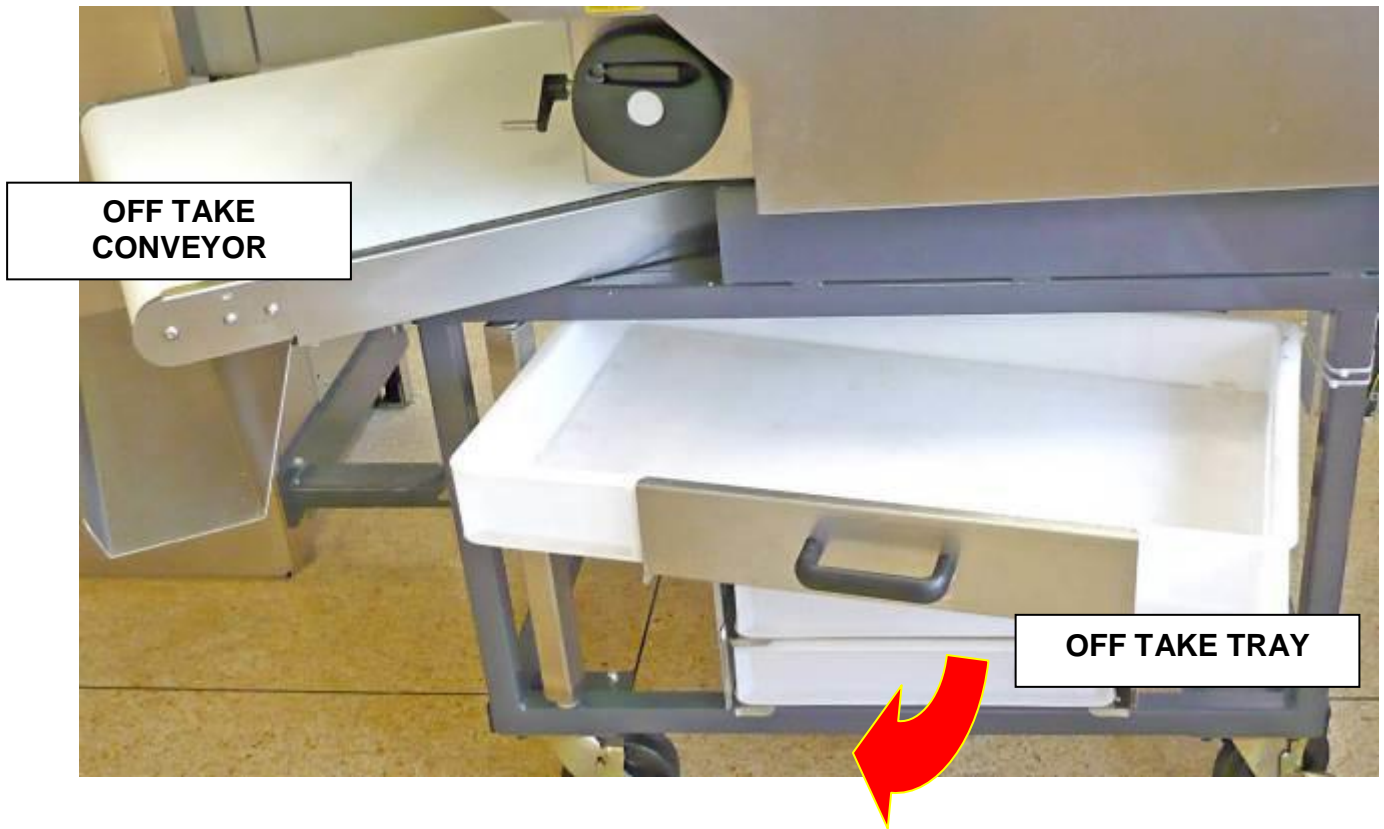

OFF TAKE TRAY

Pull out the off take tray shelf and remove the plastic tray.
Wash well and dry.
Replace.

And finally to complete "Daily Cleaning"

- Brush down all external surfaces of the machine including the stand.
- Sweep under machine to remove all debris from the floor.
- Spot clean with dampened cloth, sanitising solution and hot water, paying particular attention to handles, levers and controls.

WEEKLY CLEANING INSTRUCTIONS

AS DAILY INSTRUCTIONS AND ALSO:

1. ***Remove the moulder mains plug from the prover socket, release the brake castors and unclip the positioning locator on the base.***
2. Pull the moulder away from the prover.
- 3 Wipe the stand with a cloth dampened with sanitising solution and hot water.
- 4 Scrape and scrub the wheels on the machine.
- 5 Wipe down all external surfaces with sanitising solution and hot water.
Dry with a cloth.

8.0 OPERATION of the breadplant


THE CONTROLS EXPLAINED

Dough pieces are transferred from the divider via a chute to a carrier pocket in the prover. As dough travels down the chute and into the pocket, an electronic eye is triggered which causes the carriers to move one position ready for the next dough piece.

After two minutes of nothing passing the sensor (divider empty), a flashing light and buzzer starts to alert the operator.

The prover can then either be run in empty mode, to empty the dough to the moulder, or the divider started and the prover loading continued.

MAIN CONTROL PANEL

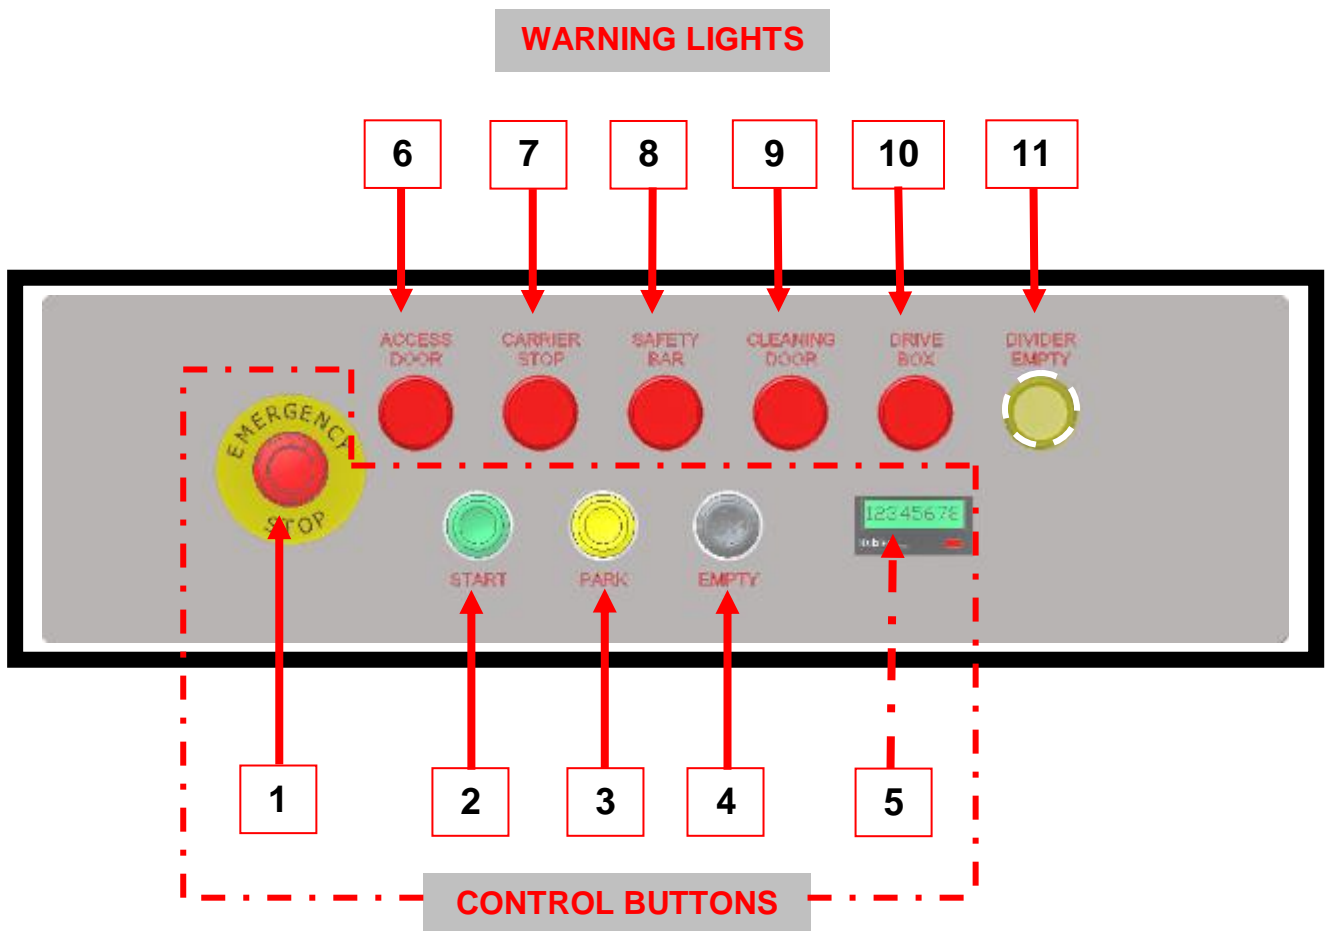

MAIN PANEL

EMERGENCY STOP (1)

Stops the prover in an emergency.
Release by pushing and turning.

NOTE. Do not use this to stop the prover except in an emergency, as dough position may cause problems.

START BUTTON (2)

Starts the prover in auto mode.

(No movement will happen until dough passes the sensor on the chute.)

PARK (3)

Use this to stop the prover carriers in the best operating position.

Always use this to stop the prover except in an emergency.

EMPTY (4)

For use when the divider has completed operation and the prover needs to continue moving to feed the moulder.

COUNTER (5)

Counts pieces of dough entering prover from divider.

Press button to reset to 0 before a production run.

NOTE. Reset is required after power is disrupted or the power is first switched on.

Warning

Avoid stopping machine with dough left in the pockets, as after a time it will adhere to the pockets and cause the machine to malfunction.

ALWAYS CHECK THE POCKETS FOR ADHERING DOUGH AND REMOVE AS SOON AS POSSIBLE. DO NOT WAIT FOR DAILY CLEANING IF IN DOUBT.

WARNING LIGHTS

ACCESS DOOR (6)

Main overhang cleaning door not positioned correctly.

CARRIER STOP (7)

Carrier stop switch activated.

Switch off power at main isolator (1).

Check for correct position of carriers in the overhang.

Dough may have caused a carrier to swing incorrectly at the turnover stage.

If removing the dough piece cannot rectify the cause, call for maintenance.

SAFETY BAR (8)

Red safety bar across lower edge of main windows has been activated.

Clear obstruction and restart prover.

CLEANING DOOR (9)

Front lower cleaning door not positioned correctly.


DRIVE BOX (10)

Check that the drive box drawer is closed.


The prover will not work unless the drawer is replaced after cleaning.

DIVIDER EMPTY (11)

After two minutes of nothing passing the sensor (divider is empty), a flashing light and buzzer starts to alert the operator.

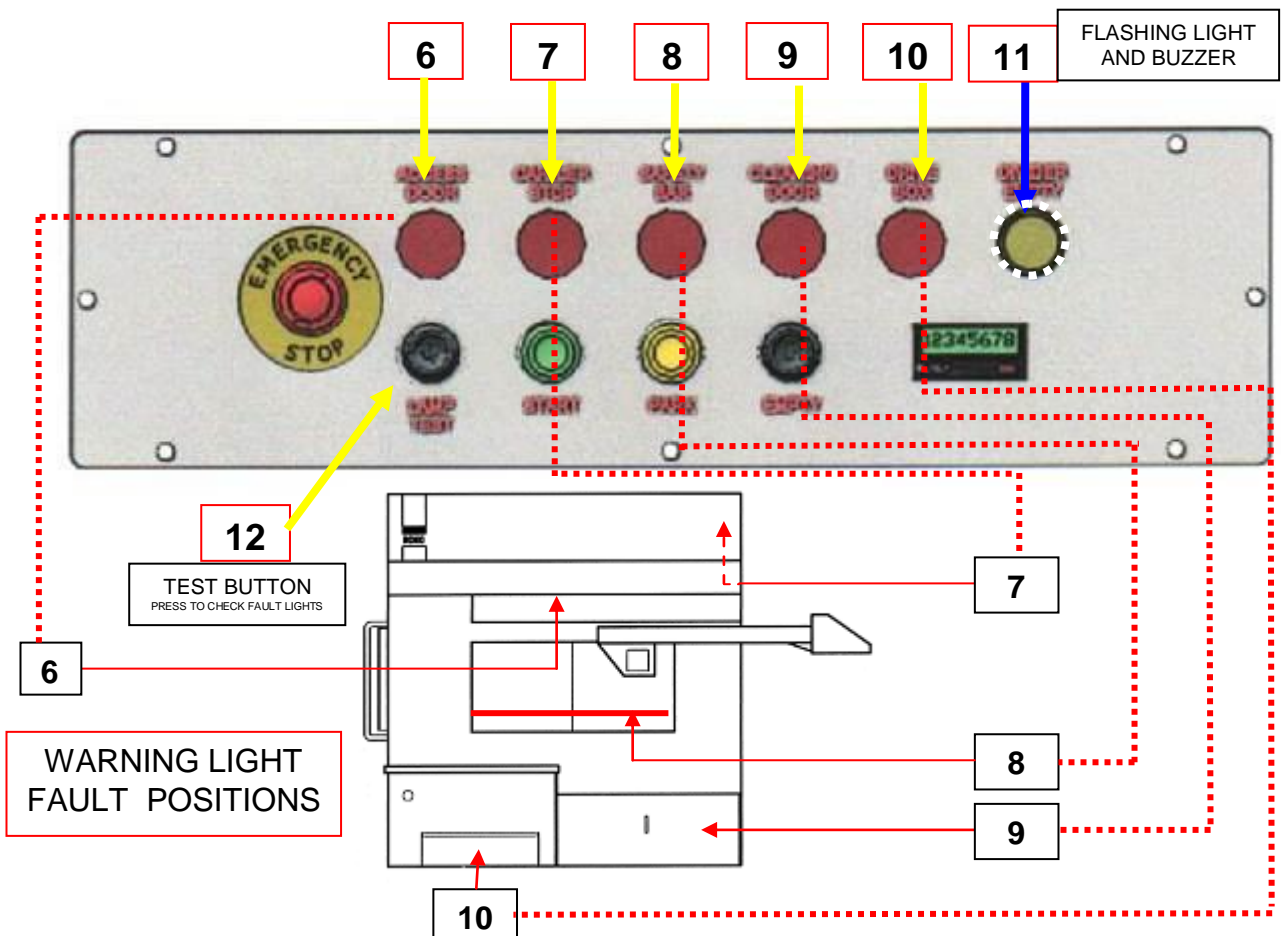

MOULDER INFEEED CONVEYOR CURLING CHAIN

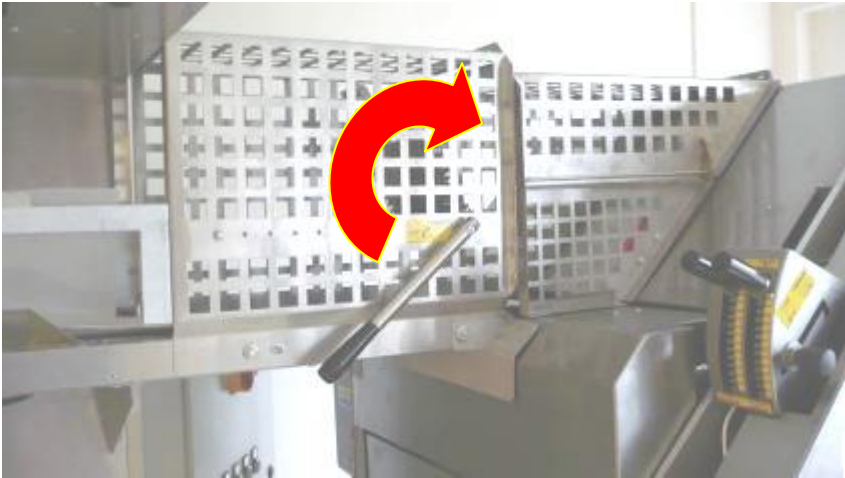

Position the curling chain lever to the required position
Either “loaf” or “French” as shown below.




FLOUR DUSTER OPERATION

TO ENSURE AN EVEN FLOW, ONLY USE CLEAN, DRY FLOUR.



DUSTER LOCATION

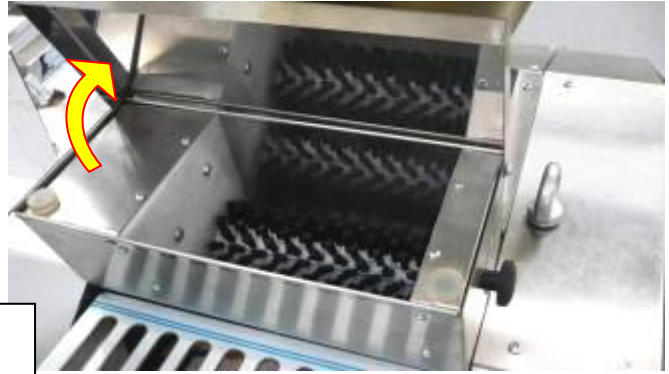

OPEN LID AND FILL WITH DRY FLOUR,
THEN CLOSE THE LID

2



TURN ON POWER WHEN REQUIRED

3



ADJUST THE FLOW BY LOOSENING THE
BLACK KNOB AND MOVING TO THE
REQUIRED POSITION. RETIGHTEN KNOB.

How to operate the FUSION BREADPLANT

1. Ensure the prover power is connected and main isolator is on.
2. Ensure that the divider is in position and plugged into the prover.
3. Ensure the moulder is in position and plugged into the prover. Adjust the moulding settings for the product required.
4. Set the moulder infeed conveyor curling chain position.(Loaf or French).
5. Press the “start” button (2) on the prover and the reset button on the counter. The prover will now be ready to receive dough.
6. Load the divider hopper with dough.
7. Start the divider (green button on divider) and adjust weights as instructed in the divider section of this manual.
8. When satisfied with the dough weights, allow the dough to enter the prover. The prover will move to the next carrier every time it senses a dough piece.
9. If the prover does not sense a dough piece for 2 minutes, the “Divider Empty” light will flash and a sounder will be heard.
10. If the divider is empty or the light is flashing, push the empty button (4) and the prover will keep moving to prove the dough and empty to the moulder.
11. When the dough reaches the moulder, the moulder will start and the moulded dough pieces should be collected and placed on trays or in tins as required.
12. If the prover needs to be stopped during operation, use the yellow “park” button (3), not the emergency stop button. This will ensure that the prover is stopped in a position that will not allow dough pieces to jam the system. The moulder and prover offtake conveyor will continue to run for 30 seconds to ensure the dough path is cleared.

NOTE

THE EMERGENCY STOP ON THE DIVIDER WILL STOP THE DIVIDER.

THE EMERGENCY STOP ON THE MOULDER WILL STOP THE MOULDER.

THE EMERGENCY STOP ON THE PROVER WILL STOP ALL MACHINES.

If emergency stop switches are activated on the divider (opening hopper guard etc), the stop reset button on the divider control panel must be pressed. If the pressure board is opened (for cleaning etc), then the emergency stop switch must be pressed, twisted to release and then the reset switch pressed.

NOTE


This section may not be correct for your model. Please contact MONO before using.

FUSION PROVER

9.0 ELECTRICAL INFORMATION SECTION




IF IN ANY DOUBT - ASK

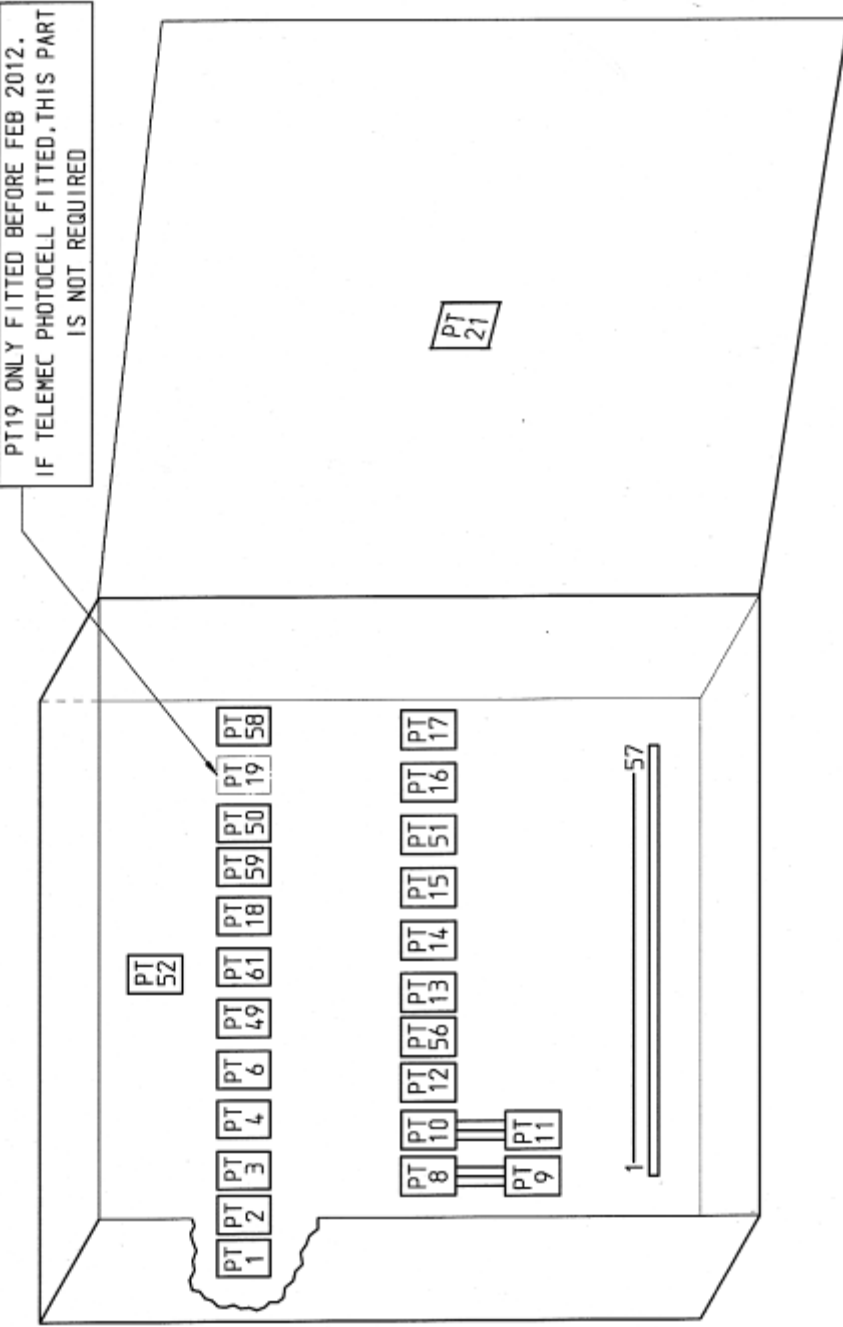

B	RAC	6-10-11	TELEMEC NOTE ADDED	216/11
A	RAC	28-4-10	PT-61 ADDED	067/10
REV	SIG	DATE	REVISION	ECN NO.
		TITLE: FUSION 2 BREAD PLANT PARK N RIDE PROVER MAIN CONTROL PANEL COMPONENT LAYOUT 1(WITH CONVEYOR)		
MONO EQUIPMENT 100 WINDYBUSH RD SWANSEA WEST IND PARK SWANSEA SA5 4EB TEL: (01792) 961234 FAX: (01792) 961016		DRAWN: ELECTRICALLY APPROVED BY:- RAC/JC		
ELECTRICAL SPECIFICATIONS:-		DATE: 11-08		
		DRAWING NO. M036E25-314.00		
		REV: B		

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

<u>DRAWING</u> PT-Ref	<u>DESCRIPTION</u>	<u>MONO</u> PART NUMBER	<u>DRAWING</u> PT-Ref	<u>DESCRIPTION</u>	<u>MONO</u> PART NUMBER
PT-1	MAIN MOTOR M.C.B.	8872-22-052	PT-26	DRIVE BOX INDICATOR LIGHT	8723-43-002
PT-2	CONVEYOR MOTOR M.C.B.	8872-22-051	PT-27	CLEANING DOOR INDICATOR LIGHT	8723-43-002
PT-3	DIVIDER SOCKET M.C.B.	8872-22-054	PT-28	SAFETY BAR INDICATOR LIGHT	8723-43-002
PT-4	MOULDER SOCKET M.C.B.	8872-22-052			
PT-6	CONTROL CIRCUIT M.C.B.	8872-22-001			
PT-8	MAIN MOTOR CONTACTOR	8801-08-033			
PT-9	MAIN MOTOR THERMAL OVERLOAD	8801-01-043			
PT-10	CONVEYOR FORWARD CONTACTOR	8801-08-033			
PT-11	CONVEYOR MOTOR THERMAL OVERLOAD	8801-01-047			
PT-12	DIVIDER SOCKET CONTACTOR	8801-08-033			
PT-13a	STOP/START RELAY	8723-37-006			
PT-13b	STOP/START RELAY BASE	8723-36-001			
PT-14a	DELAYED STOP RELAY	8723-37-006			
PT-14b	DELAYED STOP RELAY BASE	8723-36-001			
PT-15a	PHOTOCELL RELAY	8723-37-006			
PT-15b	PHOTOCELL RELAY BASE	8723-36-001			
PT-16a	AUTO RELAY N'1	8723-37-009			
PT-16b	AUTO RELAY N'1 BASE	8723-36-002			
PT-17a	AUTO RELAY N'2	8723-37-009			
PT-17b	AUTO RELAY N'2 BASE	8723-36-002			
PT-18	XENON LIGHT DELAY TIMER	8842-34-003			
PT-19	PHOTOCELL UNIT	8801-99-020			
PT-19A	PHOTOCELL REFLECTOR	8801-99-017			
PT-21a	EMERGENCY STOP BUTTON	8801-12-015			
PT-21b	CONTACT BLOCK N/C	8801-14-001			
PT-21c	*EMERGENCY STOP* BUTTON LEGEND	8801-15-003			
PT-22	START BUTTON	8801-12-002			
PT-22A	START BUTTON N/C CONTACT BLOCK	8801-14-001			
PT-22B	START BUTTON N/O CONTACT BLOCK	8801-14-004			

B	RAC	6-10-11	PT19 CHANGED, PT19A ADDED (TELEMEC)	216/11
A	RAC	10/6/10	pt 26,27,28 were 8723-43-001	091/10
REV	SIG	DATE	REVISION	ECN NO.
 MONO EQUIPMENT QUEENSWAY SWANSEA WEST IND PARK SWANSEA, SA5 4EB. TEL: (01782) 681234 FAX: (01782) 691016 Email: eng@monoequip.com			TITLE: FUSION 2 BREAD PLANT COMPONENT LIST PARK n RIDE PROVER ELECTRICALLY APPROVED BY:- RAC / JC	
ELECTRICAL SPECIFICATIONS:-			DATE:	01-10
			DRAWING NO.	SHT 1 OF 2
				M036E25-31300
			REV:	B

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, OR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.


<u>DRAWING</u> PT-Ref	<u>DESCRIPTION</u>	<u>MONO</u> PART NUMBER	<u>DRAWING</u> PT-Ref	<u>DESCRIPTION</u>	<u>MONO</u> PART NUMBER
PT-29	CARRIER STOP INDICATOR LIGHT	8723-43-002	PT-46	DIVIDER SOCKET	8883-06-007
PT-30	ACCESS DOOR INDICATOR LIGHT	8723-43-002	PT-47	MOULDER SOCKET	8883-06-007
PT-31	MAIN MOTOR (up to March 2011)	8917-74-008	PT-49	SINGLE PHASE SOCKET M.C.B.	8872-22-004
PT-31	MAIN MOTOR (after March 2011)	8917-74-032	PT-50	AUTO DELAY TIMER	8842-34-003
PT-33	DRIVE BOX SAFETY SWITCH	8818-07-010	PT-51	INDEX RELAY	8723-37-006
PT-34	SINGLE PHASE SOCKET OUTLET	8835-06-001	PT-53	PHOTOCELL UNIT (UP TO FEB2012)	8822-99-003
PT-35	INDEX SWITCH	8801-11-001	PT-52	MAIN PANEL DOOR INTERLOCK SWITCH	8723-07-001
PT-36	CLEANING DOOR SAFETY SWITCH	8818-07-010	PT-56	MOULDER CONTACTOR	8801-08-033
PT-37	SAFETY BAR SAFETY SWITCH	8801-11-001	PT-58	START RELAY	8723-37-009
PT-38	AUDIO/VISUAL ALARM	8723-92-004	PT-58B	START RELAY BASE	8723-36-002
PT-39a	CARRIER STOP SAFETY SWITCH BODY	8801-11-005	PT-59	CONVEYOR/MOULDER RUN ON TIMER	8842-34-003
PT-39b	CARRIER STOP SWITCH ACTUATOR	8801-45-001	PT-60	COUNTER	8842-34-011
PT-40a	REMOTE EMERGENCY STOP BUTTON	8801-12-015	PT-61	RUN ON PULSE TIMER	8842-34-003
PT-40b	CONTACT BLOCK N/C	8801-14-001	PT-62A	TEST LAMP BUTTON	8801-12-021
PT-41a	REMOTE DELAYED STOP BUTTON	8801-12-001	PT-62B	CONTACT BLOCK	8801-14-005
PT-41b	CONTACT BLOCK N/C	8801-14-001			
PT-41c	CONTACT BLOCK N/O	8801-14-002			
PT-42a	EMPTY BUTTON	8801-12-021			
PT-42b	CONTACT BLOCK N/C	8801-14-001			
PT-44	CONVEYOR MOTOR	8912-74-030			
PT-45	ACCESS DOOR SAFETY SWITCH	8818-07-010			

NOTE (FROM MARCH 2011)
PT-31 SPARES ORDERS WILL NEED TO USE KIT No. M036-KSX010 TO CONVERT FROM OLD MAIN MOTOR TO THE NEW TYPE


D	RAC 6-10-11	PT-53 NOT USED WITH TELEMEC PHOTOCELL	216/11
C	RAC 4/5/11	PT-31 CHANGED FROM 05-2011	283/10
B	RAC 10/6/10	PT62A & B ADDED PT29 WAS 8723-43-001, PT30 WAS 8801-43-812	091/10
A	RAC 24/4/10	PT-61 ADDED	067/10
REV	SIG	DATE	ECN NO.
MONO EQUIPMENT QUEENSWAY SWANSEA WEST IND PARK SWANSEA, SA5 4EB. TEL: (01782) 581234 FAX: (01782) 581016 Email: engineering@monoequip.com			
MONO			
ELECTRICAL SPECIFICATIONS:- DRAWN: RAC/JC DATE: 01-10 ELECTRICALLY APPROVED BY:-			
TITLE: FUSION 2 BREAD PLANT COMPONENT LIST PARK n RIDE PROVER			
DRAWING NO. M036E25-31300 SHT 2 OF 2 REV: D			

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

AFTER FEB 2012

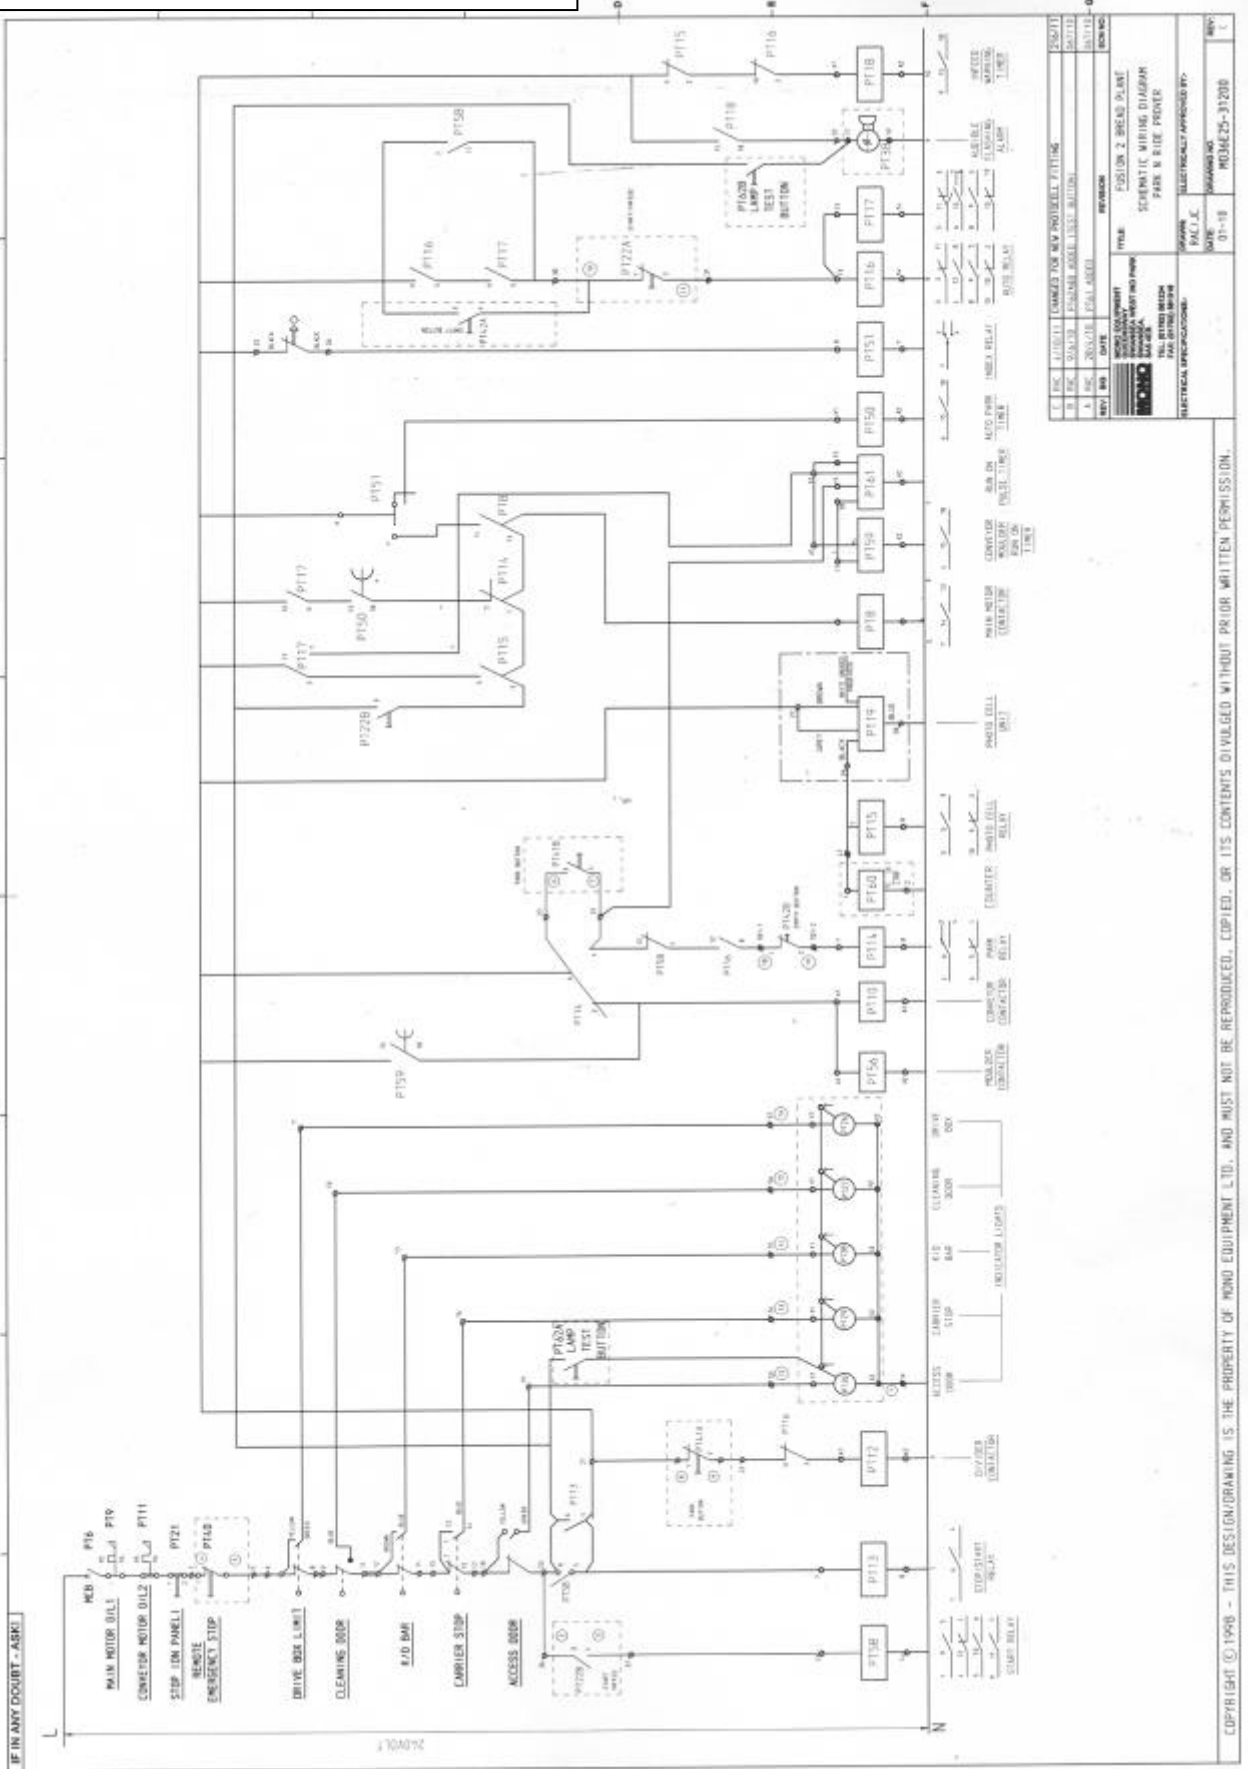

UP TO FEB 2012

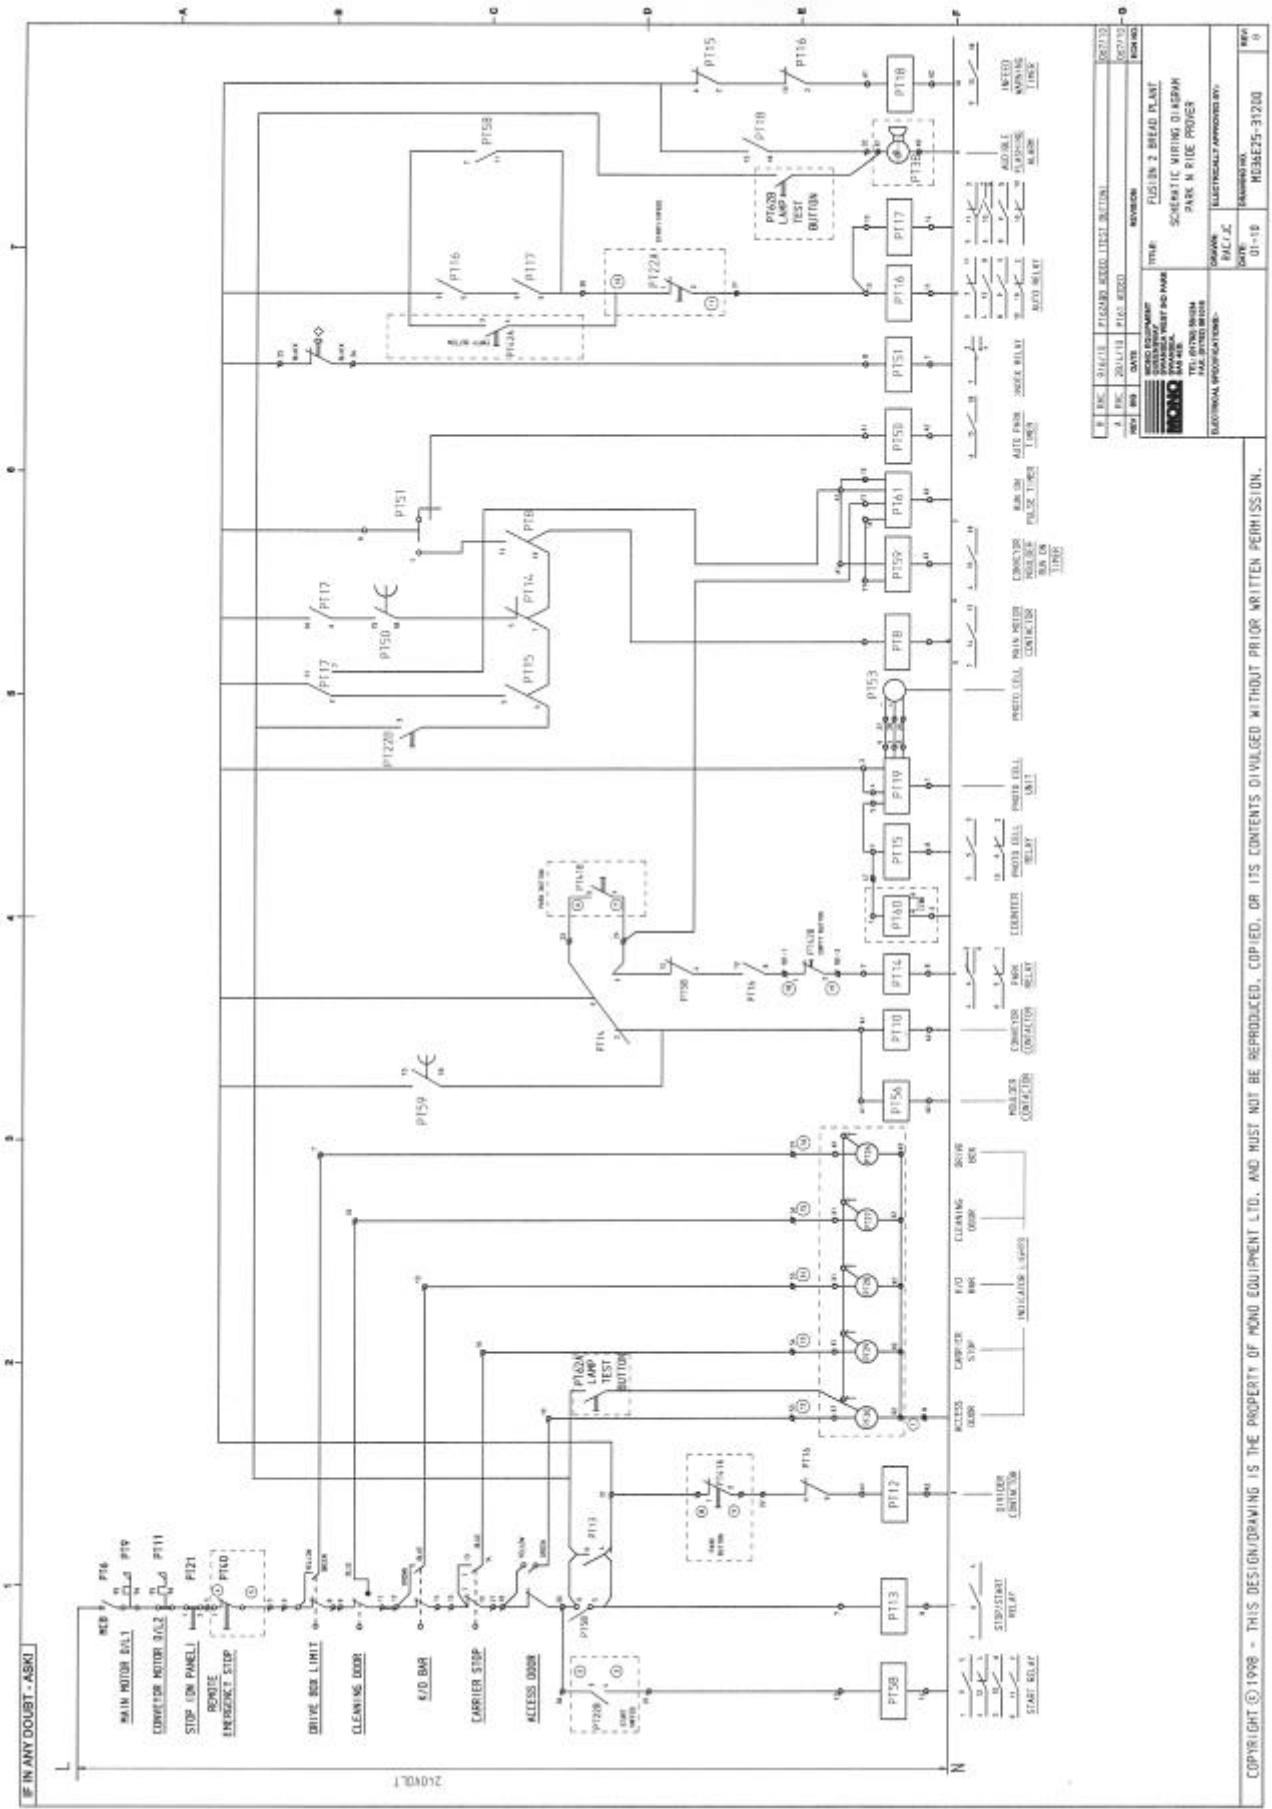


REV	DATE	DESCRIPTION	BY	CHKD
1	20/11/13	FUSION 2 BREAD PLANT SCHEMATIC WIRING DIAGRAM	PARK	N RICE
2	20/11/13	FUSION 2 BREAD PLANT SCHEMATIC WIRING DIAGRAM	PARK	N RICE
3	20/11/13	FUSION 2 BREAD PLANT SCHEMATIC WIRING DIAGRAM	PARK	N RICE

DRAWN BY: P1/C.J.C.		CHECKED BY: P1/C.J.C.	DATE: 01/10/13	PROJECT: HSE235-31200
ELECTRICALLY APPROVED BY: _____				

REV	NO.	DATE
1	9	05/12/10

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MOND EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, OR ITS CONTENTS DISCLOSED WITHOUT PRIOR WRITTEN PERMISSION.


IF IN ANY DOUBT - ASK

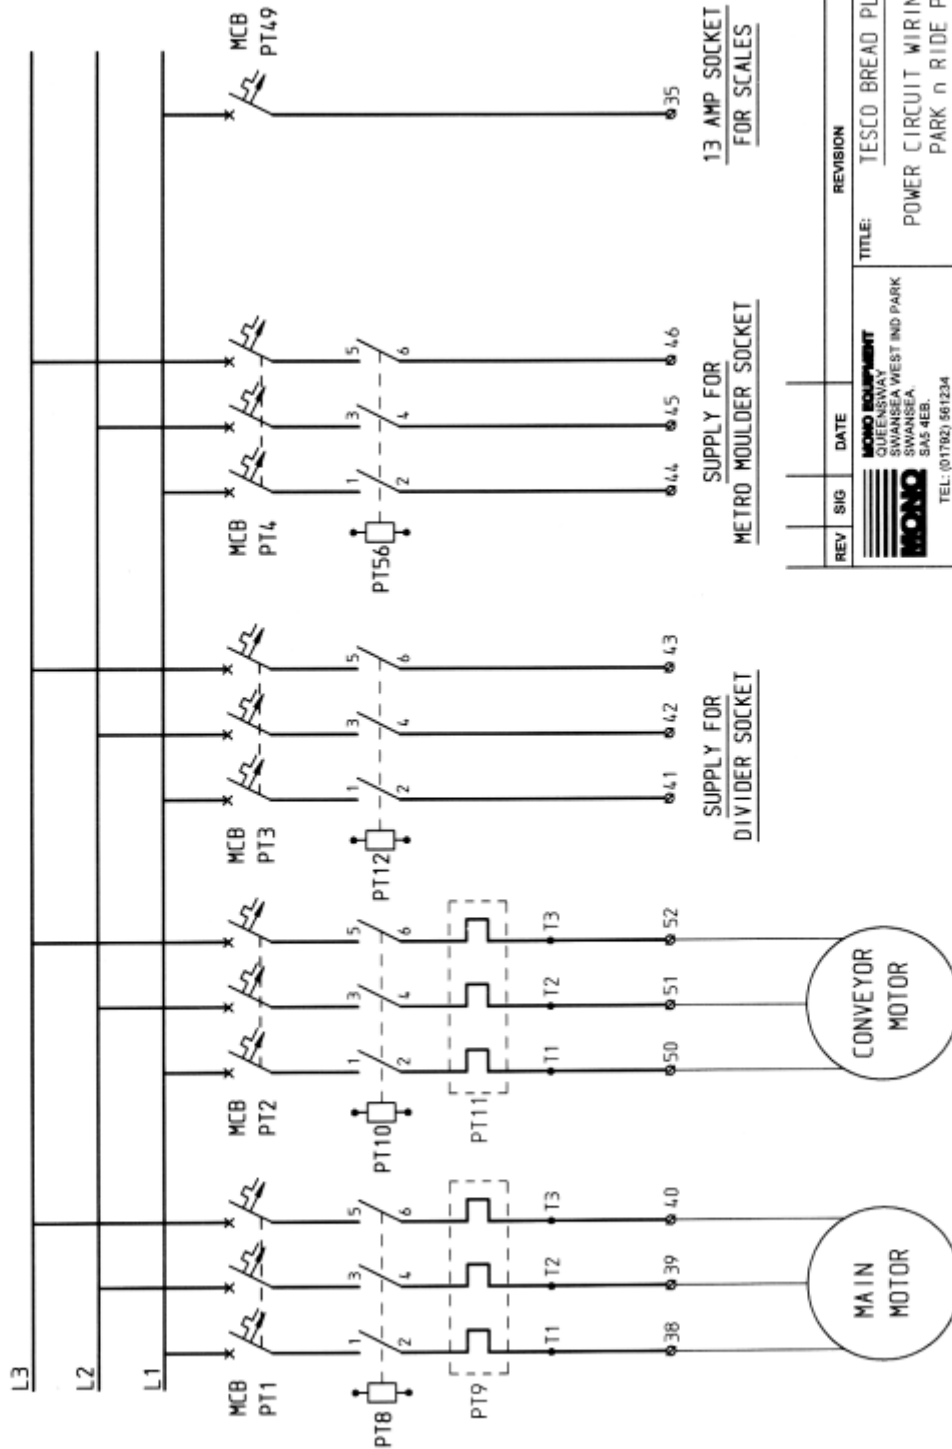

REV	SIG	DATE	REVISION	ECN NO.
			TESCO BREAD PLANT	
MNO EQUIPMENT 1000000000 SWANSEA WEST IND PARK SWANSEA, SA5 4EB TEL: (01792) 561234 FAX: (01792) 561016				
ELECTRICAL SPECIFICATIONS:-			DRAWN: RAC/JC	ELECTRICALLY APPROVED BY:-
			DATE: 11-08	DRAWING NO. M036E25-30500
				REV: —

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MNO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.





REAR VIEW OF PANEL

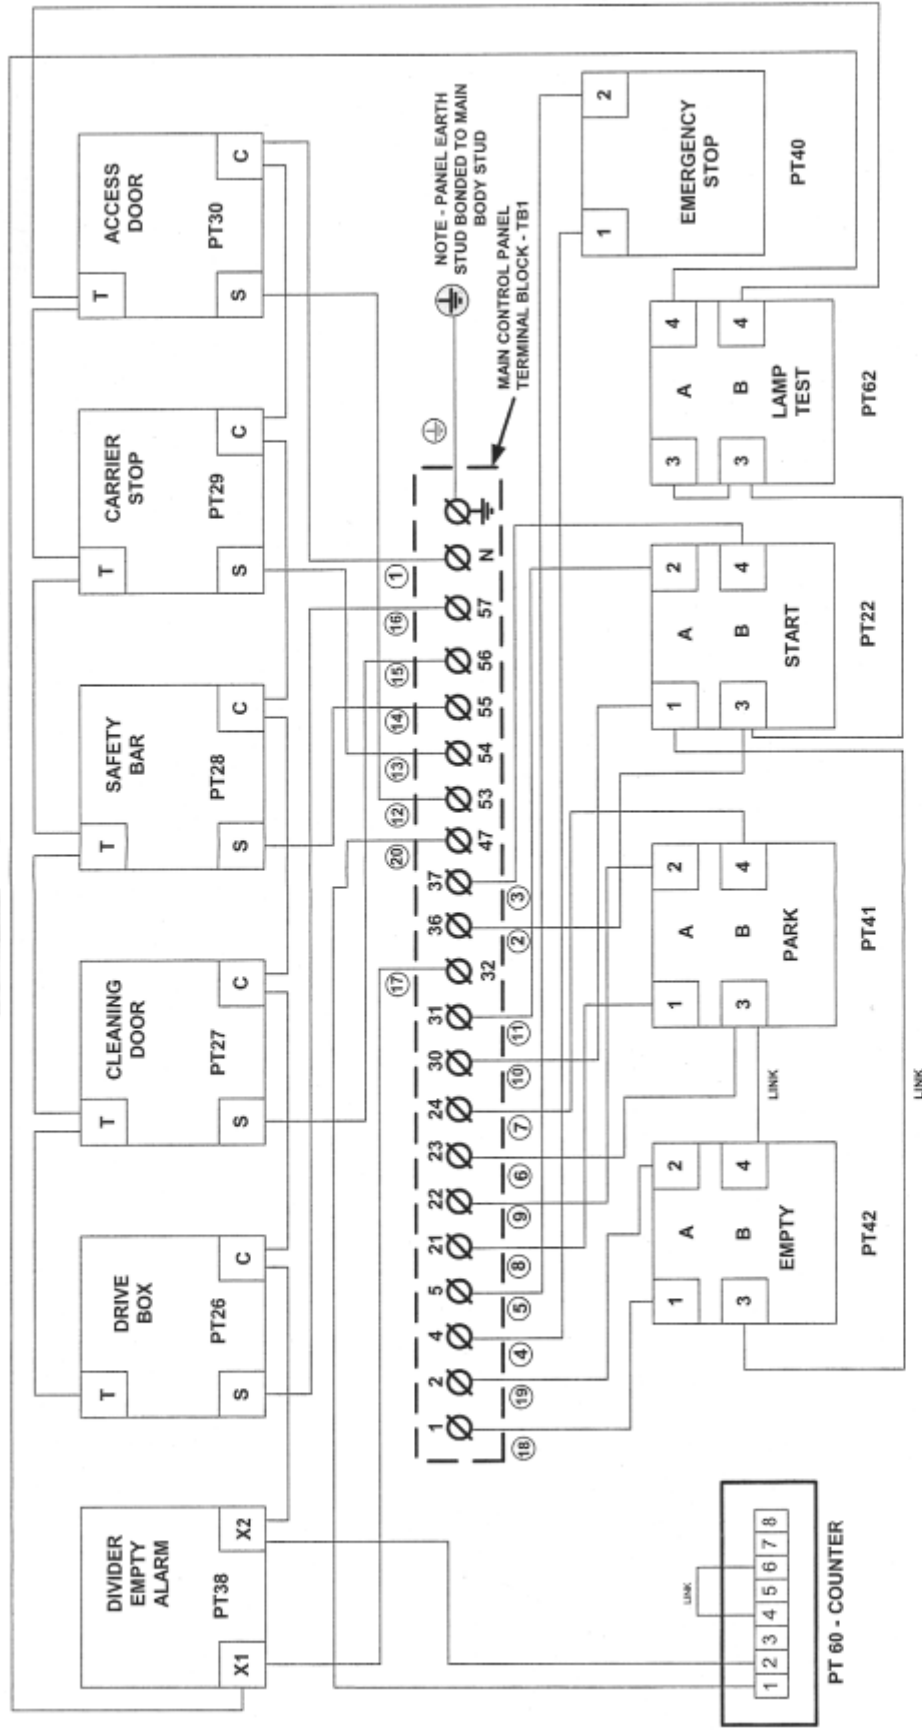


 ELECTRICAL SUPPLIES 1000 WOODWAY MAYAGUEZ, P.R. 00854 TEL: (787) 842-2444 FAX: (787) 842-2444 Email: info@mono-pr.com	TITLE	TESCO FUSION 2 REMOTE CONTROL PANEL WIRING WITH LAMP TEST BUTTON	
	DRAWN	ADT	ELECTRICALLY APPROVED BY:
	DATE	13/1/10	DRAWING NO.
ELECTRICAL SPECIFICATIONS:		REV: B	
230 VOLT CONTROL CIRCUIT			

NOTE - ① - ② DENOTES MULTICORE CABLE CORE NUMBERS
CABLE - 21 CORE 0.5MM² - B843-57-020
CABLE LENGTH - 4 M FROM CABLE ENTRY GLAND

IF IN ANY DOUBT - ASK

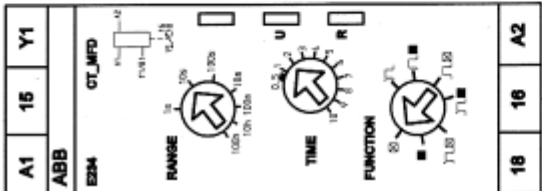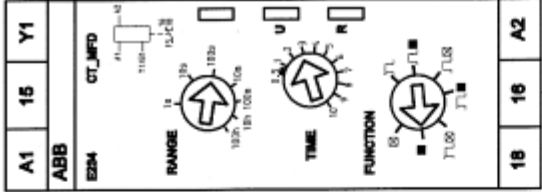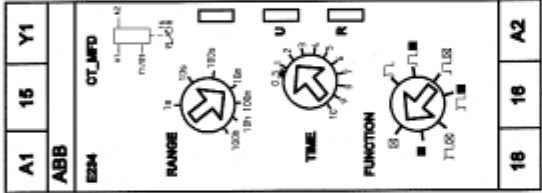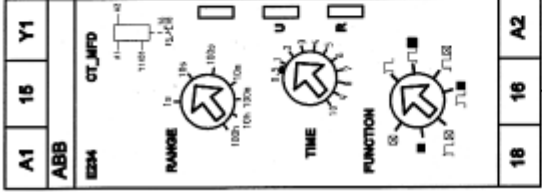


TELEMEC
AFTER FEB. 2012



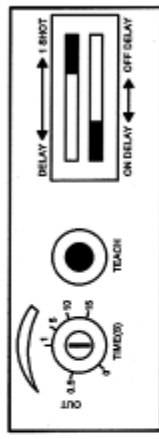


PHOTCELL SETTINGS

PRE TELEMEC
UP TO FEB. 2012

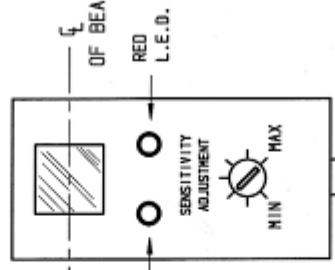

PHOTCELL SENSITIVITY ADJUSTMENT
WHEN ALIGNING REFLECTOR
TO PHOTOCCELL UNIT
ENSURE BOTH RED AND GREEN
L.E.D.'S ARE ILLUMINATED.
NOTE REFLECTOR CAN BE
MOVED VERTICALLY.

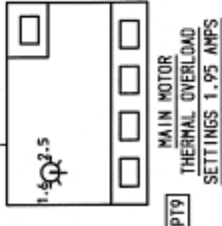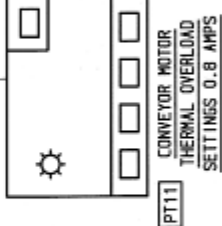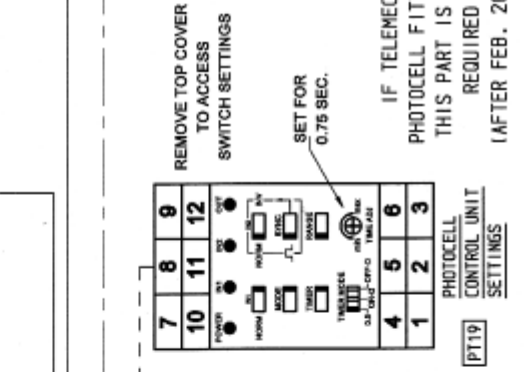


REV	SIG	DATE	REVISION	ECN NO.
C	RAC	06-10-11	TELEMEC SETTING ADDED	216/11
B	RAC	29-11-10	TIMERS VISUALLY CHANGED	223/10
A	RAC	28-4-10	PT-61 ADDED	067/10


<p>MONO EQUIPMENT QUEENSWAY SWANSEA WEST IND PARK SWANSEA, SAS-4EB. TEL: (01792) 591234 FAX: (01792) 591016</p>	<p>TITLE: FUSION 2 BREAD PLANT CONTROL UNITS ADJUSTMENTS PARK N RIDE PROVER (WITH CONVEYOR IF FITTED)</p>
ELECTRICAL SPECIFICATIONS:-	
<p>DRAWN: RAC/JC</p>	<p>ELECTRICALLY APPROVED BY:-</p>
<p>DATE: 01-10</p>	<p>DRAWING NO. SH1 1 of 2 M036E25-31500</p>
<p>REV: C</p>	

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED. COPIED.
NUR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

IF IN ANY DOUBT - ASK

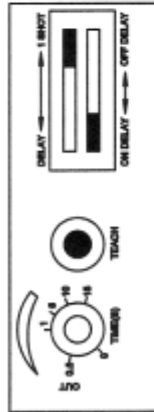


MOULDER INFEED PHOTOCELL SETTINGS

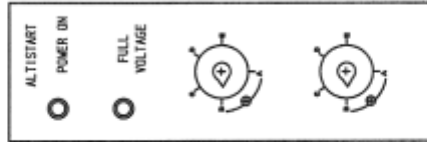

MOULDER SOFT START SETTINGS

REV	SIG	DATE	REVISION	ECH NO.
			FUSION 2 BREAD PLANT	
			CONTROL UNITS ADJUSTMENTS	
			PARK N RIDE PROVER (WITH CONVEYOR)	
<p>MONO EQUIPMENT QUEENSWAY SWANSEA WEST IND PARK SWANSEA, SAS 4EB. TEL: (01792) 581234 FAX: (01792) 061010</p>			<p>DRAWN: RAC / JC</p> <p>DATE: 01-10</p> <p>DRAWING NO. M036E25-31500</p> <p>SHT 2 of 2</p>	
ELECTRICAL SPECIFICATIONS:-			ELECTRICALLY APPROVED BY:-	

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

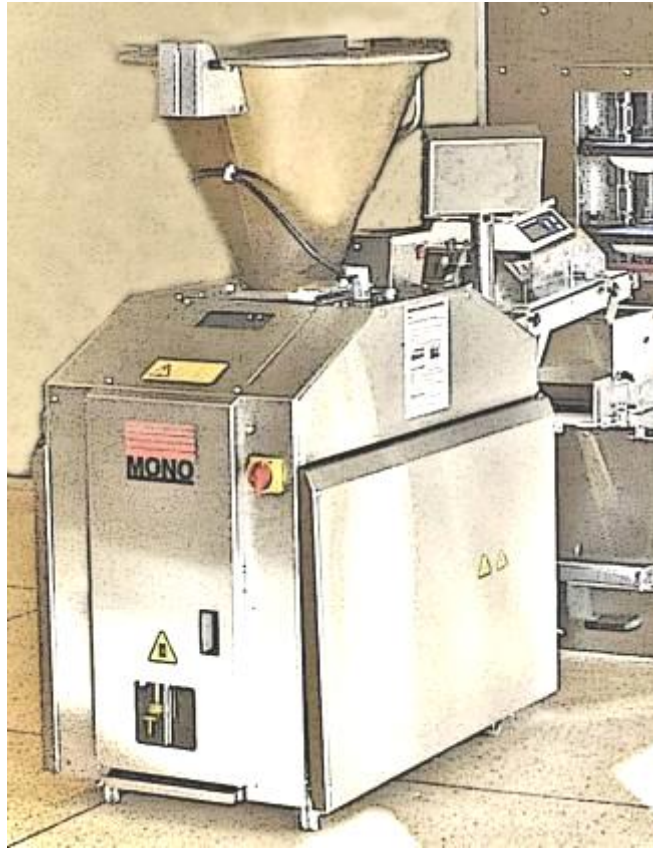

FULL OPERATING AND MAINTENANCE
MANUAL
FOR THE
FUSION BREADPLANT DIVIDER

IMPORTANT NOTES

- **FAILURE TO KEEP TO THE CLEANING AND MAINTENANCE INSTRUCTIONS DETAILED IN THIS MANUAL COULD AFFECT THE WARRANTY and SAFETY OF THIS MACHINE**

**○ WARNING! --- DIVIDER OIL
NOT USE ORDINARY VEGETABLE OIL FROM SHOP SHELVES, IN
THE DIVIDER.**

*THIS WILL FORM A GUM-LIKE RESIDUE,
CAUSING STICKING AND POSSIBLE DAMAGE TO THE MACHINE.*

MONO RECOMMENDS THE USE OF “CRODA SUPER WUNDROL”
(AVAILABLE FROM MONO. PART NUMBER “A900-25-272”)

CONTENTS – DOUGH DIVIDER


1.0 Introduction	page 52
2.0 General Dimensions	page 53
3.0 Specifications	page 53
4.0 Safety	page 54
5.0 Installation	page 55
6.0 Isolation	page 57
7.0 Cleaning Instructions	page 58
• Daily	page 58
• Weekly	page 62
8.0 Operating Machine	page 63
9.0 Maintenance	page 66
11.0 Troubleshooting	page 68
11.0 Spares and Service Information	page 75
12.0 Electrical Information Section	page 76

1.0 INTRODUCTION

THE MONO DIVIDER is accurate, reliable and compact.

- It has a large capacity hopper, simple controls and adjustments.
- The in-line discharge gives a very compact machine.
- The dough divider has the capacity to accurately scale dough pieces, Between 8oz (250g) and 36 oz (1000g).


THE DIVIDING PROCESS

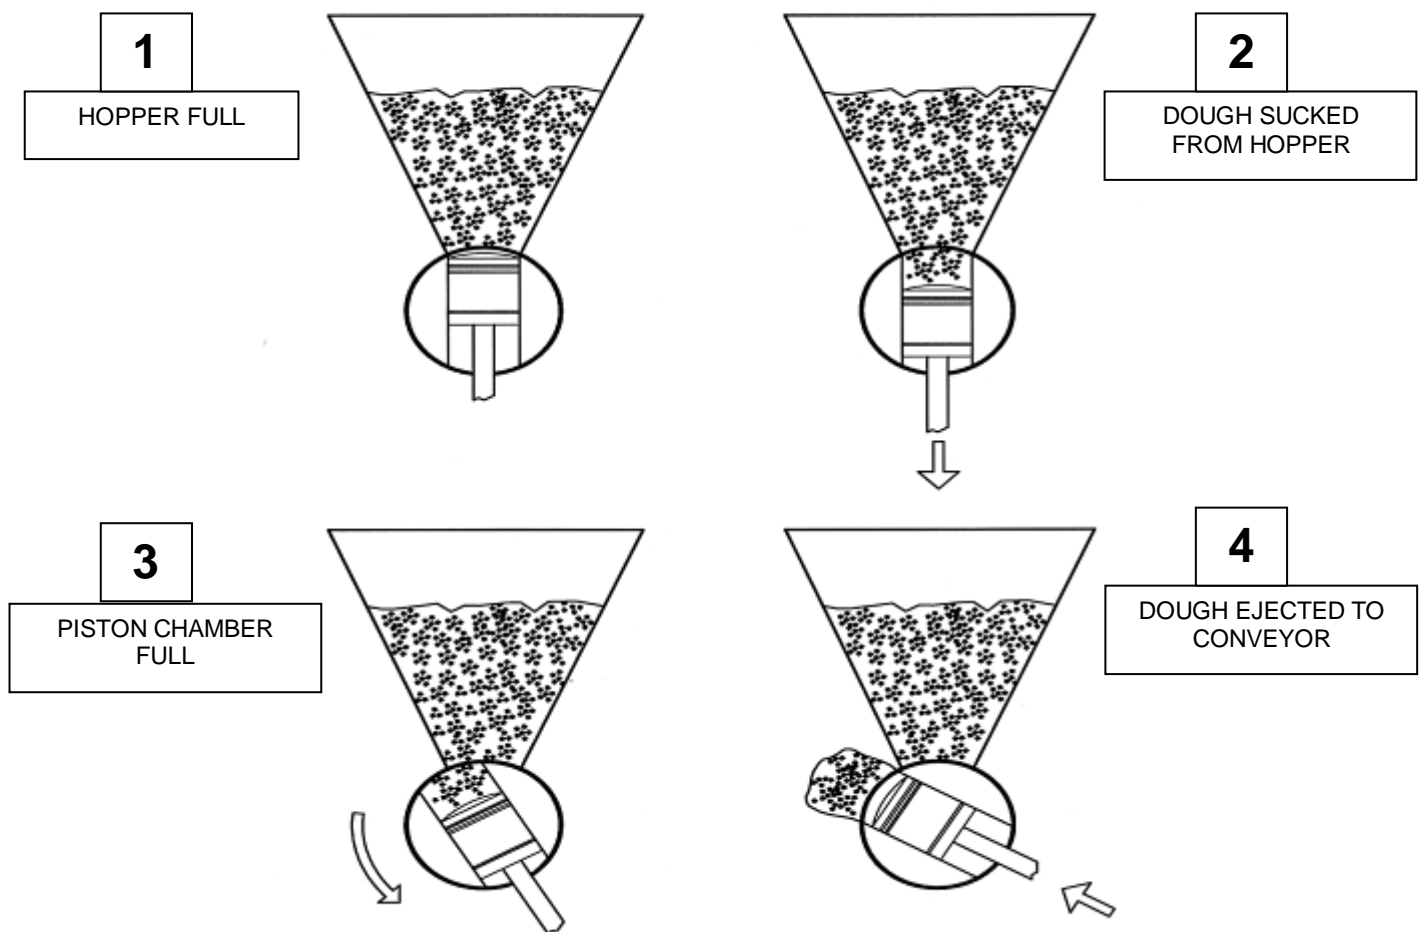

NOTE

THE DIVIDER WORKS ON VOLUME NOT WEIGHT.

2.0 GENERAL DIMENSIONS

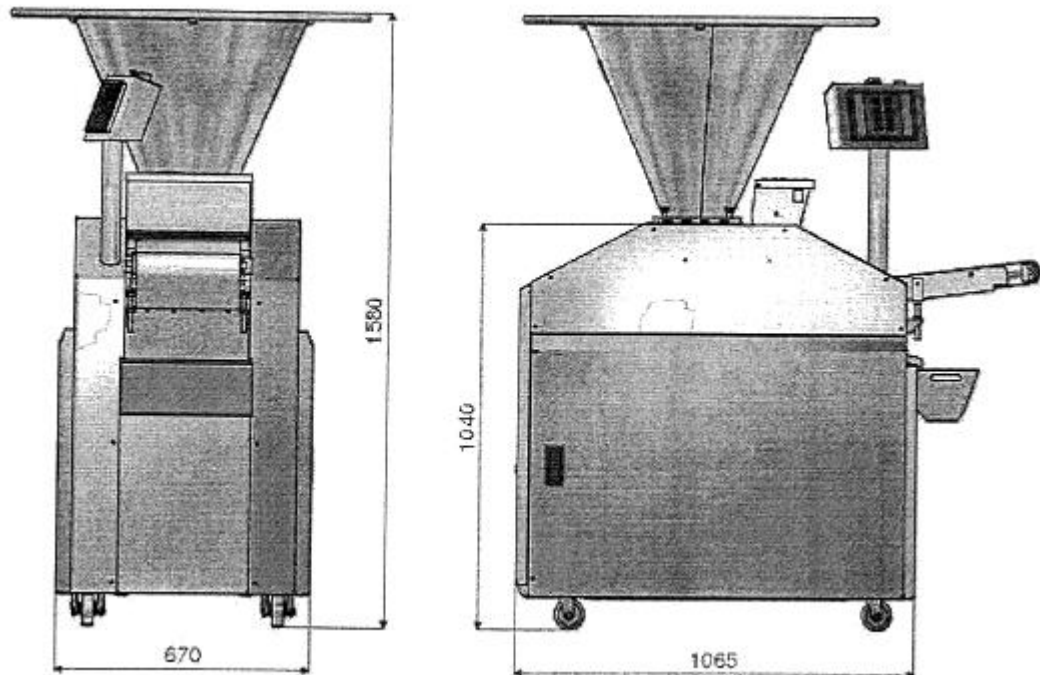

Height: 1580mm.

Depth: 1065mm. (inc. conveyor 1400mm)

Width: 670mm.

3.0 SPECIFICATIONS

Total power: 3.2kW, three phase + N + E, 415v /50Hz

Capacity: Accurately scaled dough pieces,
between 250g and 1000g (8oz - 36oz).

Weight: 500kg.

Noise Level: Less than 85dB.

4.0 SAFETY

- 1 **Never use a machine in a faulty condition** and always report any damage.
- 2 **Only trained engineers may remove any part** that requires a tool to do so.
- 3 **People undergoing training on the machine must be under direct supervision** of a fully trained person.
- 4 **Use of the machine can prove dangerous** if:
 - ❑ The machine is operated by untrained or unskilled staff
 - ❑ The machine is not used for its intended purpose
 - ❑ The machine is not operated correctly
- 5 **Always ensure hands are dry before touching any electrical appliance** (Including cable, switches and plugs).
- 6 **Do not operate the machine with any panels or guards removed.**
 - ❑ *All safety devices applied to the machine during manufacture and the operating instructions in this manual are required to operate this machine safely. The owner and the operator are responsible for operating this machine safely.*

- ❑ **DO NOT TRY TO DISABLE ANY SAFETY DEVICES,**
- ❑ **THEY ARE FITTED FOR YOUR SAFETY.**

- 7 **NEVER** move machinery by pulling on the power cords or cables.
- 8 **No loose clothing or jewellery** should be worn while operating the machine
- 9 **The bakery manager or the bakery supervisor must carry out daily safety checks** on the machine.
- 10 **No one under the age of 16 may operate** this machine.
- 11 **No-one under the age of 18 may clean** this machine under any circumstances.
- 12 **DO NOT STAND ON ANYTHING TO LOAD THE DIVIDER HOPPER.**

WARNING:

NEVER LEAVE MACHINE WITH DOUGH IN
AS PRESSURES BUILD UP AS THE DOUGH PROVES.

**ALL CLEANING AND MAINTENANCE OPERATIONS MUST BE MADE WITH THE DIVIDER
DISCONNECTED FROM THE POWER SUPPLY.**

5.0 INSTALLATION

DO NOT ATTEMPT TO LIFT THE DIVIDER BY HUMAN FORCE

- Use of a **forklift or crane** is recommended for lifting, or the machine can be pushed into position on the castors provided.
- **To lift with a forklift** - the machine must be secured to a pallet.
- **To lift with a crane** - lifting eyes are provided .



LIFTING EYES

Check that the power rating on the serial number plate matches the supply that the machine is to be connected to.

- The Dough Divider should be connected to the location socket on the prover drive box front.
- Connect the divider to the correct position with the prover and insert keeper pin to hold.

DIVIDER POWER SOCKET



DIVIDER BODY

DIVIDER CONNECTER PIN

- ❑ Connect the electrical cable to the socket on the prover drive box front or power socket on the wall if not being used as part of a bread plant.
- ❑ Check machine after installation to ensure the belt moves in the correct direction indicated (see arrow in photo below).

*(If wrong - swap positions of any two of the three phase carrying wires in the plug.
With a plant this should be factory set and not need to be done)*




- ❑ Fill oil tank to 2/3 level, with your company recommended food safe oil.

○ WARNING!

DO NOT USE ORDINARY VEGETABLE OIL FROM SHOP SHELVES, IN THE DIVIDER
THIS WILL FORM A GUM-LIKE RESIDUE,

- ❑ *CAUSING STICKING AND POSSIBLE DAMAGE TO THE MACHINE.*
MONO RECOMMENDS THE USE OF “**CRODA SUPER WUNDROL**”
(AVAILABLE FROM MONO. PART NUMBER “**A900-25-272**”)

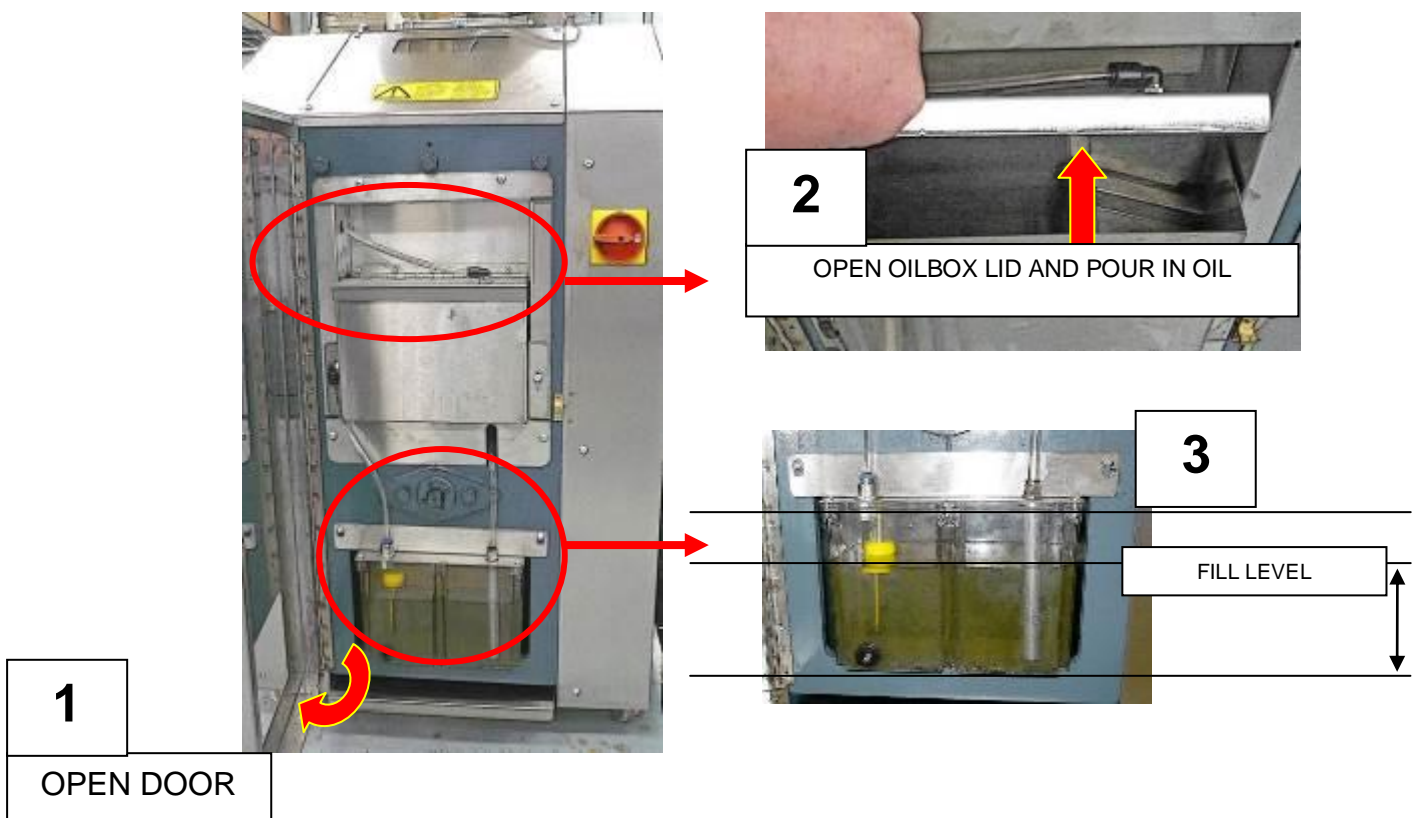

6.0 ISOLATION

TO STOP THE DOUGH DIVIDER IN AN EMERGENCY,
Switch off at the PLANT MAIN ISOLATOR or use plant EMERGENCY BUTTON

OR

DIVIDER MAIN ISOLATOR



The DIVIDER EMERGENCY STOP BUTTON.



**EMERGENCY STOP BUTTON
(TWIST TO RELEASE)**



7.0 CLEANING INSTRUCTIONS

DAILY

NOTE:

ISOLATE MACHINE FROM DIVIDER SUPPLY BEFORE CLEANING.

- CLEANING SHOULD ONLY BE CARRIED OUT BY FULLY TRAINED PERSONNEL
- DO NOT USE A HIGH PRESSURE WASHER
- DO NOT USE SOLVENTS OF ANY KIND
- KEEP CLEANING FLUIDS AWAY FROM ELECTRICAL SWITCHES

- 1 Remove the dough residue from interior of the hopper.
(Only use **plastic scraper**)
- 2 Smear interior of the hopper with divider oil.
- 4 Check oil level is correct. (see next page).

Then run the machine for a minute, using on/off buttons.
(*This will stop the machine from seizing up by coating the drum with oil*)

NOTE:

**THE ABOVE STEPS MUST BE FOLLOWED DAILY,
OTHERWISE IT WILL LEAD TO THE BUILD UP OF STARCH
AND SEIZURE OF THE MACHINE.**


OIL LEVEL CHECKING

- Fill oil tank to 2/3 level, with your company recommended food safe oil.

○ WARNING!
DO NOT USE ORDINARY VEGETABLE OIL FROM SHOP SHELVES, IN THE DIVIDER
THIS WILL FORM A GUM-LIKE RESIDUE,
CAUSING STICKING AND POSSIBLE DAMAGE TO THE MACHINE.

MONO RECOMMENDS THE USE OF “CRODA SUPER WUNDROL”
(AVAILABLE FROM MONO. PART NUMBER “A900-25-272”)

2

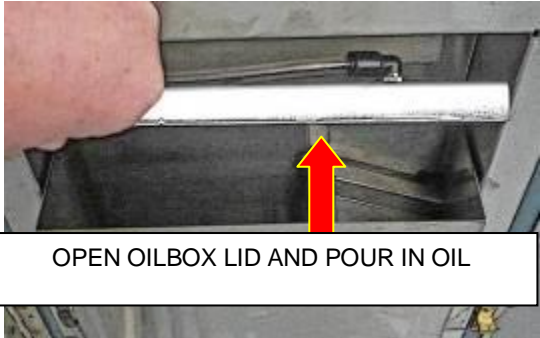


1
OPEN DOOR



3
FILL LEVEL



❑ OFF TAKE CLEANING

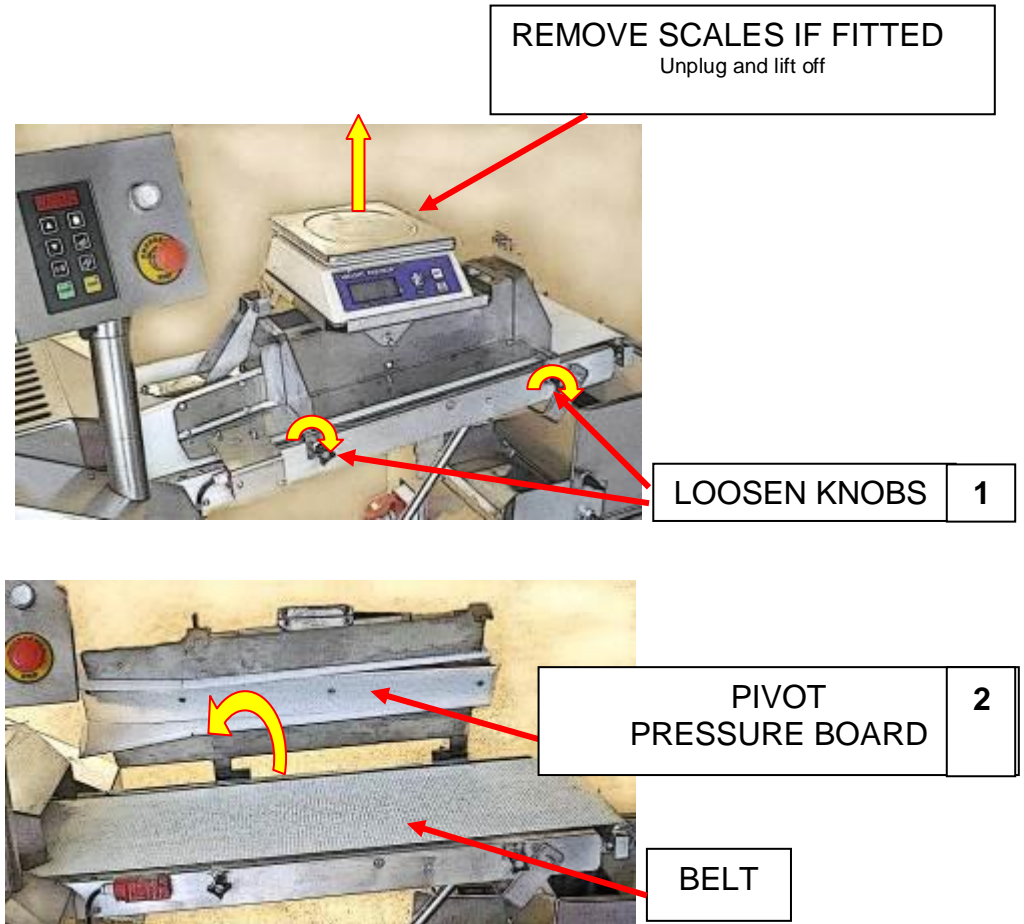


- 1 Unplug and remove the scales.
- 2 Loosen the two black knobs on the side of the pressure board.
- 3 Pivot the pressure board away from you.
Help may be required to hold the pressure board while cleaning takes place.
- 4 Remove any dough residue and brush exposed parts.
- 5 Scrape and wipe down the belt. (Only use **plastic scraper**).
- 6 Remove any dough residue from the conveyor metal work and belt surface.
- 7 Lower the pressure board and tighten the two black knobs on the side of the pressure board.
- 8 Replace and plug in the scales.

□ **EXTERNAL CLEANING**


- 1 Brush off any flour residue and scrape as necessary. (Only use **plastic scraper**)
- 2 Brush off loosened dough.
- 3 Make up sterilising solution and hot water.
- 4 Clean the exterior of the divider as necessary, working from top to bottom.
- 5 Swab dry with disposable tissue.

□ **UNDER CONVEYOR COLLECTION BOX**

- 1 Brush the chute debris into the collection box.

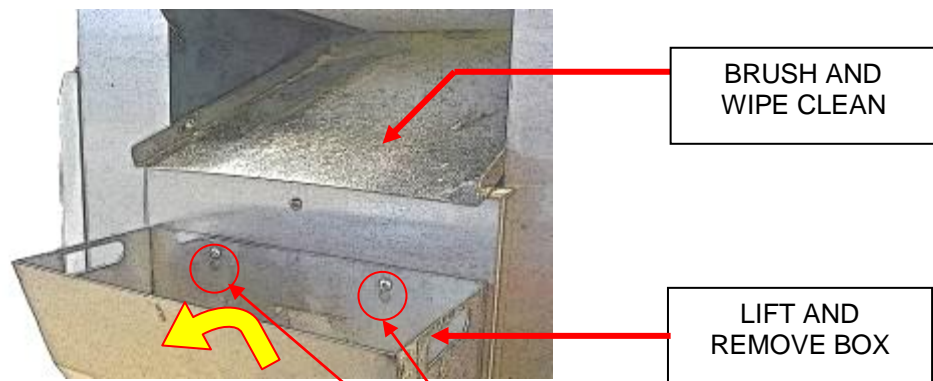

- 2 Lift and remove the collection box and clean.
- 3 Replace the collection box, making sure it is pushed right down on locating screws.

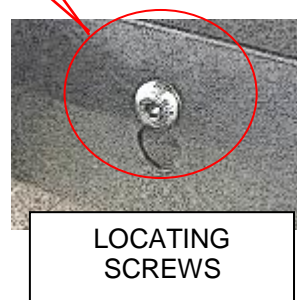

WEEKLY

NOTE:

CLEANING SHOULD ONLY BE CARRIED OUT BY FULLY TRAINED PERSONNEL

**WARNING:
ISOLATE MACHINE FROM MAINS SUPPLY**

1. Scrub wheels with a small nylon cleaning brush or scouring pad and hot water sterilising solution.
2. Clean entire exterior surfaces of the machine working from top to bottom.

OPERATING


- 1 Check intermediate prover is switched on.
Press **START BUTTON (2)** on prover control panel .
This starts the prover in auto mode.
(No movement will happen until dough passes the sensor on the chute.)
- 2 Check that the hopper is clear of objects and Smear interior with divider oil.

○ WARNING!

DO NOT USE ORDINARY VEGETABLE OIL FROM SHOP SHELVES, IN THE DIVIDER
*THIS WILL FORM A GUM-LIKE RESIDUE,
CAUSING STICKING AND POSSIBLE DAMAGE TO THE MACHINE.*

MONO RECOMMENDS THE USE OF "CRODA SUPER WUNDROL"
(AVAILABLE FROM MONO. PART NUMBER "A900-25-272")

CONTROL POD BUTTONS

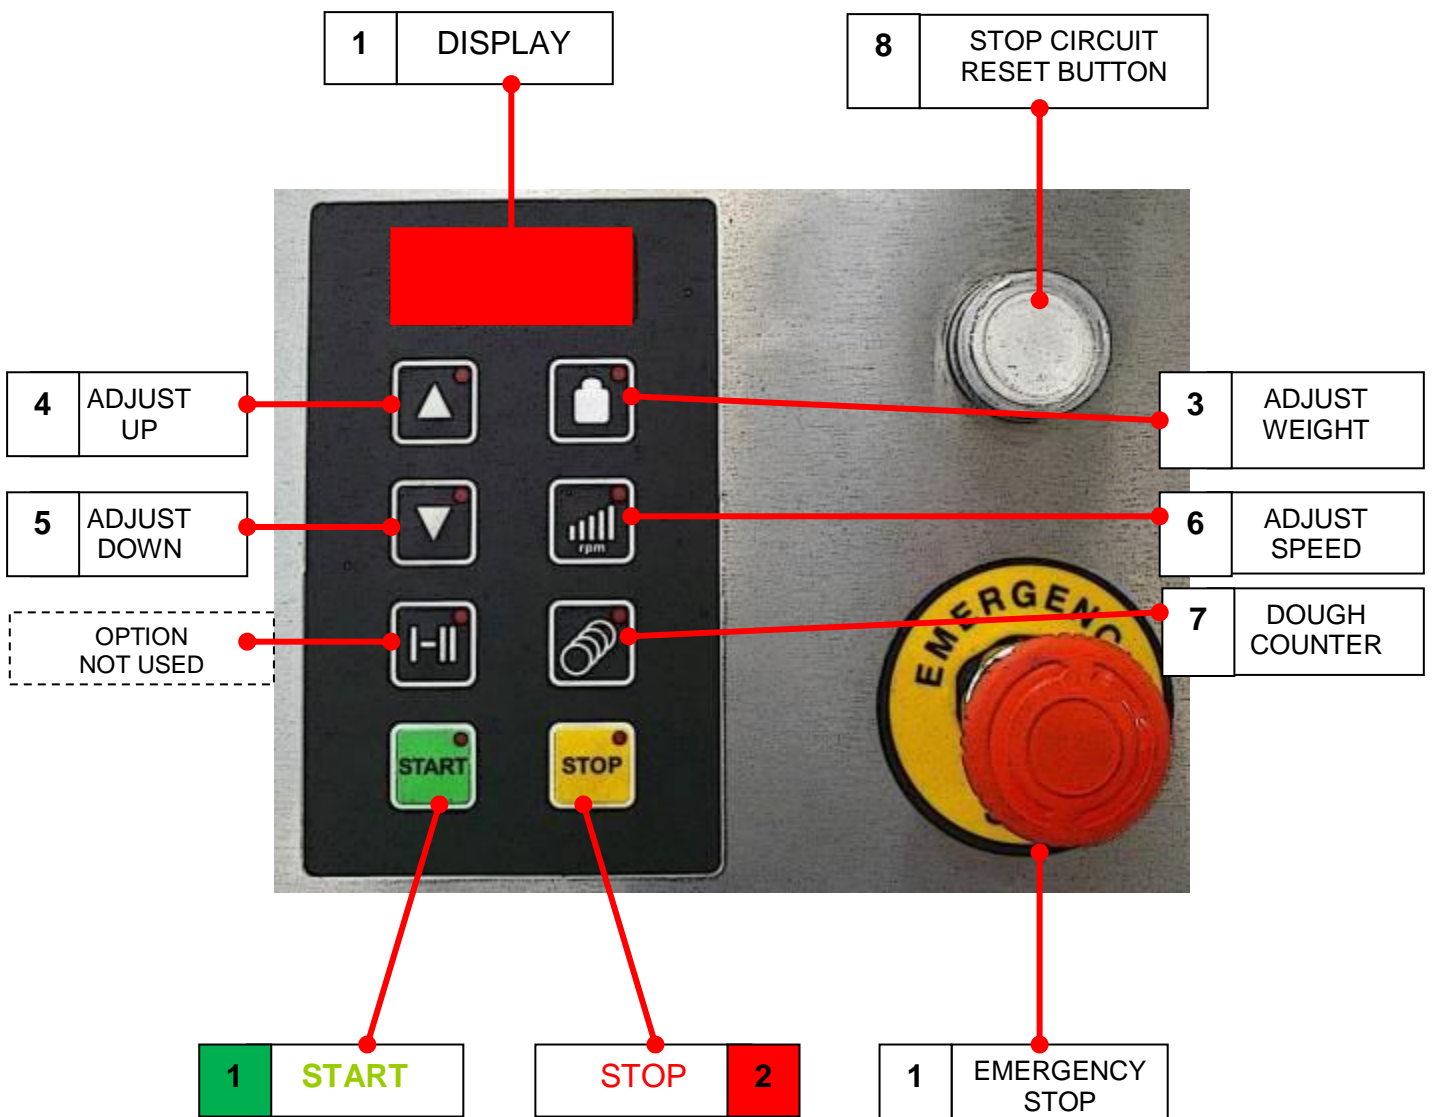

- 3 Run the divider for two minutes to allow oil to circulate. (Press “START” (1))
Then Stop the divider. (Press “STOP” (2))

Note: *To prevent contamination, It is advisable to thoroughly check the hopper and off take conveyor for traces of a previous dough.*

- 4 Load dough into the hopper.
- 5 Run the machine (Press “START” (1)) and check the first dough pieces out of the discharge conveyor for weight and cleanliness.

Adjust weight by pressing the “weight adjust button” (3) and then use the “adjust up” button (4) or the “adjust down” button (5) to alter the weight.

Make a note of the number showing in the display window for future reference.

(NOTE the number is only a reference to the setting and is not an indicator of weight, size etc.)

(REPLACE CLEAN DOUGH INTO THE HOPPER. DO NOT PUT BACK ON CONVEYOR)

Normally the first six dough pieces are put back into the hopper, as weight consistency is suspect in the initial dough pieces.

If any dough pieces are contaminated with excess oil or traces of previous doughs e.g. Wholemeal, discard accordingly.

- 6 Run dough through the divider.
Care must be taken with weights, especially towards the end of a batch of dough.
- 7 Check the oil level in the tank frequently throughout shift and top up, if required.

Note: - *The divider is a volume divider that divides by size of dough piece, not by weight.*

Be aware that dough is a “live” product and will expand in size during the dividing Process, so check weigh adjustments will have to be made during a batch of dough.

WARNING! NEVER LEAVE DIVIDER WITH DOUGH INSIDE, AS PRESSURES CAN BUILD UP AS THE DOUGH PROVES


FLOUR DUSTER OPERATION

TO ENSURE AN EVEN FLOW, ONLY USE CLEAN, DRY FLOUR.



DUSTER LOCATION

1

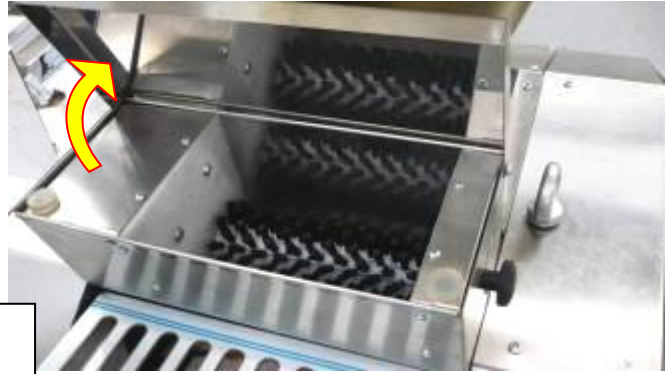

OPEN LID AND FILL WITH DRY FLOUR,
THEN CLOSE THE LID

2



TURN ON POWER WHEN REQUIRED

3



ADJUST THE FLOW BY LOOSENING THE
BLACK KNOB AND MOVING TO THE
REQUIRED POSITION. RETIGHTEN KNOB.

9.0 MAINTENANCE

ISOLATE DIVIDER FROM MAINS SUPPLY BEFORE ATTEMPTING ANY MAINTENANCE OPERATIONS.

MAINTENANCE SHOULD ONLY BE CARRIED OUT BY FULLY TRAINED PERSONNEL

Due to the low maintenance design of the divider, maintenance consists of the operations in the cleaning section and a few of the following checks:


- Conveyor belt adjustment (As required).
- condition and greasing (Check monthly)
- Weight adjuster chain condition and greasing (Check monthly)

- **Conveyor Belt Adjustment**

Conveyor belt should be no tighter than necessary to eliminate slippage. Over tensioning can lead to belt and/or bearing failure. The belt should be adjusted by means of the adjustment tensioning nuts.

The belt should run with equal clearance between its edges and the conveyor unit side frames. If one edge of the belt is tighter than the other, it will tend to run towards the slack side. This tracking defect can be eliminated by individual adjustment of the tensioning nuts.


ADJUSTMENT NUTS
(each side)

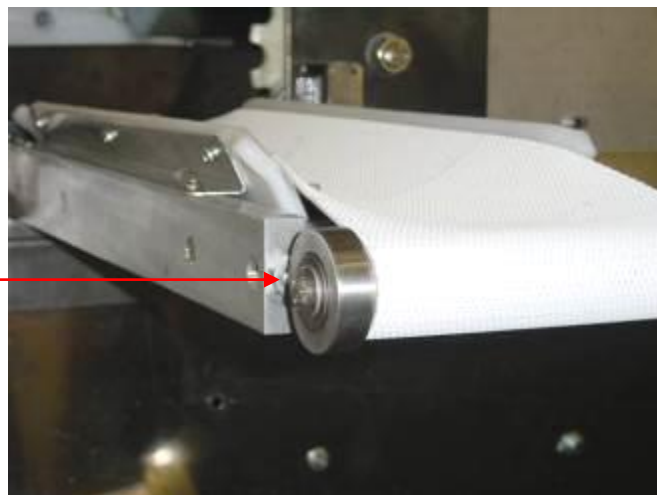


- **Chain greasing**

- Open the side panels. (Remove 2 fixing screws each side and swing open).

Check that the main drive and weight adjusting chains are clean and greased.

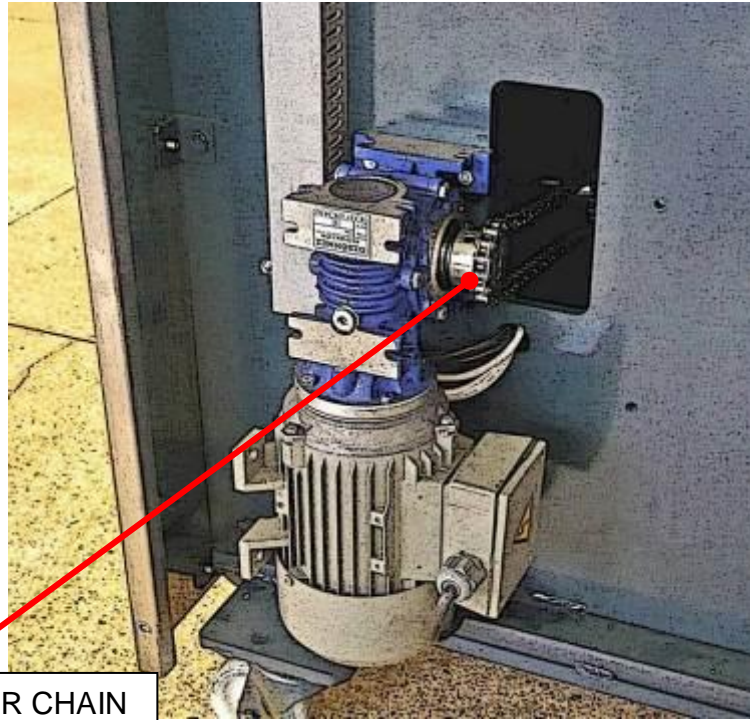

WEIGHT ADJUSTER CHAIN

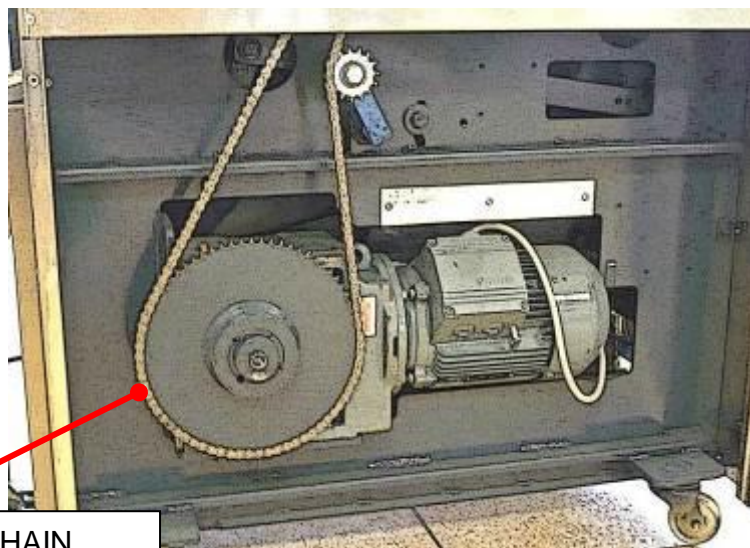

MAIN DRIVE CHAIN

10.0 TROUBLESHOOTING

Divider does not run

- Check power is turned on at the isolator on the wall
*For part of a bread plant check that the plant is connected and turned on.
Check plug into intermediate prover is correctly connected.*
- Check all safety switches are operating (hopper closed etc.).
- Check a red “stop button” is not depressed (Turn to release.) and stop circuit reset button (8) has been pressed.

WARNING: IF THERE IS ANY POSSIBILITY OF DAMAGE TO PLUGS OR LEADS, ISOLATE DIVIDER FROM PROVER BEFORE CHECKING.

- If divider still does not function after carrying out these checks, call out “Mono” service dept.
(see page 73)

◆ General Fault and Alarms

Faults and alarms indicate problems in the drive or in the machine.

An alarm is indicated by a code on the data display and the flashing ALM LED. The drive output is not necessarily switched off.

A fault is indicated by a code on the data display and the ALM LED is on. The drive output is always switched off immediately and the motor coast to stop.

To remove an alarm or reset a fault, trace the cause, remove it and reset the drive by pushing the Reset key on the operator or cycling the power supply.

This lists up the most important alarms and faults only. Please refer to the Technical Manual for a complete list.

LED Display	AL	FLT	Cause	Corrective Action
Base Block <i>bb</i>	○		The software base block function is assigned to one of the digital inputs and the input is off. The drive does not accept Run commands.	<ul style="list-style-type: none"> • Check the digital inputs function selection. • Check the upper controller sequence.
Control Fault <i>CF</i>		○	The torque limit was reached during deceleration for longer than 3 sec. when in Open Loop Vector control <ul style="list-style-type: none"> • The load inertia is too big. • The torque limit is too low. • The motor parameters are wrong. 	<ul style="list-style-type: none"> • Check the load. • Set the torque limit to the most appropriate setting (L7-01 through L7-04). • Check the motor parameters.
Control Circuit Fault <i>[PP02 to [PP24</i>		○	There is a problem in the drive's control circuit.	<ul style="list-style-type: none"> • Cycle the drive power supply. • Initialize the drive. • Replace the drive if the fault occurs again.
Control Circuit Fault <i>[PP25</i>		○	There is no terminal board connected to the control board.	<ul style="list-style-type: none"> • Check if the terminal board is installed properly. • Uninstall and Reapply the terminal board. • Change the drive.
Cannot Reset <i>[r5r</i>	○		Fault reset was input when a Run command was active.	Turn off the Run command and reset the drive.
Option External Fault <i>EF</i>	○	○	An external fault was tripped by the upper controller via an option card.	<ul style="list-style-type: none"> • Remove the fault cause, reset the fault and restart the drive. • Check the upper controller program.
External Fault <i>EF</i>	○		A forward and reverse command were input simultaneously for longer than 500 ms. This alarm stops a running motor.	<ul style="list-style-type: none"> • Check the sequence and make sure that the forward and reverse input are not set at the same time.

LED Display	AL	FLT	Cause	Corrective Action
External Faults <i>EF 1 to EFG</i>	○	○	<ul style="list-style-type: none"> An external fault was triggered by an external device via one of the digital inputs S1 to S6. The digital inputs are set up incorrectly. 	<ul style="list-style-type: none"> Find out why the device tripped the EF. Remove the cause and reset the fault. Check the functions assigned to the digital inputs.
Ground Fault <i>GF</i>		○	<ul style="list-style-type: none"> Ground leakage current has exceeded 50% of the drives rated output current. Cable or motor insulation is broken. Excessive stray capacitance at drive output. 	<ul style="list-style-type: none"> Check the output wiring and the motor for short circuits or broken insulation. Replace any broken parts. Reduce the carrier frequency.
Safe Disable <i>Hbb</i>	○		Both Safe Disable inputs are open. The drive output is safely disabled and the motor can not be started.	<ul style="list-style-type: none"> Check why the upper controller's safety device disabled the drive. Remove the cause and restart. Check the wiring. If the Safe Disable function is not utilized for EN60204-1, stop cat. 0 or for disabling the drive, the terminals HC, H1, H2 must be linked.
Safe Disable Fault <i>HbbF</i>	○		<p>Drive output is disabled while only one of the Safe Disable inputs is open. (normally both input signals H1 and H2 should be open)</p> <ul style="list-style-type: none"> One channel is internally broken and does not switch off, even if the external signal is removed. Only one channel is switched off by the upper controller. 	<ul style="list-style-type: none"> Check the wiring from the upper controller and make sure that both signals are set correctly by the controller. If the signals are set correctly and the alarm does not disappear, replace the drive.
Output Phase Loss <i>PF</i>		○	<p>Output cable is disconnected or the motor winding is damaged.</p> <p>Loose wires at the drive output.</p> <p>Motor is too small (less than 5% of drive current).</p>	<ul style="list-style-type: none"> Check the motor wiring. Make sure all terminal screws in the drive and motor are properly tightened. Check the motor and drive capacity.
Overcurrent <i>oC</i>		○	<p>Short circuit or ground fault on the drive output side</p> <p>The load is too heavy.</p> <p>The accel./decel. times are too short.</p> <p>Wrong motor data or V/f pattern settings.</p> <p>A magnetic contactor was switched at the output.</p>	<ul style="list-style-type: none"> Check the output wiring and the motor for short circuits or broken insulation. Replace the broken parts. Check the machine for damages (gears, etc.) and repair any broken parts. Check the drive parameter settings. Check the output contactor sequence.
Heatsink Overheat <i>oH or oH 1</i>	○	○	<p>Surrounding temperature is too high.</p> <p>The cooling fan has stopped.</p> <p>The heatsink is dirty.</p> <p>The airflow to the heatsink is restricted.</p>	<ul style="list-style-type: none"> Check the surrounding temperature and install cooling devices if necessary. Check the drive cooling fan. Clean the heatsink. Check the airflow around the heatsink.
Motor Overload <i>oL 1</i>		○	<p>The motor load is too heavy.</p> <p>The motor is operated at low speed with heavy load.</p> <p>Cycle times of accel./ decel. are too short.</p> <p>Incorrect motor rated current has been set.</p>	<ul style="list-style-type: none"> Reduce the motor load. Use a motor with external cooling and set the correct motor in parameter L1-01 Check the sequence. Check the rated current setting.

LED Display	AL	FLT	Cause	Corrective Action
Drive Overload <i>OL2</i>		○	The load is too heavy. The drive capacity is too small. Too much torque at low speed.	<ul style="list-style-type: none"> • Check the load. • Make sure that the drive is big enough to handle the load. • The overload capability is reduced at low speeds. Reduce the load or increase the drive size.
DC Overvoltage <i>OU</i>	○	○	DC bus voltage rose too high. The deceleration time is too short. Stall prevention is disabled. Braking chopper / resistor broken. Unstable motor control in OLV. Too high input voltage.	<ul style="list-style-type: none"> • Increase the deceleration time. • Enable stall prevention by parameter L3-04. • Make sure the braking resistor and braking chopper are working correctly. • Check motor parameter settings and adjust torque and slip compensation, AFR and hunting prevention as needed. • Make sure that the power supply voltage meets the drives specifications.
Input Phase Loss <i>LF</i>		○	Input voltage drop or phase imbalance. One of the input phase is lost. Loose wires at the drive input.	<ul style="list-style-type: none"> • Check the power supply. • Make sure that all cables are properly fixed to the correct terminals.
Braking Transistor Fault <i>rr</i>		○	The internal braking transistor is broken.	<ul style="list-style-type: none"> • Cycle the power supply. • Replace the drive if the fault reoccurs.
DC Undervoltage <i>UU1</i>	○	○	The voltage in the DC bus fell below the undervoltage detection level (L2-05). The power supply failed or one input phase has been lost. The power supply is too weak.	<ul style="list-style-type: none"> • Check the power supply. • Make sure, that the power supply is strong enough.
Controller Undervoltage <i>UU2</i>		○	The drives controller power supply voltage is too low.	<ul style="list-style-type: none"> • Cycle power to the drive. Check if the fault reoccurs. • Replace the drive if the fault continues to occur.
DC Charge Circuit Fault <i>UU3</i>		○	The charge circuit for the DC bus is broken.	<ul style="list-style-type: none"> • Cycle power to the drive. Check if the fault reoccurs. • Replace the drive if the fault reoccurs.

◆ Operator Programing Errors

An Operator Programming Error (OPE) occurs when an inapplicable parameter is set or an individual parameter setting is inappropriate. When an OPE error is displayed, press the ENTER button to display U1-18 (OPE fault constant). This monitor will display the parameter that is causing the OPE error.

LED Operator Display	Cause	Corrective Action
oPE01 oPE01	Drive capacity and value set to o2-04 do not match.	Correct the value set to o2-04.
oPE02 oPE02	Parameters were set outside the allowable setting range.	Set parameters to the proper values.
oPE03 oPE03	A contradictory setting is assigned to multi-function contact inputs H1-01 through to H1-06. <ul style="list-style-type: none"> • The same function is assigned to two inputs. (this excludes "External fault" and "Not used") • Input functions which require the setting of other input functions were set alone. • Input functions that are not allowed to be used simultaneously have been set. 	<ul style="list-style-type: none"> • Fix any incorrect settings. • Refer to the Technical Manual for more details.
oPE05 oPE05	<ul style="list-style-type: none"> • The run command source (b1-02) or frequency reference source (b1-01) is set to 3 but no option board is installed. • The frequency reference source is set to pulse input but H6-01 is not 0. 	<ul style="list-style-type: none"> • Install the required option board. • Correct the values set to b1-01 and b1-02.
oPE07 oPE07	Settings to multi-function analog inputs H3-02 and H3-10 and PID functions conflict. <ul style="list-style-type: none"> • H3-02 and H3-10 are set to the same value. (this excludes settings "0" and "F") • PID functions have been assigned to both analog inputs and the pulse input at the same time. 	<ul style="list-style-type: none"> • Fix any incorrect setting. • Refer to the Technical Manual for more details.
oPE08 oPE08	A function has been set that cannot be used in the control mode selected.(might appear after control mode change)	<ul style="list-style-type: none"> • Fix any incorrect setting. • Refer to the Technical Manual for more details.
oPE10 oPE 10	The V/f pattern setting is incorrect.	<ul style="list-style-type: none"> • Check the V/f pattern settings. • Refer to the Technical Manual for more details.

◆ Auto-Tuning Errors

LED Operator Display	Cause	Corrective Action
Er-01 <i>Er-01</i>	Motor data fault The input motor data are not valid. (e.g. the base frequency and base speed do not fit).	Re-enter the data and repeat Auto-Tuning.
Er-02 <i>Er-02</i>	Minor Fault • The wiring is faulty. • The load is too heavy.	• Check the wiring. • Check the load. Always perform Auto-Tuning with the load decoupled from the motor.
Er-03 <i>Er-03</i>	The STOP button was pressed and Auto-Tuning was canceled.	Repeat the Auto-Tuning.
Er-04 <i>Er-04</i>	Resistance fault • Wrong input data. • Auto tuning exceeded the given time frame. • Calculated values out of range.	• Check the input data. • Check the wiring. • Re-enter the data and repeat the Auto-Tuning.
Er-05 <i>Er-05</i>	No-Load Current Error • Incorrect data was entered. • Auto tuning took too long. • Calculated values out of range.	
Er-08 <i>Er-08</i>	Rated Slip Error • Wrong data input. • Auto tuning exceeded the given time frame. • Calculated values out of range.	
Er-09 <i>Er-09</i>	Acceleration error The motor did not accelerate for the specified acceleration time.	• Increase the acceleration time C1-01. • Check the torque limits L7-01 and L7-02.
Er-11 <i>Er-11</i>	Motor speed fault. The torque reference was too high.	• Increase the acceleration time (C1-01). • If possible, disconnect the load.
Er-12 <i>Er-12</i>	Current detection error • One or all output phases are lost. • Current is either too low or exceeds the drives rating. • The current sensors are faulty.	• Check the wiring. • Make sure, that the drive rating fits to the motor. • Check the load. (Auto-Tuning should have been performed without the load connected.) • Replace the drive.
End1 <i>End1</i>	Rated current alarm • The torque reference exceeded 20% during Auto-Tuning. • The calculated no-load current is above 80% of the motor rated current.	• Check the V/f pattern setting. • Perform Auto-Tuning without the load connected. • Check the input data and repeat Auto-Tuning.
End2 <i>End2</i>	Motor iron-core saturation alarm • Calculated core saturation values out of range. • Incorrect data was entered.	• Check the input data. • Check the motor wiring. • Perform Auto-Tuning without load connected.
End3 <i>End3</i>	Rated current alarm	Check the input data and repeat tuning.

YASKAWA INVERTER DEFAULT SETTINGS

	3KW
A1 03	2220
A1 02	0 2
C1 01	0001.0
C1 02	0000.5
C4 02	000.30
C6 02	0 5
D2 02	033.0
E2 01	014.40
E1 04	060.0
H2 01	000
H3 03	0048.0
H3 04	0015.0
H3 13	1,3 0
L1 01	03
L8 07	0 2

11.0 SPARES AND SERVICE ---

If a fault arises, please do not hesitate to contact the Customer Service Department, quoting the **machine serial number** on the silver information plate of the machine and on the front cover of this manual


SPARES and OVERSEAS SUPPORT:

MONO

Queensway
Swansea West Industrial Estate
Swansea. SA5 4EB UK

email: spares@monoequip.com
Web site: www.monoequip.com

Tel. 01792 561234
Fax. 01792 561016

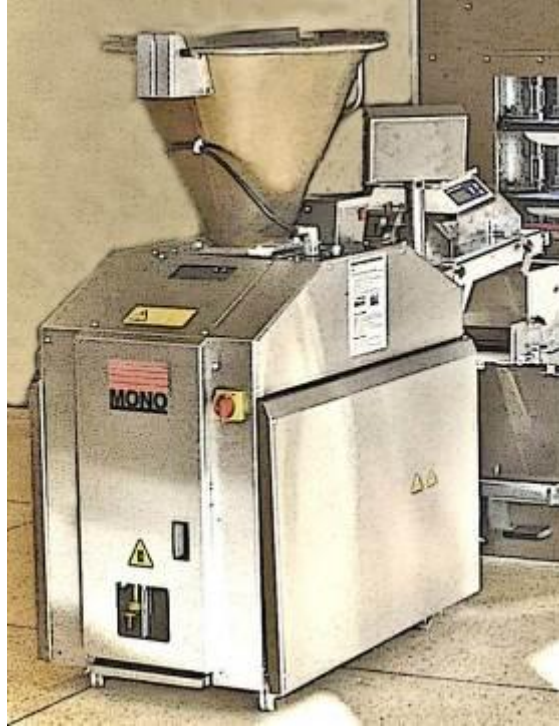


12.0 ELECTRICAL INFORMATION SECTION




NOTE

Due to continual improvements this section may not be correct for your model.
Please contact MONO before using.

ELECTRICAL DISTRIBUTION

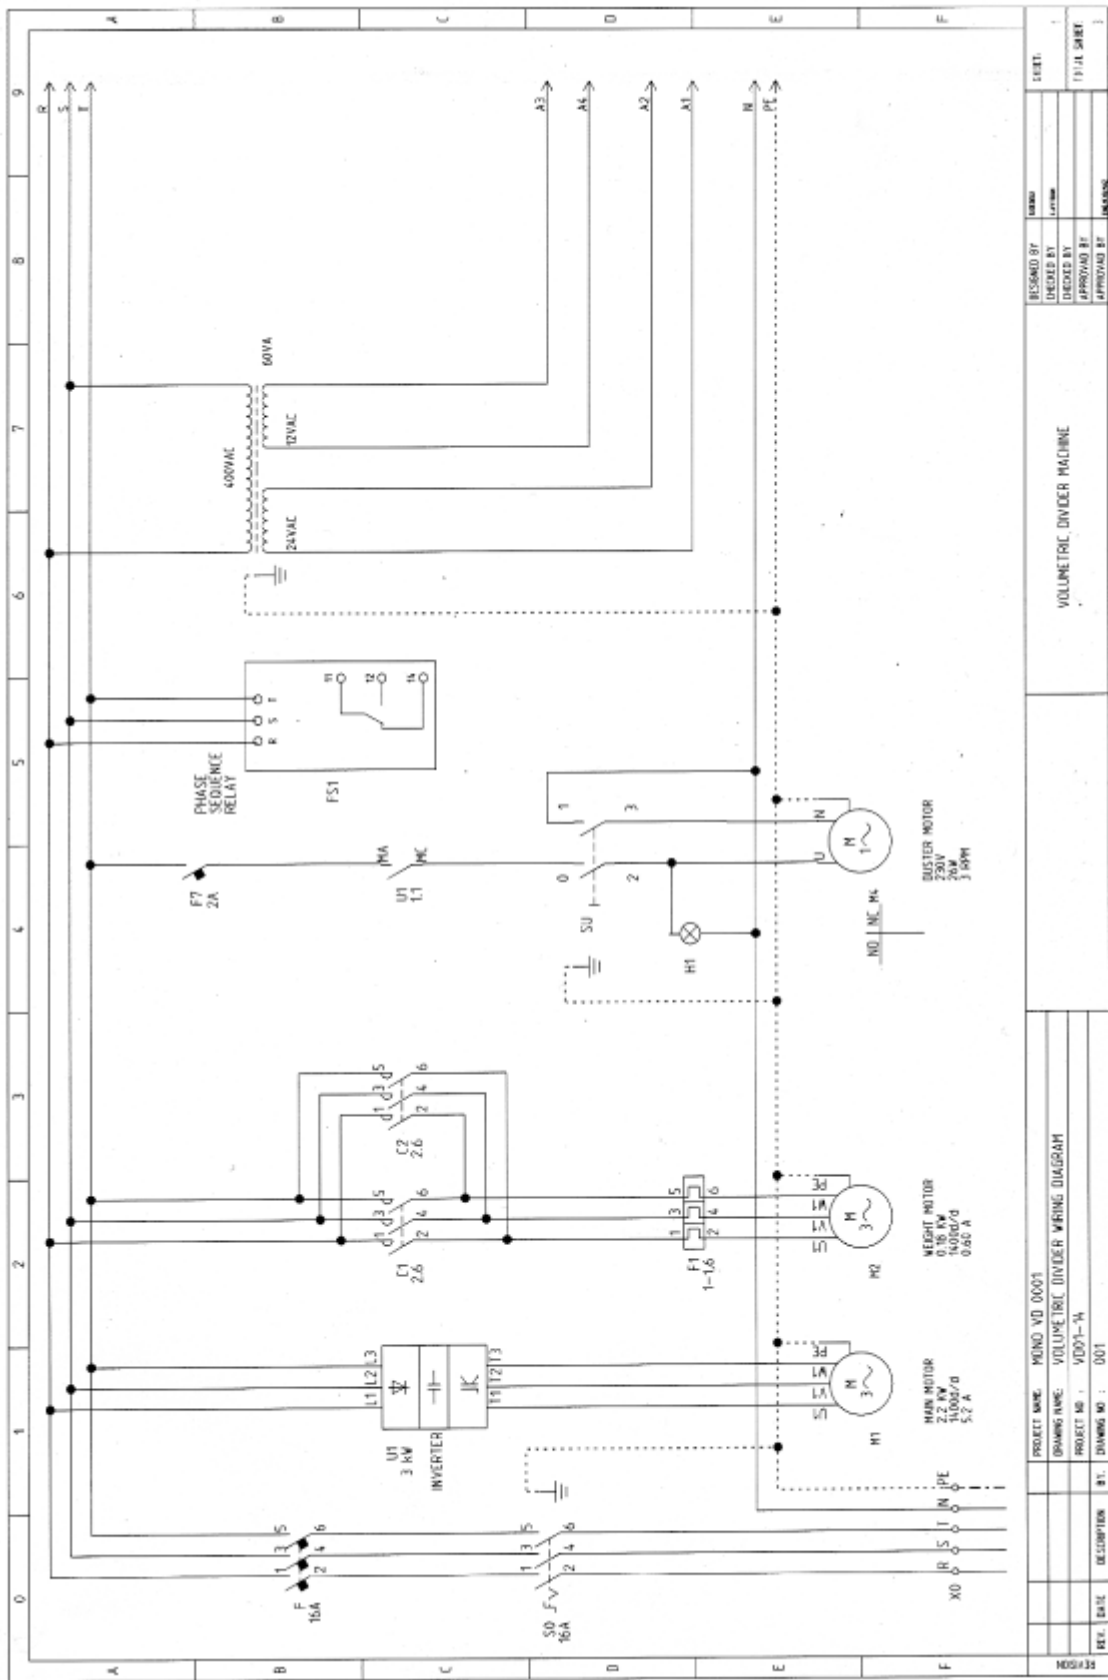

CONTROL CIRCUIT

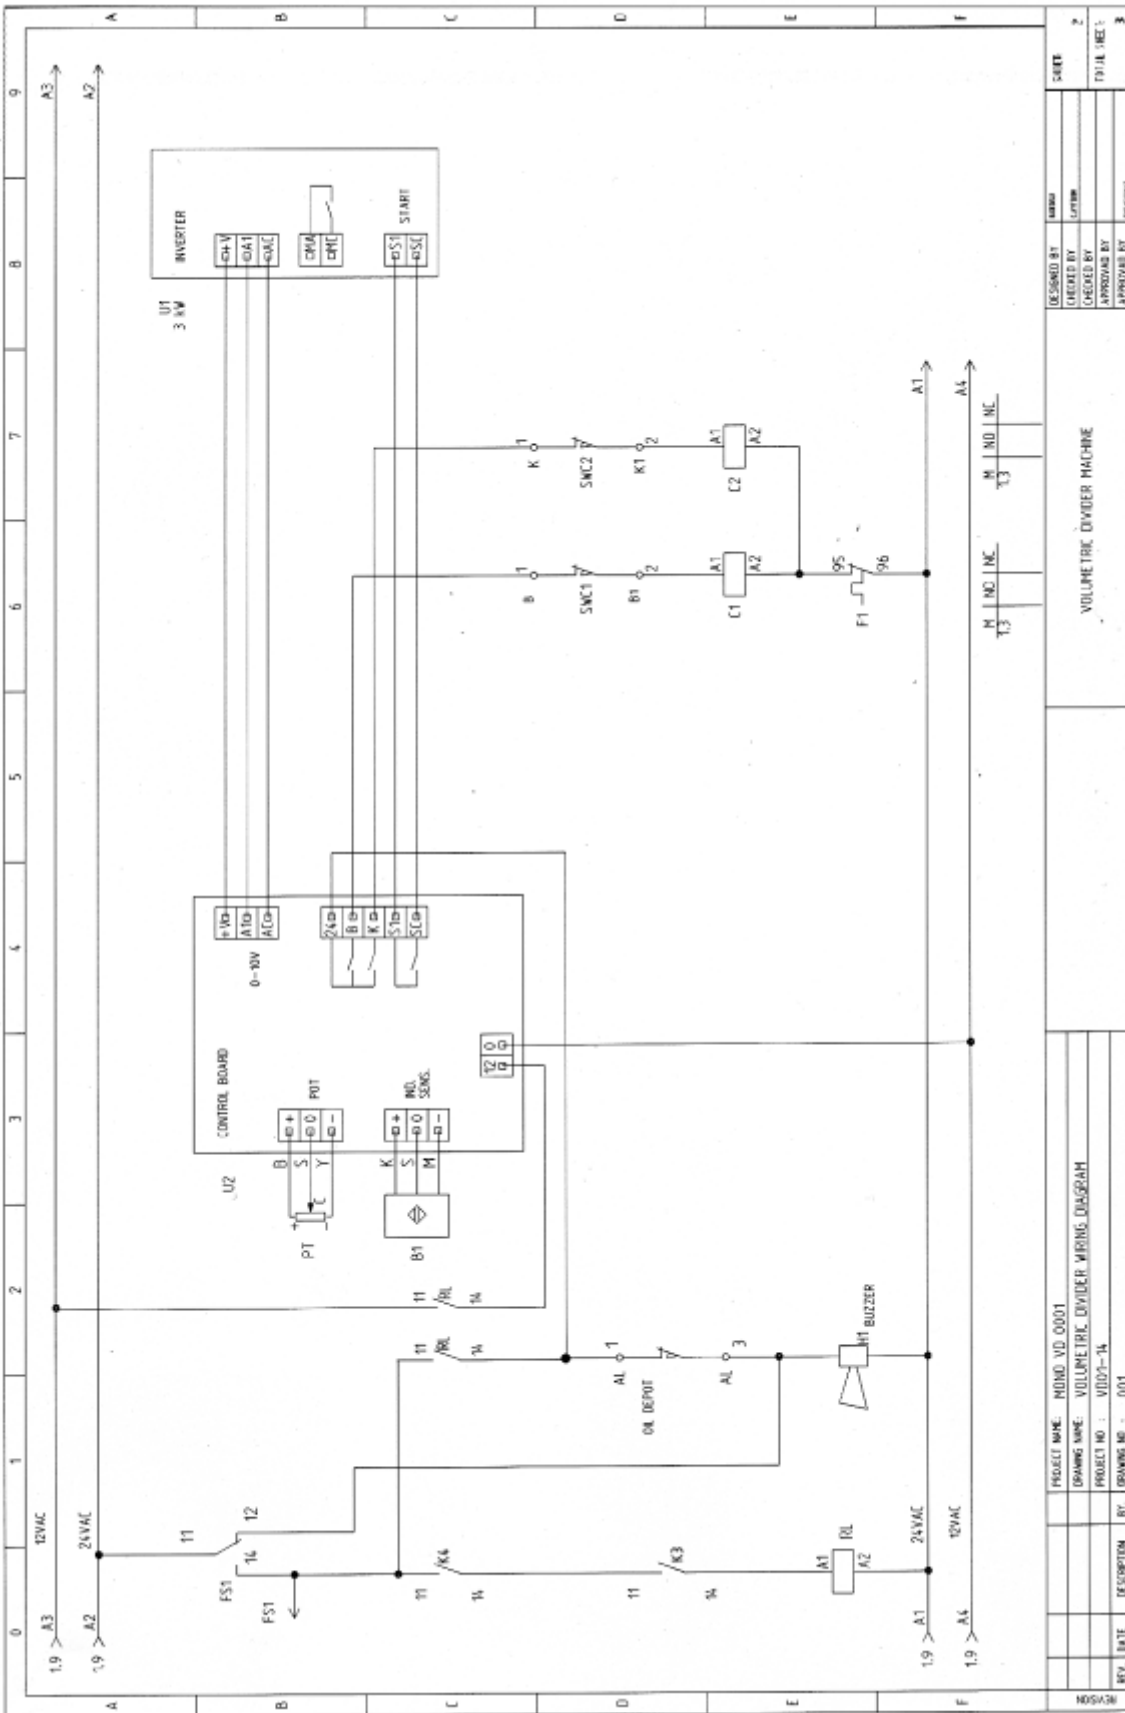


REV.	DATE	DESCRIPTION	BY

PROJECT NAME: MIND VD 0001	DESIGNED BY: LYNDA	SHEET: 2
DRAWING NAME: VOLUMETRIC DIVIDER WIRING DIAGRAM	CHECKED BY: LYNDA	TOTAL SHEETS: 3
PROJECT NO.: VDD2-14	APPROVED BY:	
DRAWING NO.: 001	FUNCTIONAL:	

VOLUMETRIC DIVIDER MACHINE

EMERGENCY STOP MONITORING CIRCUIT

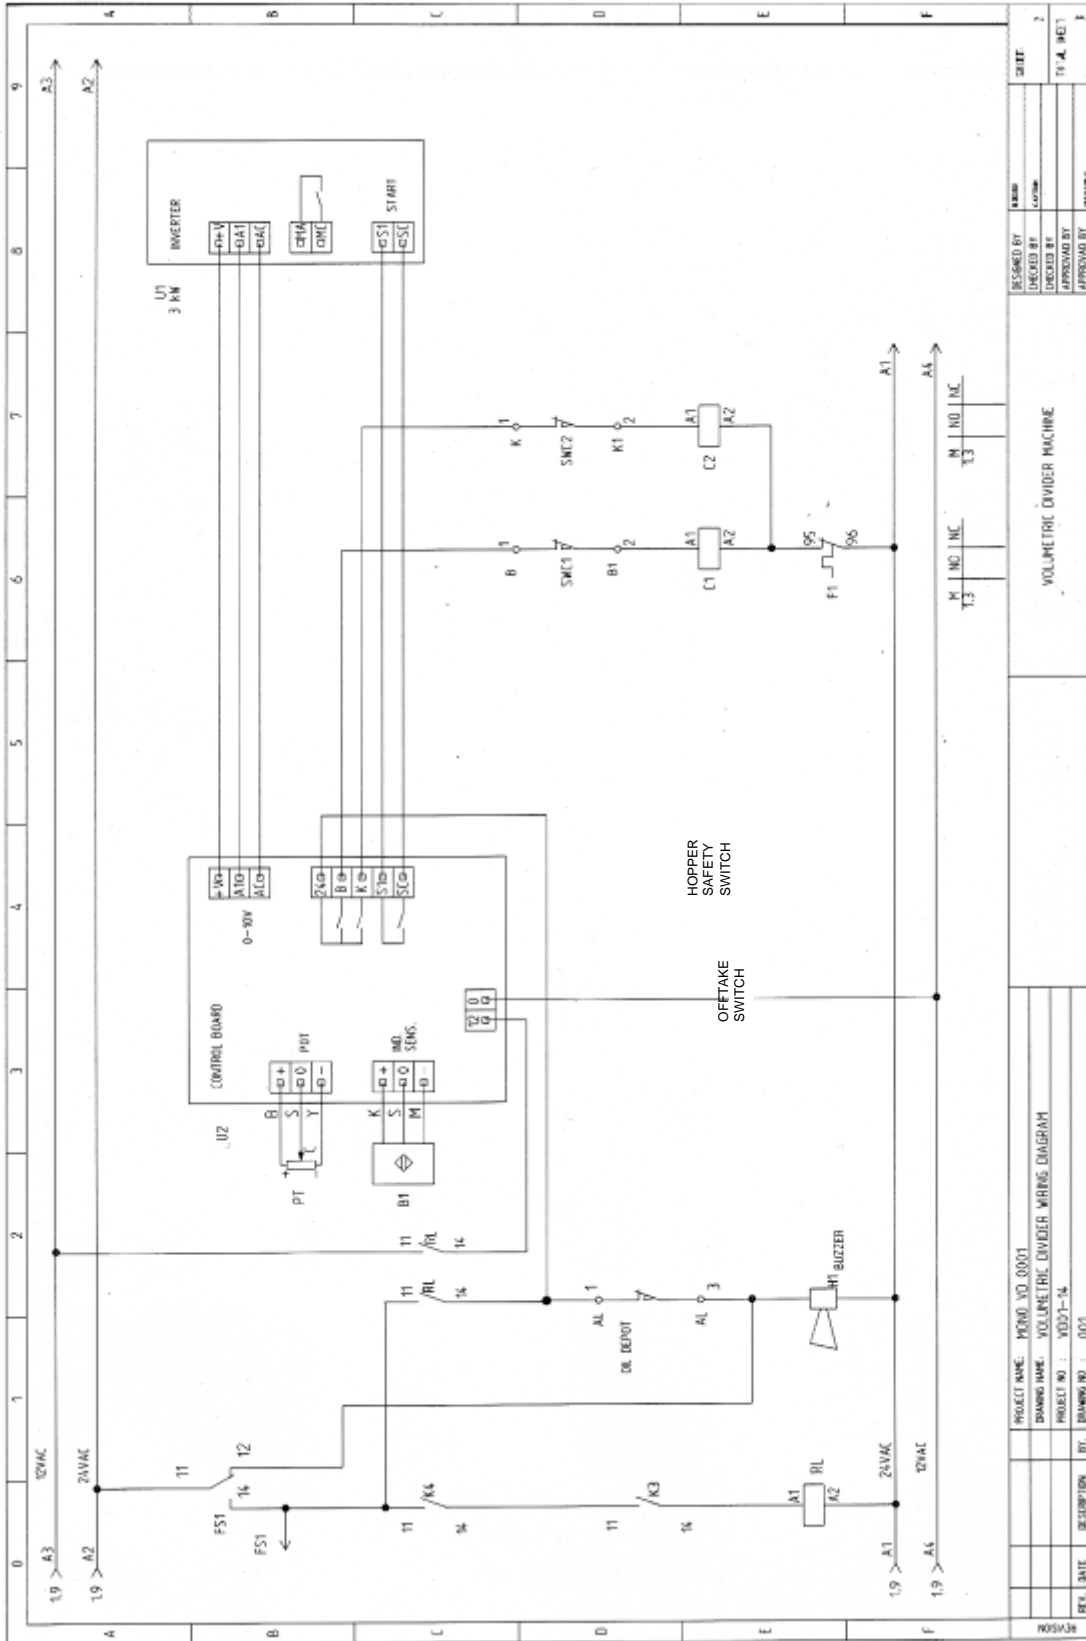

REV.	DATE	DESCRIPTION	BY	DRAWING NO.	PROJECT NAME	PROJECT NO.	DRWING NO.
					VOLUMETRIC DIVIDER MACHINE	VDD-1-14	001

DESIGNED BY	UJ2
CHECKED BY	
APPROVED BY	
DATE	



FULL OPERATING AND MAINTENANCE
MANUAL
FOR THE
BREADPLANT **MOULDER**

MOULDER

IMPORTANT NOTES

IF YOU ENCOUNTER ANY ISSUE WITH THIS EQUIPMENT THAT YOU HAVE NOT BEEN TRAINED FOR, YOU MUST CONTACT YOUR INSTORE TECHNICIAN.

MONO FUSION PLANT MOULDER SETTINGS GUIDE

PLEASE NOTE THAT THESE ARE APPROXIMATE SETTINGS AND SHOULD ONLY BE USED AS A STARTING POINT

PRODUCT	WATER	MIX TIME	SHEETER	INITIAL FLAP	REAR FLAP	FRENCH LENGTH	LOAF LENGTH	MOULDING PRESSURE
980G BREAD	9	2-8 MINS	11	UP	DOWN	N/A	10	260-280
520G BREAD	9.3	2-8 MINS	11	UP	DOWN	N/A	6	260-280
550G FRENCH	9.1	2-8 MINS	5	DOWN	UP	5	N/A	N/A
260G BATON	9.1	2-8 MINS	5	UP	UP	7	N/A	N/A

- Ensure the moulder is set up and adequate tins and trays are available before starting the breadplant.

CONTENTS -- MOULDER SECTION

Section - 1.0	Introduction	page 83
Section - 2.0	Overall Dimensions	page 83
Section - 3.0	Specifications	page 84
Section - 4.0	Safety	page 85
Section - 5.0	Installation	page 86
Section - 6.0	Isolation	page 87
Section - 7.0	Cleaning	page 88
	○ Daily	page 88
	○ Weekly	page 94

Section - 8.0	Operating Information	page 95
Section - 9.0	Operating Machine	page 96
	○ Moulding between belts (French stick and petit pan)	page 96
	○ Moulding Between Rear Belt & Pressure Board (Tin and Bloomers)	page 98

Section - 10.0	Maintenance	page 99
Section - 11.0	Troubleshooting	page 100
Section - 12.0	Service and Spares	page 101
Section - 13.0	Electrical Information	page 104

1.0 INTRODUCTION

MONO's Moulder combines the capabilities of traditional bread and French stick moulding machines. Its small footprint and simple controls are of particular benefit in small bakeries and when used with an automatic bread plant.


The Moulder will process up to 900 dough pieces an hour.

2.0 OVERALL DIMENSIONS

Height: 1825mm.

Depth: 1205mm.

Width: 1020mm.

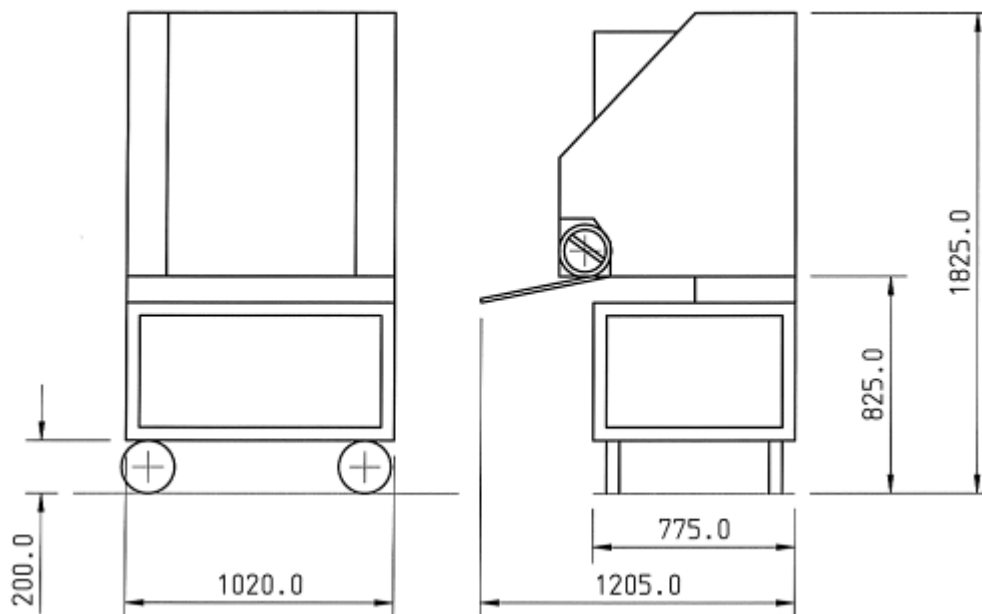

3.0 SPECIFICATIONS

Total power: 0.75kW three phase

Capacity: Up to 900 dough pieces processed every hour, between 250g (9oz) and 0.9kg (2lb) in weight and between 125mm (5") and 760mm (30")

Weight: 430kg

Noise level: *Less than 85dB.*

4.0 SAFETY

IF YOU ENCOUNTER ANY ISSUE WITH THIS EQUIPMENT THAT YOU HAVE NOT BEEN TRAINED FOR, YOU MUST CONTACT YOUR INSTORE TECHNICIAN.



- 1 Never use a machine in a faulty condition and always report damage.
- 2 No one under 16 may operate this machine.
- 3 No one under 18 may clean this machine.
- 4 Only trained and authorised persons may remove any part that requires a tool to do so.
- 5 Always ensure hands are dry before touching any electrical appliance (including cable and plug).
- 6 All operatives must be fully trained.
- 7 People undergoing training on the machine must be under direct supervision of a trainer.
- 8 Do not operate with any panels removed.
- 9 All guards must be fixed in place with bolts or screws unless protected by a safety switch.
- 10 No loose clothing or jewellery to be worn while operating the machine.
- 11 Switch off power at the mains isolate switch or isolate at the main control box
- 12 The Bakery Manager or the bakery Supervisor must carry out daily safety checks.
- 13 **Warning: Do not attempt to scrape moulding belts when moulder is running.**
- 14 Any internal maintenance must be by fully trained maintenance personnel.

WARNING:

Hand or bodily contact with moving belt surfaces may cause friction burns to skin. This situation need not occur to successfully operate the moulder

5.0 INSTALLATION


1. Ensure machine is standing on a solid level floor. Correctly position moulder using the male locator. The locator should be pushed in until the end of it pushes up against the stop. Clamp in position with clip. Lock the two front castors into place after the connection is made.
2. The Moulder should be connected to the correct sockets on the prover.

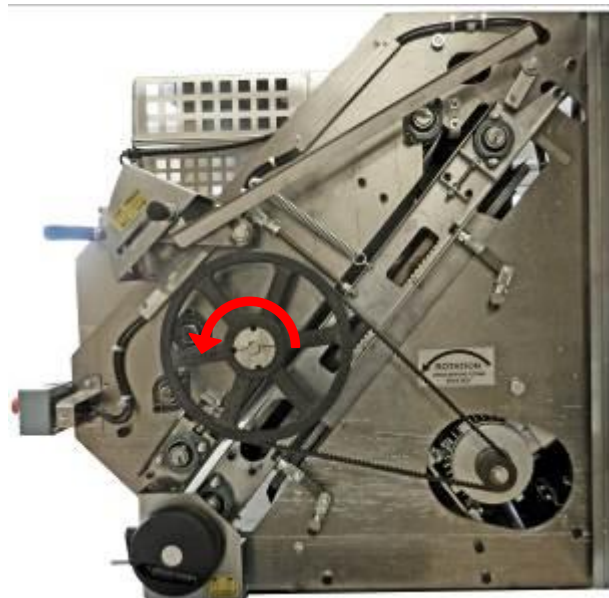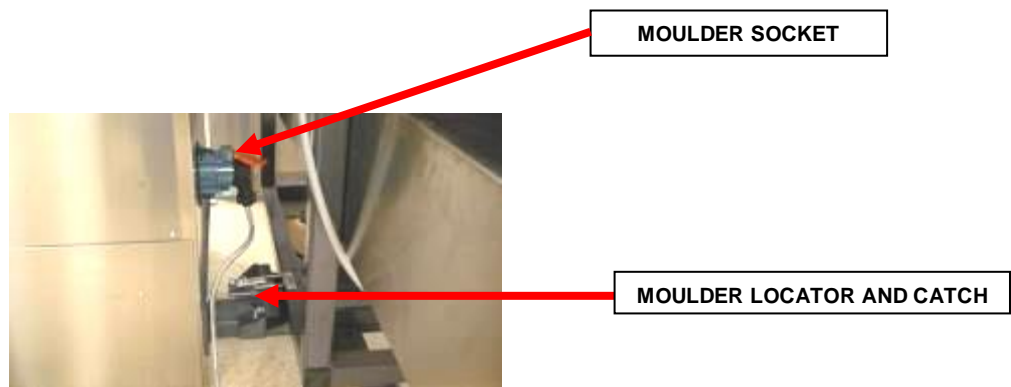

3. Check machine after installation to ensure drive motor rotation is in the direction of arrow. This should be done with drive V-belt removed. If motor rotation is incorrect, change round any two of the three phase carrying wires. Drive motor should be travelling in an anti-clockwise direction.

6.0 ISOLATION


To stop the moulder in an emergency, switch off at the prover main isolator, or use the emergency stop button either on the plant control panel or the remote station .

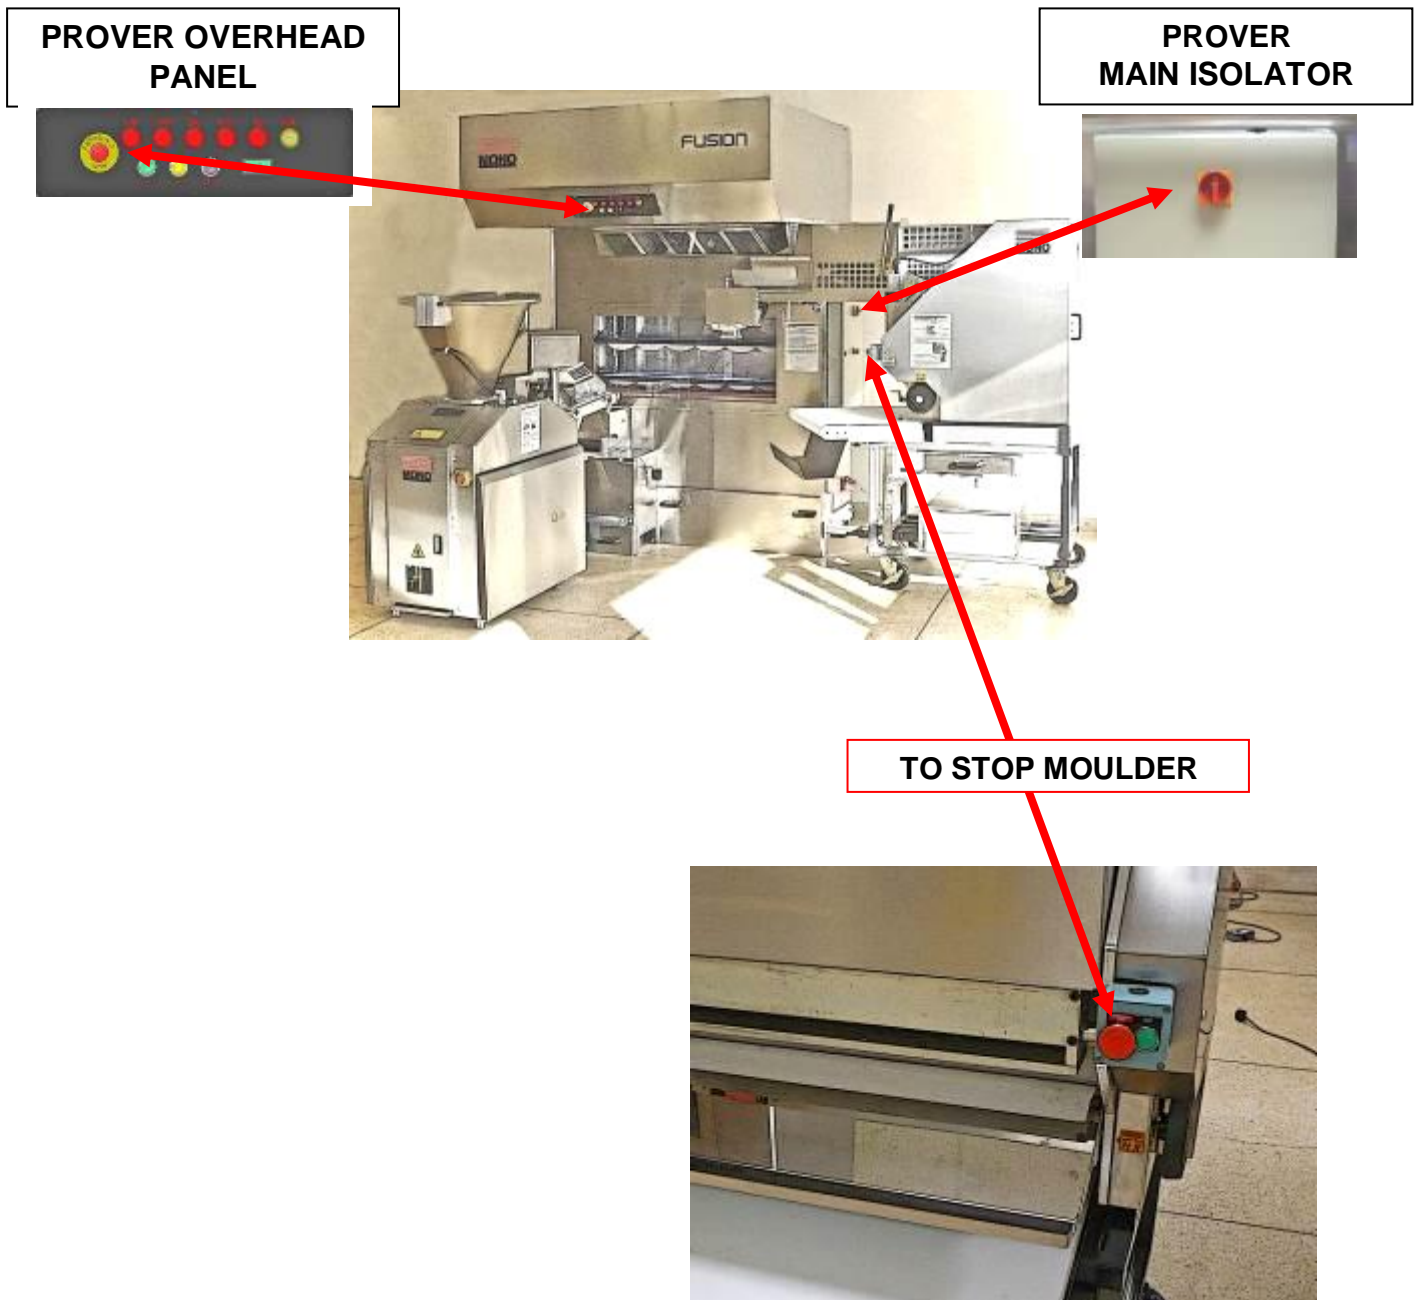

7.0 CLEANING

DAILY CLEANING INSTRUCTIONS

NOTE! - USE PLASTIC SCRAPERS TO REMOVE SUBSTANTIAL DOUGH PIECES PRIOR TO CLEANING.

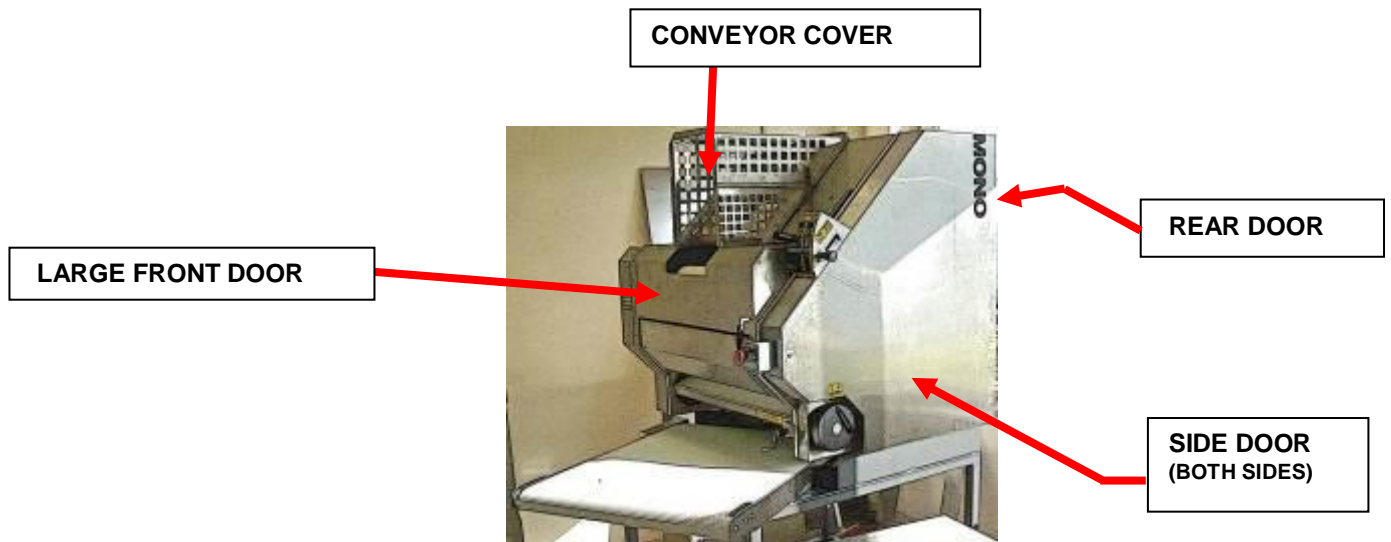

1. Isolate the mains supply. (see previous page)
2. Open large front door.



SET SHEETING GAP




4. Set sheeting gap to the widest mark and brush out residue from the area, using a plastic scraper on the rollers if required.

5. Clean any residue that has been trapped at the bottom of the belt. Scrape exposed surface of the dough-moulding belt with **plastic** scraper.

7. Brush/vacuum the area.


SCRAPER AND CURLING CHAIN REMOVAL

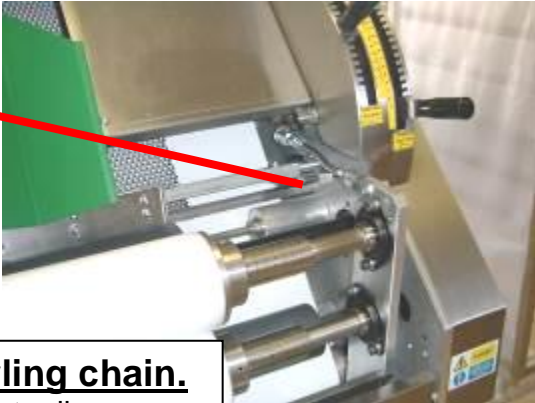

To remove scraper and curling chain.
Slide clips sideways and lift up bar to disengage (one each side).




CLIP CLOSED

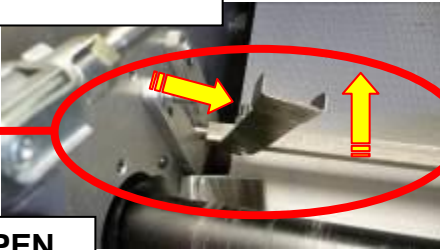

CLIP OPEN

Detach top of curling chain
Lift chain off top bar and remove curling chain and scraper.

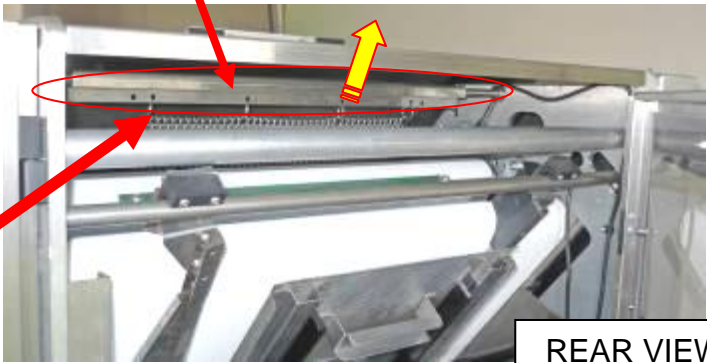


REAR VIEW




To replace scraper and curling chain.


Clean and then replace the curling chain by dropping down conveyor from the back and clipping in place at the front. (Reverse of removal).

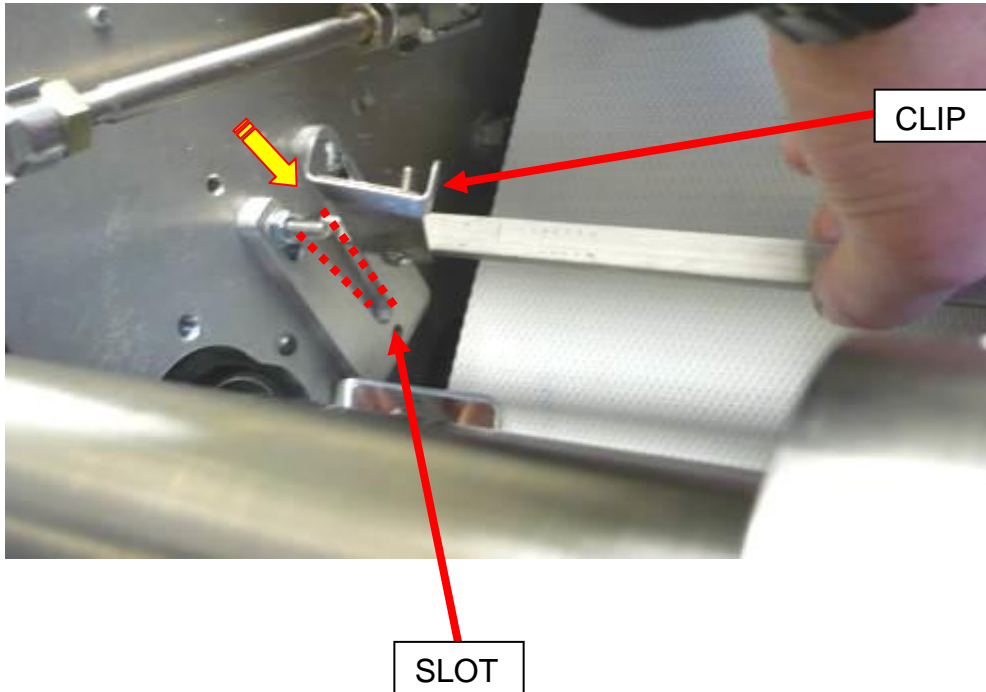

Pressure Board Removal

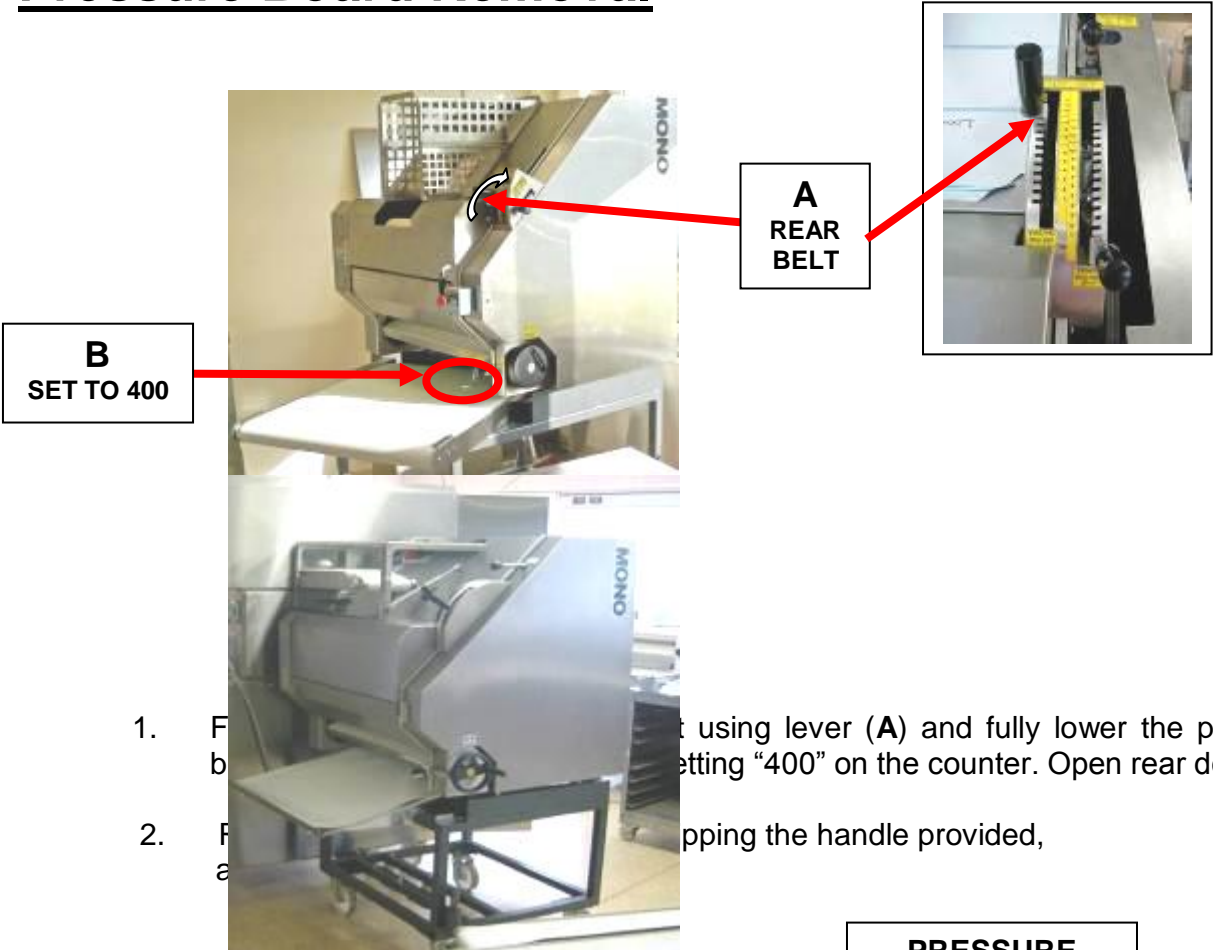

1. Fully lower the pressure board using lever (A) and fully lower the pressure setting "400" on the counter. Open rear door.
2. Fully open the rear door by pulling the handle provided,

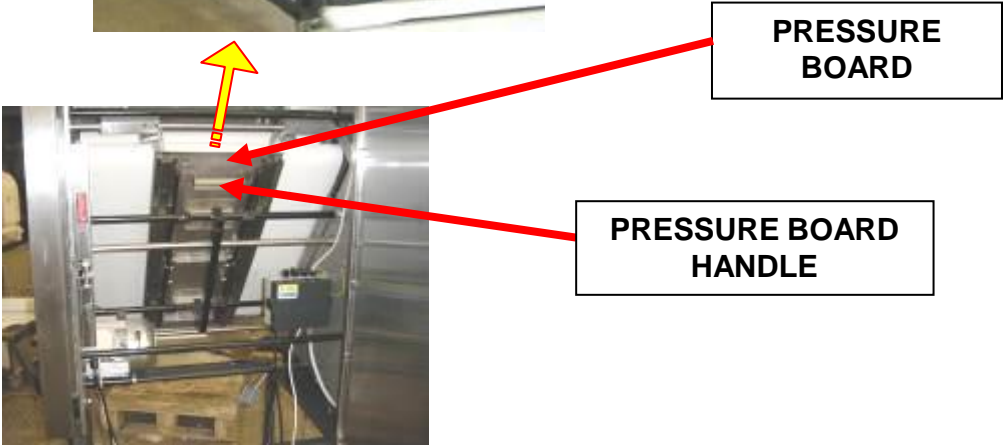


3. Wash dough contact surfaces of the pressure board and side guides with sanitising solution and hot water. Dry with cloth.
4. Remove any dough from the bottom belt with a plastic scraper.
5. Replace the pressure board, making sure the hooks on the board are fully engaged.

Close the rear door firmly to make the safety switch connection.

OFF TAKE CONVEYOR

Should be scraped clean with a plastic scraper.

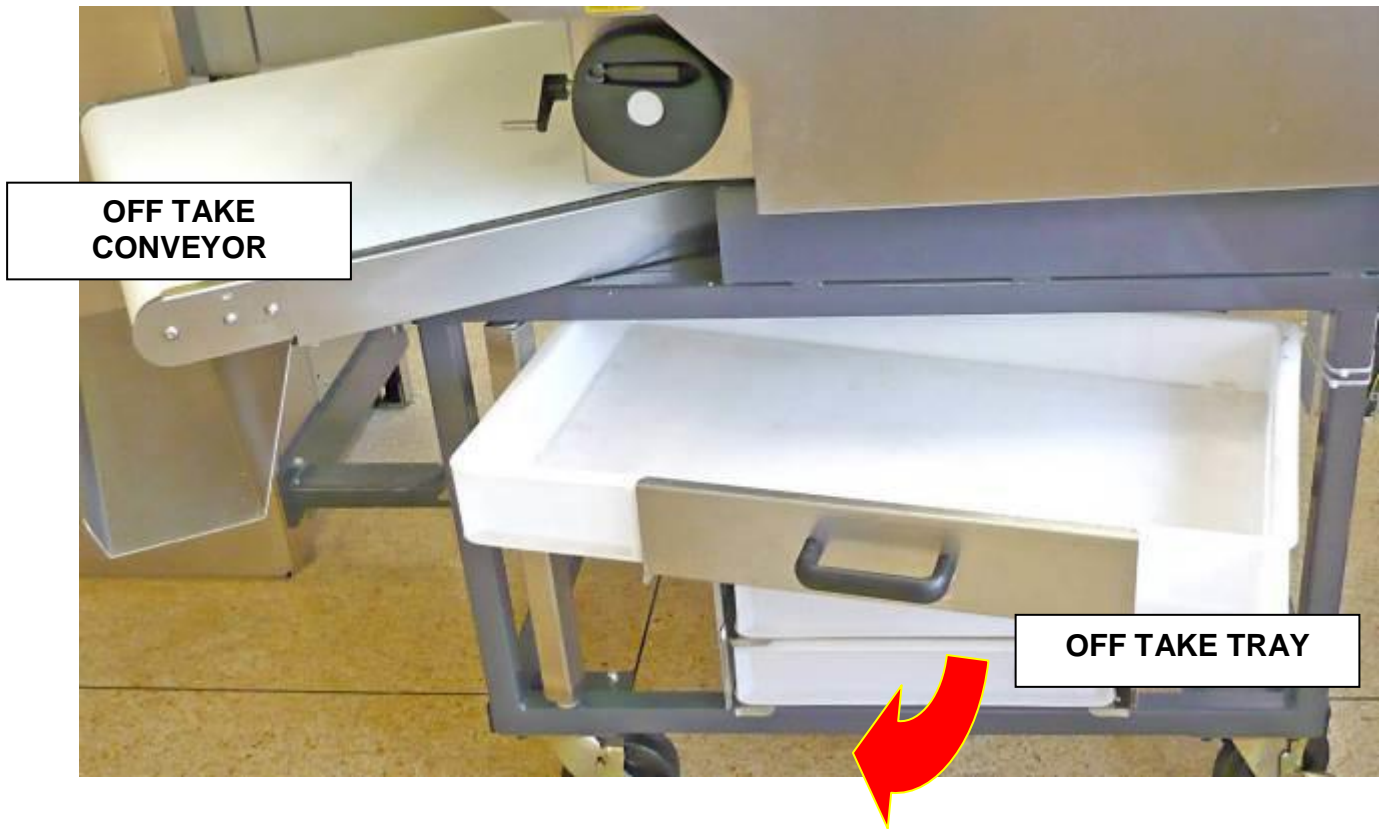

OFF TAKE TRAY

Pull out the off take tray shelf and remove the plastic tray.
Wash well and dry.
Replace.

And finally to complete "Daily Cleaning"

- Brush down all external surfaces of the machine including the stand.
- Sweep under machine to remove all debris from the floor.
- Spot clean with dampened cloth, sanitising solution and hot water, paying particular attention to handles, levers and controls.

WEEKLY CLEANING INSTRUCTIONS

AS DAILY INSTRUCTIONS AND ALSO:


1. ***Remove the moulder mains plug from prover and unclip positioning locator on base.***
2. Pull the moulder away from prover.
- 3 Wipe the stand with a cloth dampened with disinfecting solution and hot water.
- 4 Scrape and scrub the wheels on the machine.
- 5 Wipe down all internal surfaces with disinfecting solution and hot water.
Dry with a cloth.

8.0 OPERATING INFORMATION

- 1 The Moulder should be used on a level floor for the best results.
- 2 All control levers, handles, etc are best adjusted when the moulder is running, although they can be adjusted with the machine stationary.



Machine cycle information.

- 1 The moulding elements consist of two dough guides, two differential sheeting rollers, a guide roller, a stripper roller, a removable curling chain, two endless polyurethane belts rotating in the same direction, a two position deflector, a pressure board, a pair of dough guides and an offtake tray.
- 2 Dough is delivered from the prover conveyor. The dough is then sheeted through the two differential rollers into a pancake shape.
- 3 The dough piece is taken off the rollers by means of a stripper roller and guided by the remaining roller onto the endless polyurethane belt. Upon making contact with the belt the dough piece is immediately pressurised by the curling chain mat. The light pressure produced by the chain causes the dough piece to roll over on its self and produce a sausage shape.
- 4 At this stage in the moulding process the dough path can be selected, via pushrod to be further processed either between front and rear belts or between the rear belt and pressure board.
- 5 Both of the moulding routes chosen will deposit the finished dough piece onto an offtake tray.

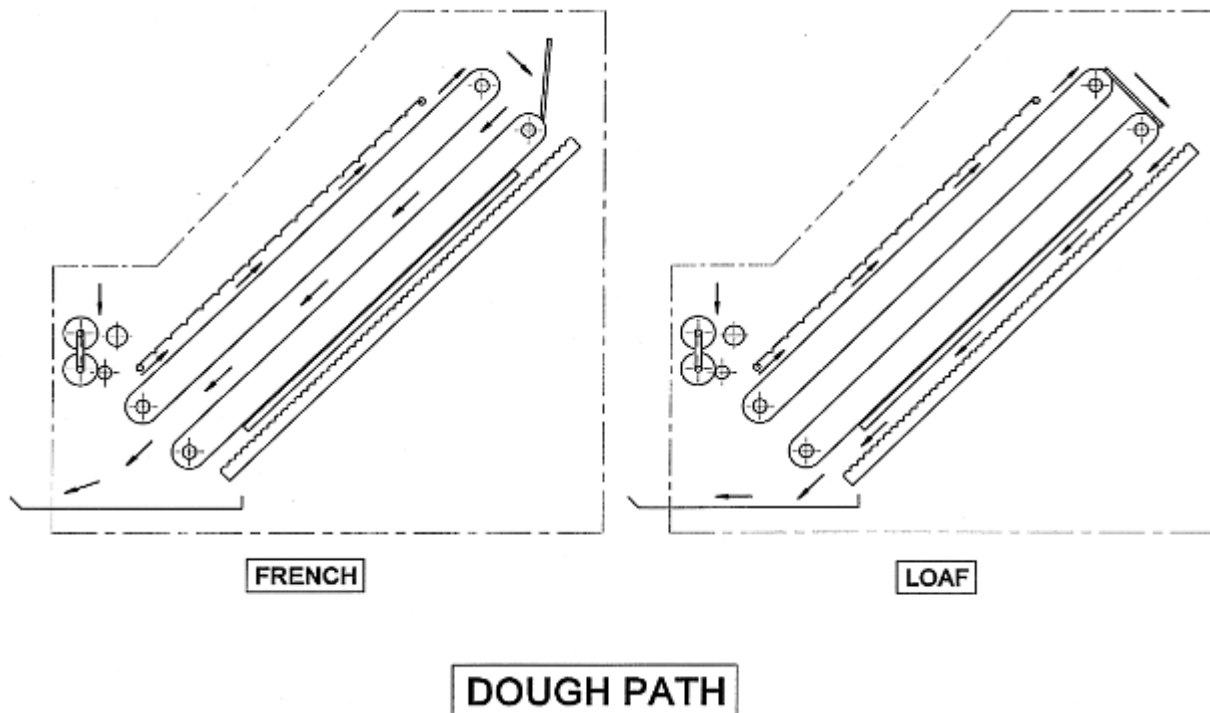

9.0 OPERATING INSTRUCTIONS


Ensure the moulder is set up and adequate tins and trays are available before starting.

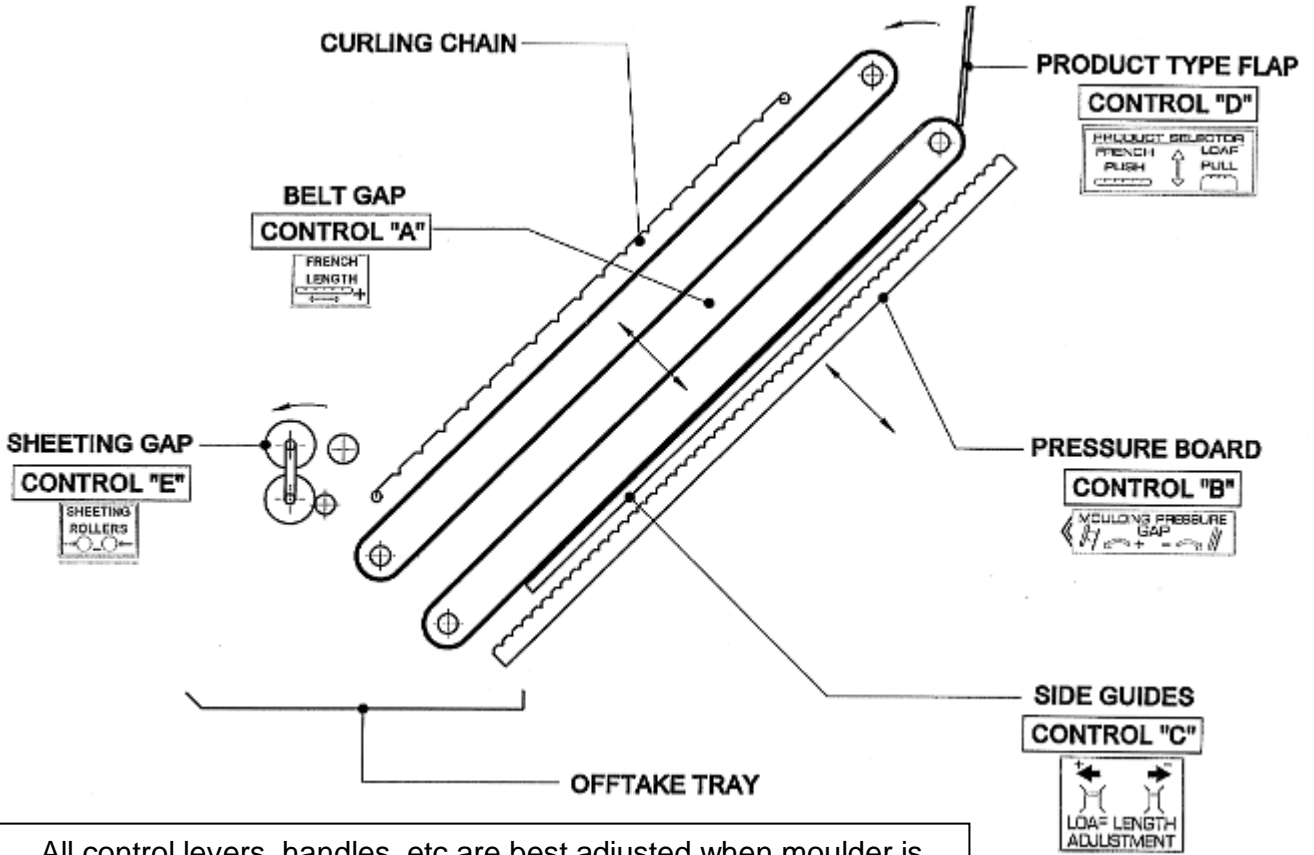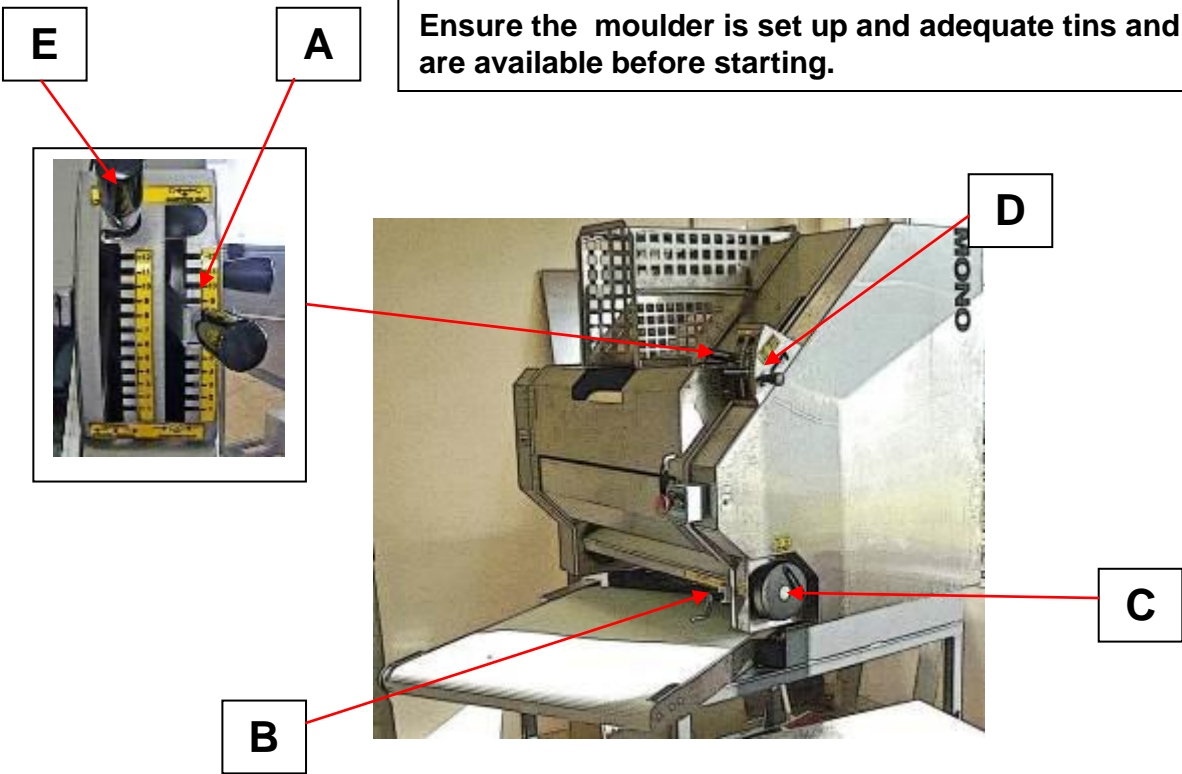

All control levers, handles, etc are best adjusted when moulder is running, although they can be adjusted with the machine stationary.

MOULDING BETWEEN BELTS FRENCH STICK AND PETIT PAIN PRODUCTS.

Push lever "D" to position required (FRENCH)

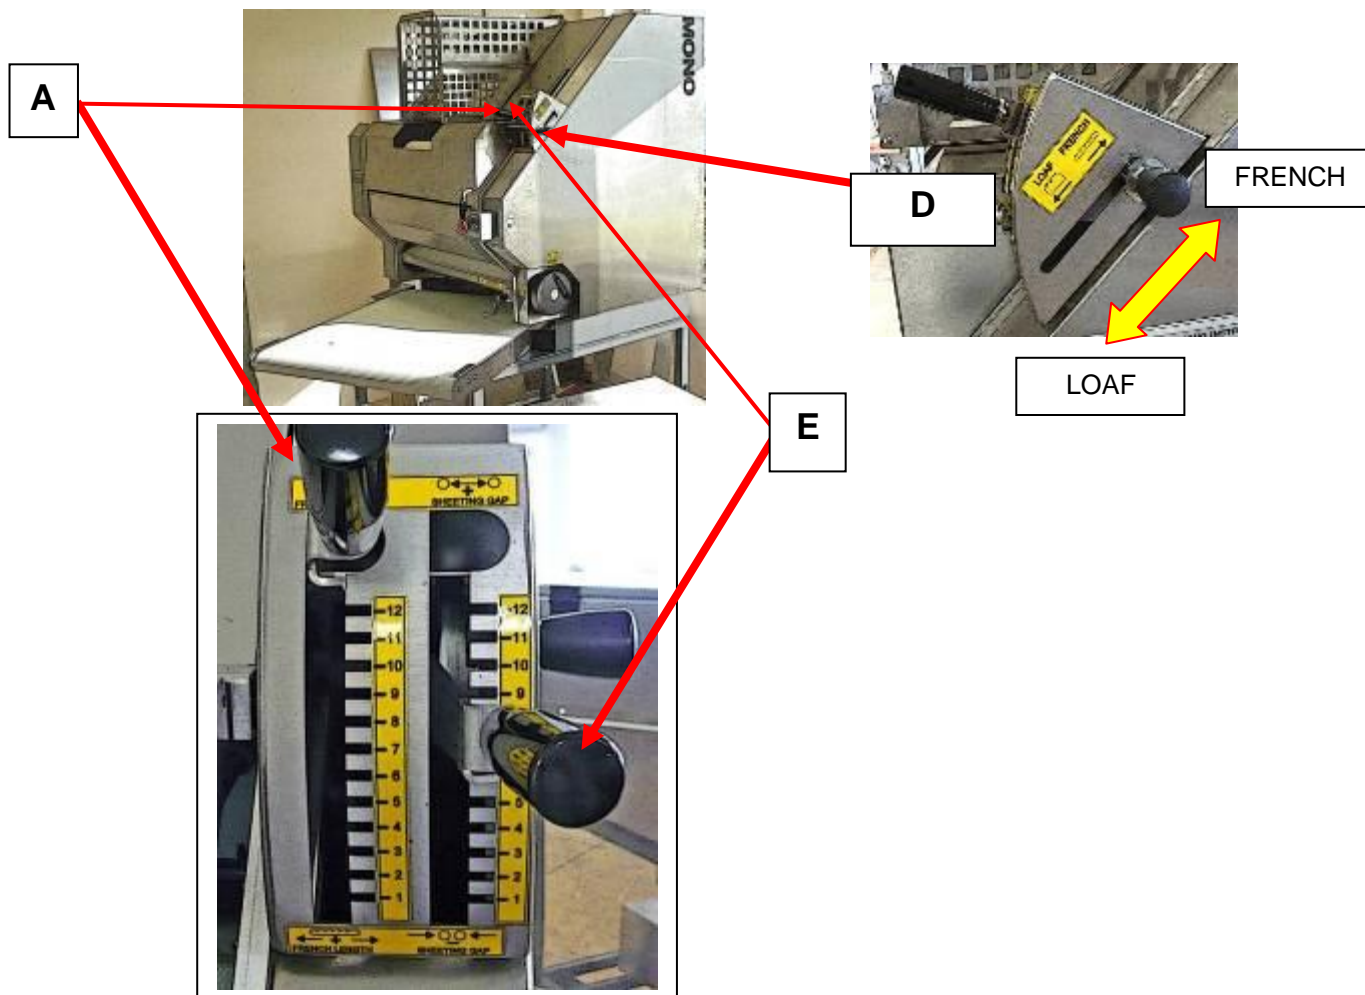


- 1 Set lever "A" to control the length of the dough piece required.
- 2 Adjust "E" to open or close the sheeting gap of the two infeed rollers.
 - *Control settings will vary according to user, dough mixes, product, machine construction etc, and are best established by the user.*
 - *It is advisable for the Bakery Manager to inform staff of settings required for all French range once established. This will result in consistent product, assuming dough condition is constant.*

MOULDING BETWEEN REAR BELT AND PRESSURE BOARD TIN BREAD & BLOOMERS.

Push lever "D" to position required (LOAF)

- 1 **Position control lever "A" to position 0** – *this ensures the correct transfer of the dough piece after curling and correct discharge onto the return conveyor.*
- 2 **Adjust handle "E"** for the infeed sheeting gap.

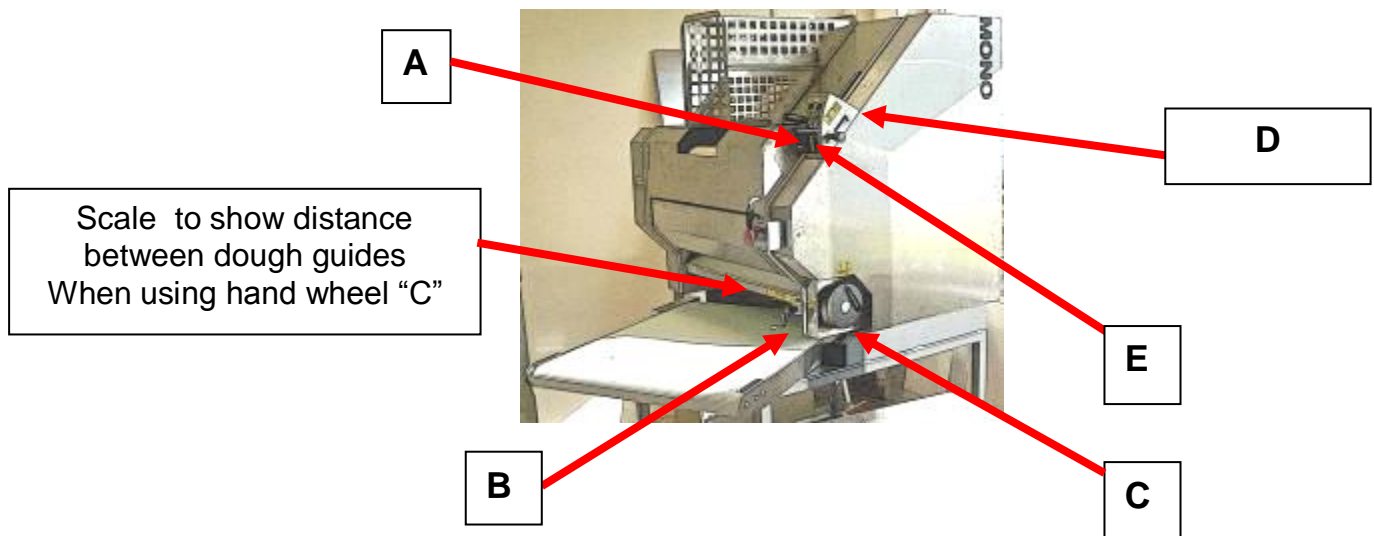

- 3 **Adjust handle "B"** for the pressure board.
Anti-clockwise will mean the numbers on the digital counter will increase and therefore the pressure on the dough will decrease. Clockwise will be the opposite. The number on the digital counter should be noted so it can be reproduced at a later date.
- 4 **Adjust hand wheel "C"** to control the length of the loaf.
Hand wheel simultaneously positions the dough side guides equally about the centreline of the moulder. The distance between the dough guides is indicated by the metal pointer and the scale
- 5 After moulding, the dough piece should be transferred from the offtake to a waiting tray.

10.0 MAINTENANCE

- 1 Refer to cleaning instructions.
- 2 Maintenance other than cleaning must be carried out by trained maintenance personnel.
- 3 It is recommended that the bearings, chain, motor, etc. be greased every six months
- 4 If a belt is tracking to the left or the right. Call in maintenance contractor immediately before any permanent damage can occur.

MAINTENANCE ENGINEER NOTES

Moulding belts should be no tighter than necessary to eliminate slippage. Over tensioning can lead to belt and/or bearing failure. The belt should be adjusted by means of the adjustment tensioning screws (shown below).

The belts should run with equal clearance between its edges and the unit side frames. If one edge of the belt is tighter than the other, it will tend to run towards the slack side. This tracking defect can be eliminated by individual adjustment of the tensioning screws.


Caution

Adjustment screws should not be continually tightened (this will cause bearing failure or the moulding belt to stretch and break). It may be that one side is too tight so should be eased off a little.

Bearings and bearing grub screws (2 per bearing) should also be checked as a seized bearing may be the cause of the moulding belt needing adjustment.

If a bearing is replaced, the grub screws should be tightened and liquid thread lock applied.

(On later models the grub screws should also be aligned with dimples in the roller shaft).

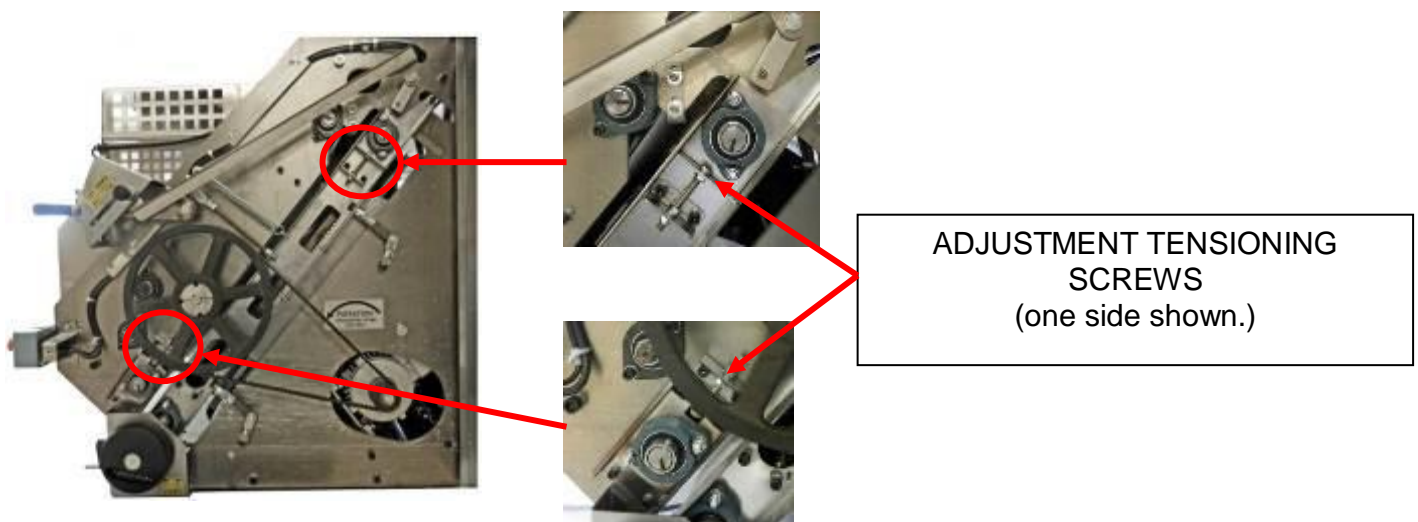

11.0 TROUBLESHOOTING

- ✓ The final dough temperature, after mixing, should not exceed the ideal. (typically 25 - 26 ° C)
- ✓ A dough conditioner containing a good relaxant is required.
- ✓ French dough should be soft but not sticky.
- ✓ Curling chain should be kept clean.

12.0 SERVICE AND SPARES ---

If a fault arises, please do not hesitate to contact the Customer Service Department, quoting the **machine serial number** on the silver information plate of the machine and on the front cover of this manual

SPARES and OVERSEAS SUPPORT:



MONO


Queensway
Swansea West Industrial Estate
Swansea. SA5 4EB UK

**email: spares@monoequip.com
Web site: www.monoequip.com**


**Tel. spares +44(0)1792 564039
switchboard +44(0)1792 561234
Fax. 01792 561016**

“V” BELT AND DRIVE INFORMATION

DUE TO CONTINUAL IMPROVEMENTS
METALWORK MAY BE SLIGHTLY
DIFFERENT ON THE MODEL YOU HAVE

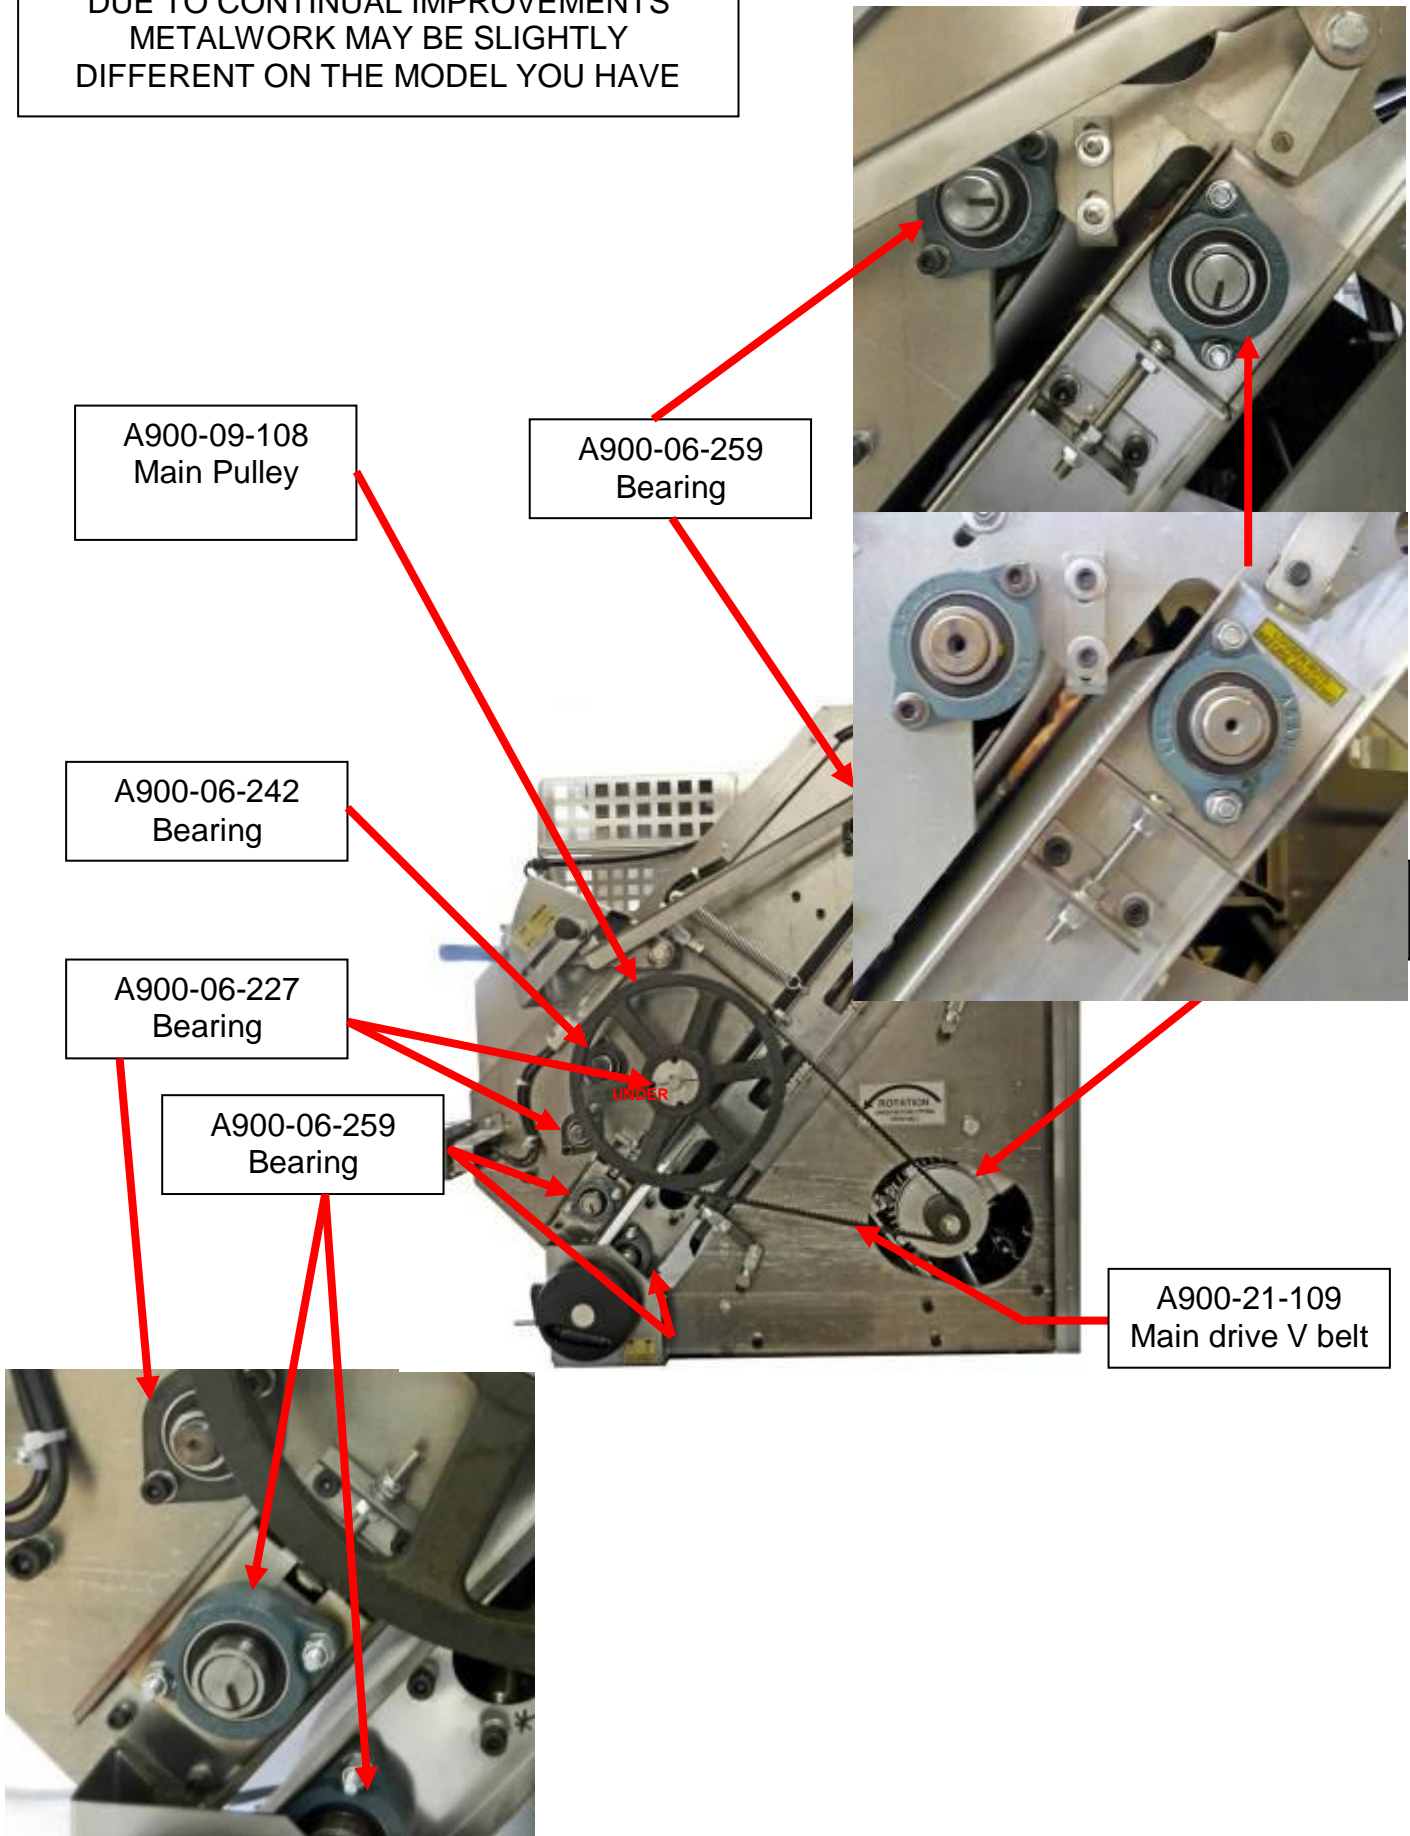


MOULDING BELT DRIVE INFORMATION

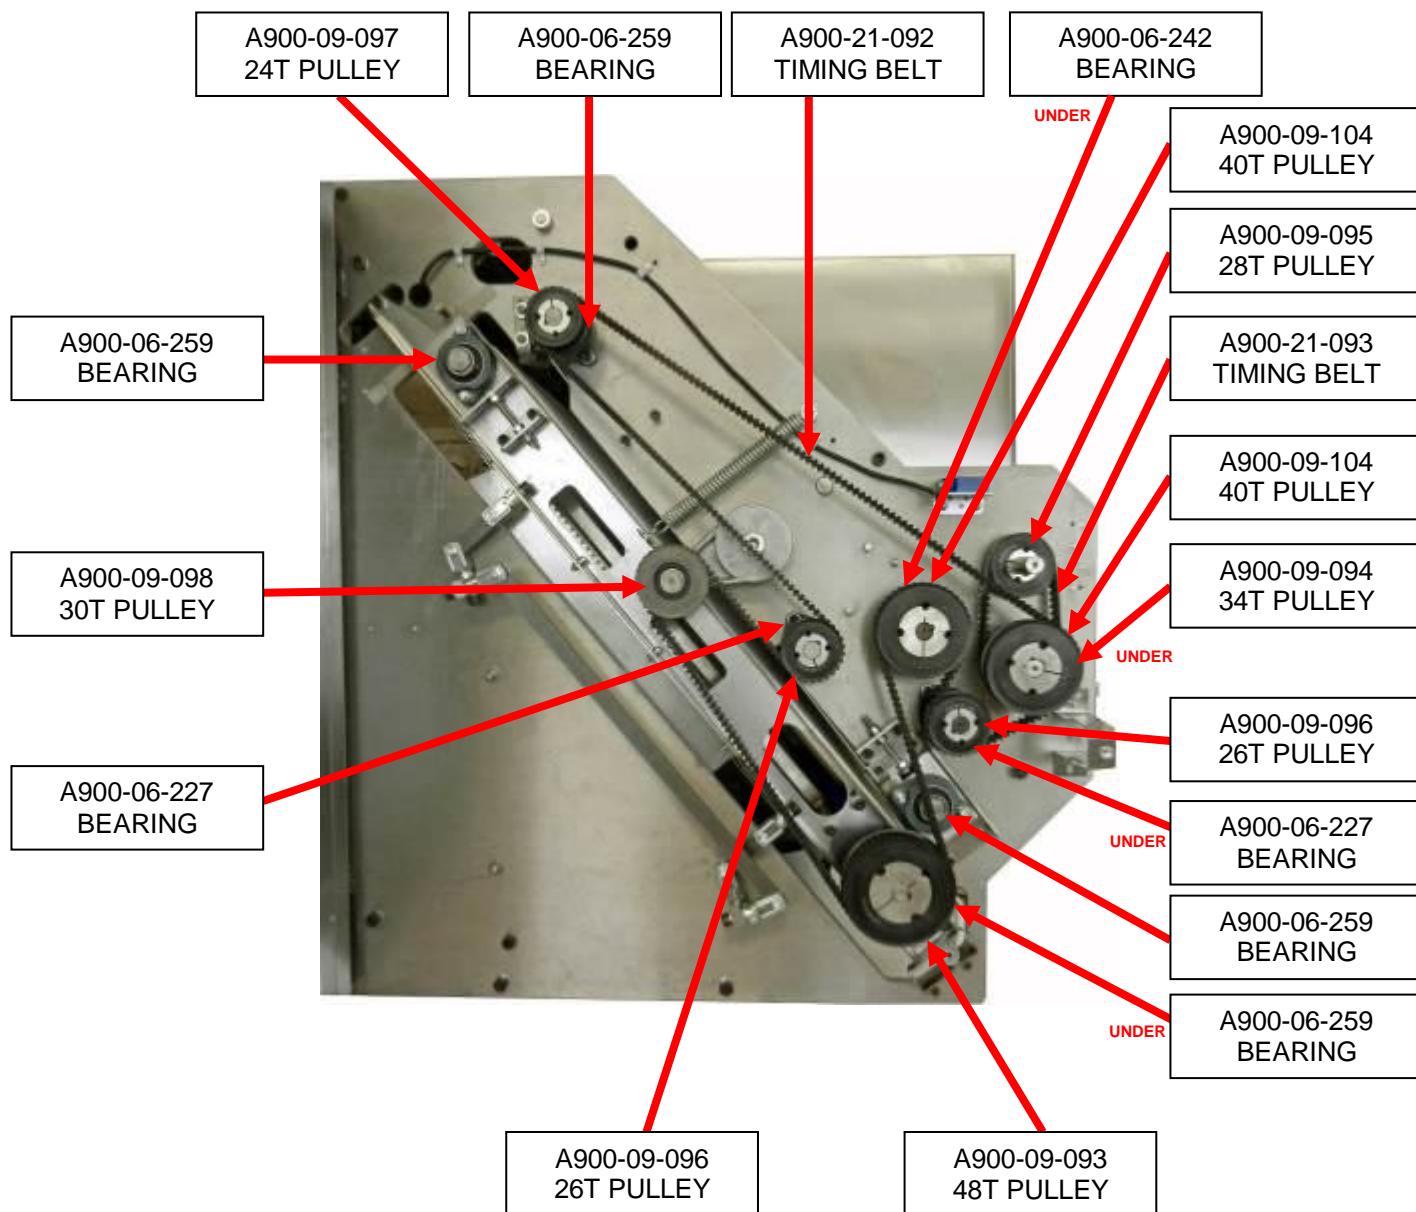

		PART NO.
PULLEY	48T	A900-09-093
	34T	A900-09-094
	28T	A900-09-095
	26T	A900-09-096
	24T	A900-09-097
	30T	A900-09-098
BELT – DOUBLE SIDED LARGE		A900-21-092
-- TIMING BELT		A900-21-093



13.0 MOULDER ELECTRICAL INFORMATION

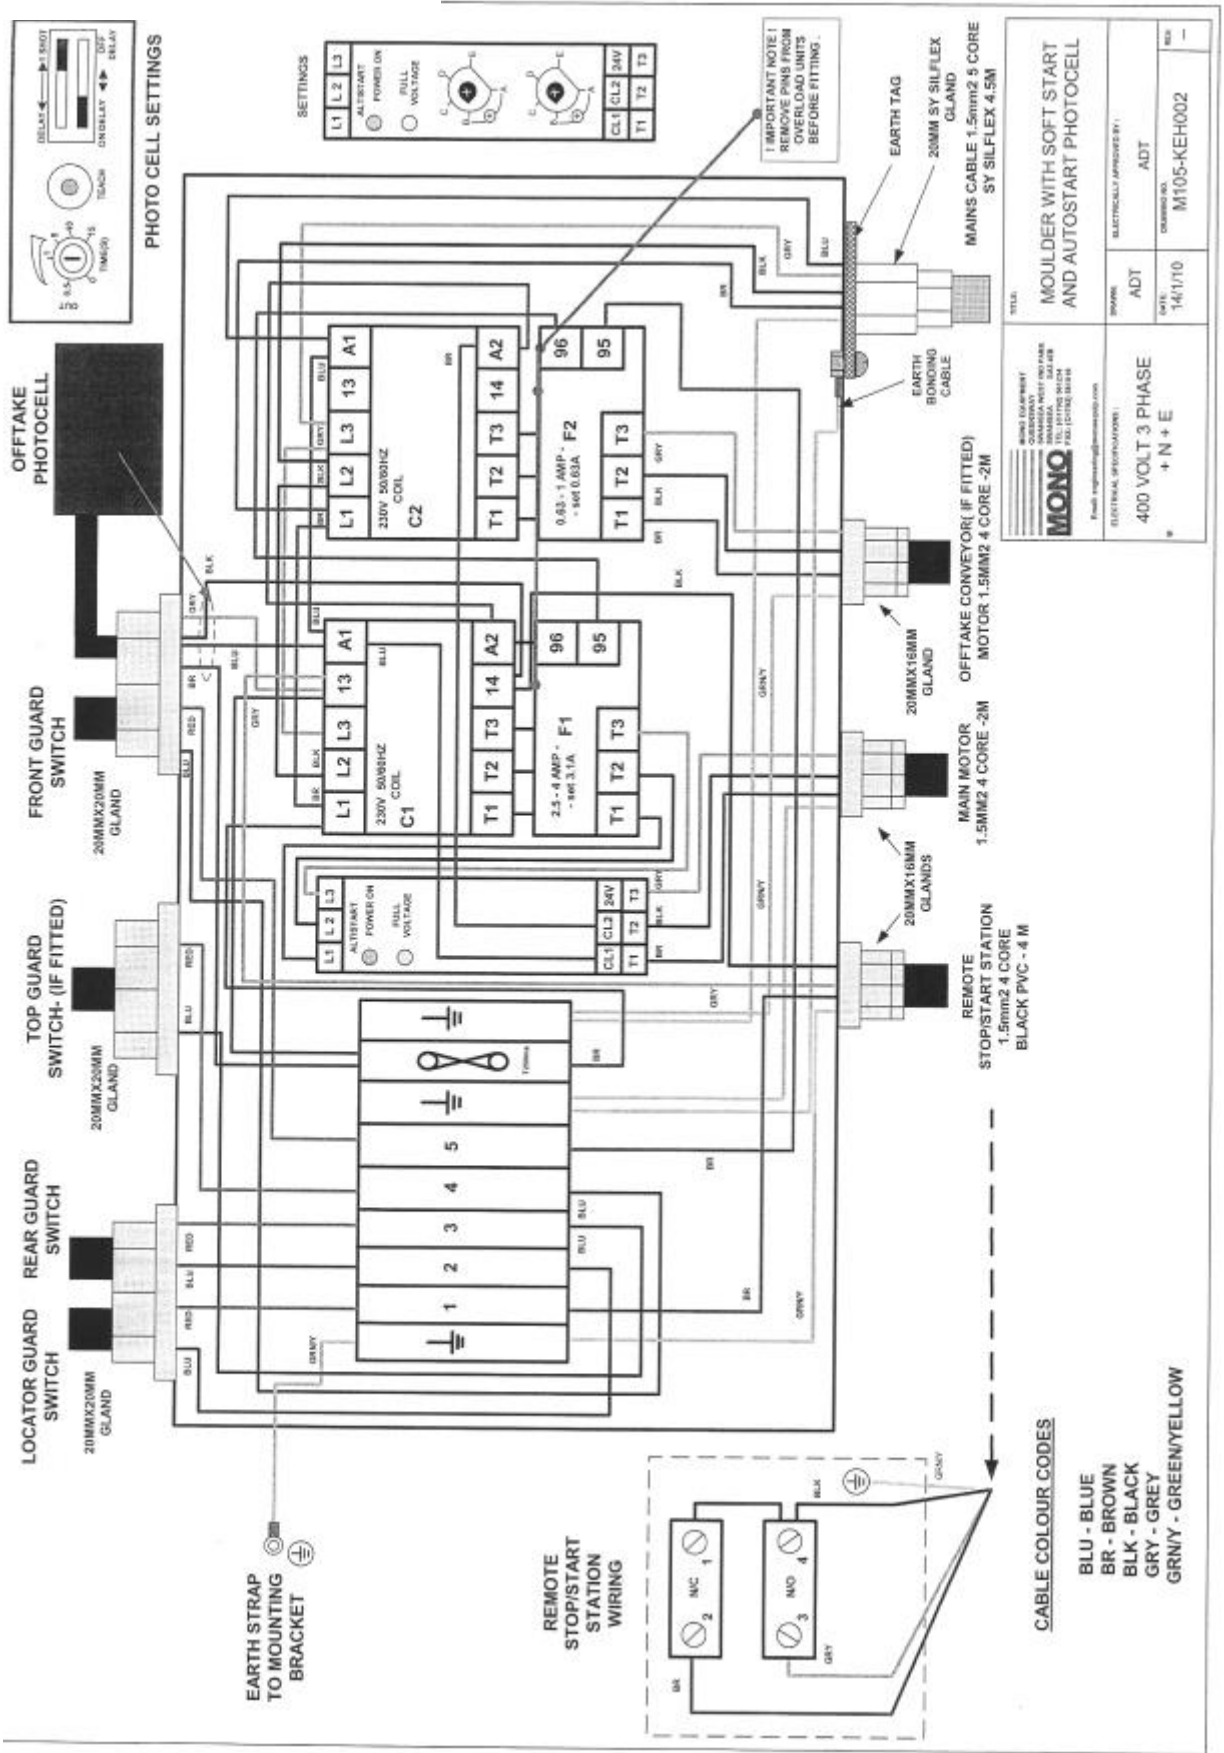

MONO <small>WIND ENGINEERING 6000 WINDY HILL PARK HEMLOCK, BC V8B TEL: (250) 363-3234 FAX: (250) 363-3234 Email: info@monoeng.com</small>		TITLE MOULDER WITH SOFT START AND AUTOSTART PHOTOCELL
DRAWN BY ADT	ELECTRICALLY APPROVED BY ADT	DATE 14/1/10
400 VOLT 3 PHASE + N + E	DRAWING NO. M105-KEH002	

- CABLE COLOUR CODES**
- BLU - BLUE
 - BR - BROWN
 - BLK - BLACK
 - GRY - GREY
 - GRN/Y - GREEN/YELLOW



Queensway
Swansea West Industrial Estate
Swansea.
SA5 4EB
UK

[email:spares@monoequip.com](mailto:spares@monoequip.com)
[Web site:www.monoequip.com](http://www.monoequip.com)

Tel. 01792 561234
Fax. 01792 561016

FOR SERVICE AND SPARES RING: **01792 564044 (24HRS)**

• **DISPOSAL**

**CARE SHOULD BE TAKEN WHEN THE MACHINE COMES TO THE END OF ITS WORKING LIFE.
ALL PARTS SHOULD BE DISPOSED OF IN THE APPROPRIATE PLACE, EITHER BY RECYCLING
OR OTHER MEANS OF DISPOSAL THAT COMPLIES WITH LOCAL REGULATIONS.
(IN UK, ENVIRONMENTAL PROTECTION ACT 1990 APPLIES)**

**DISPOSE OF UNUSED PRODUCT AND CONTAINERS
CAREFULLY AND RESPONSIBLY**