



Enter **Serial Nos.** here

DECK 1

DECK 2

DECK 3


DECK 4

DECK 5

FAN (IF FITTED)

In the event of an enquiry please quote these serial numbers.

**Store this document safely and ensure it is available at all times.**  
**Non-availability may affect the service / repair of your machine.**

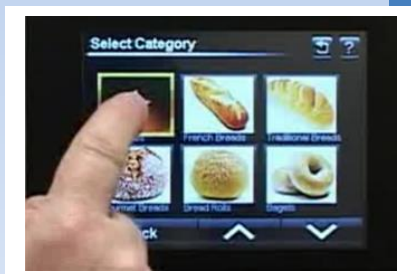

## OPERATION AND MAINTENANCE MANUAL MODULAR DECK OVEN

# ECOTOUCH CONTROL



WARNING LABEL, TO REDUCE RISK OF FIRE  
OR ELECTRIC SHOCK  
DO NOT REMOVE COVER (OR BACK)  
NO USER SERVICEABLE PARTS INSIDE  
REPAIR SHOULD BE DONE BY AUTHORISED PERSONNEL ONLY

### **IMPORTANT NOTES**

- TO REDUCE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVERS (OR BACK SHEETING). NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORISED PERSONNEL ONLY.
- FAILURE TO ADHERE TO THE CLEANING AND MAINTENANCE INSTRUCTIONS DETAILED IN THIS MANUAL COULD AFFECT THE WARRANTY OF THIS MACHINE.
- THE OVEN SHOULD ONLY BE USED FOR BAKING BREAD, PASTRIES AND CAKES
- SOME SECTIONS OF THIS MANUAL ARE FOR ENGINEERS ONLY AND THE CUSTOMER SHOULD NOT ATTEMPT TO MAKE ALTERATIONS.
- BEWARE OF HOT SURFACES.  
DO NOT TOUCH OVEN FRONT OR DOOR WITH BARE SKIN.



FG257 Adamatic ECOTOUCH MODULAR DECK UL Rev A15

# CONTENTS

Section - 1.0	Introduction
Section - 2.0	Overall Dimensions
Section - 3.0	Specifications
Section - 4.0	Safety
Section - 5.0	Installation
Section - 6.0	Isolation
Section - 7.0	Cleaning
Section - 8.0	Operating Conditions
Section - 9.0	Principles Of Operation (and baking advice)
Section - 10.0	<b>TOUCH SCREEN OPERATION</b>
	<b>-Basic operation-</b>
10-1.0	<b>Bake using “FAVOURITES” menu</b>
10-2.0	<b>“MANUAL” menu</b>
10-3.0	<b>“PROGRAMMES” menu</b>
10-4.0	<b>“MULTI-BAKE” menu</b>
10-5.0	<b>Creating a program</b>
10-6.0	<b>7-Day timer</b>
10-7.0	<b>Settings</b>
	Time and date
	Settings – General level
	Settings explained – General level
	Settings – High level
	Settings explained – High level
	Default Passcodes
10-8.0	<b>Using the USB port</b>
10-9.0	<b>Diagnostics</b>
Section - 11.0	Troubleshooting
Section - 12.0	Service Information
Section - 13.0	Spares Information

**THIS SECTION IS FOR ENGINEERS ONLY AND THE CUSTOMER SHOULD NOT ATTEMPT TO MAKE ALTERATIONS.**

Section - 14.0	Electrical Information
----------------	------------------------

Section - 15.0	WARNING and INFORMATION LABELS
----------------	--------------------------------

# 1.0 INTRODUCTION

The electric modular Deck Oven is an easy to use practical, good-looking oven, giving an excellent heat recovery rate and an even bake across a wide range of bread and confectionery products.

- Good looking and totally reliable

Conceived with the no nonsense requirements of both the independent and in-store baker in mind, and designed to visually please as well as give reliable service for many years. This oven will more than satisfy the most discerning customer.

- Top quality specification


The external and internal contact surfaces are stainless steel.

Each modular deck is fitted with durable reinforced one-piece tiles, and an increase in high-grade insulation and high temperature ceramic sealant, makes the oven more efficient.

The oven comes with a patented integral steaming system, which reduces energy consumption and the overall size of the oven. The system produces real steam with the advantages of spray steam. Pre-steam is also available to reduce the affects of long loading times.

No drainage is required.

Ecotouch ovens are supplied with **TOUCH** displays for the user-friendly control panels. This can show pictures of product types or program numbers that have been set by the user. When not being used, the screen can show your company logo. A voice prompt facility is also available for the basic instructions like "Bake over".

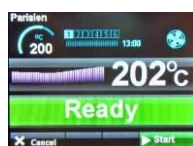

ECOTOUCH  
SCREEN  
CONTROLS




The lights are low voltage, sealed from the chamber and easily accessed from outside the oven.

Fitted with a choice of hinged easy to clean double glazed doors (using low energy-loss reflective glass for high visibility) or metal doors, means low energy consumption and the high kW rating gives good recovery.  
(0-100% heating available both top and bottom)

As it is our policy to improve our machines continuously, we reserve the right to change specifications without prior notice.

## 2.0 OVERALL DIMENSIONS

ALL DIMENSIONS ARE APPROXIMATE

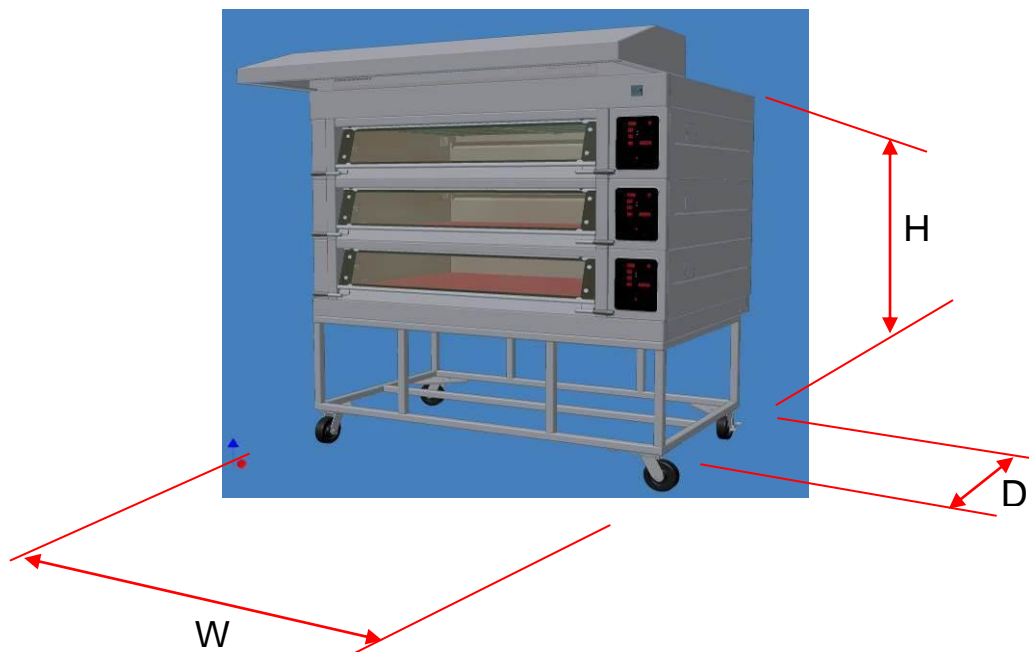


5 HIGH .....	<b>H</b> = 84"	(2135mm)
4 HIGH .....	<b>H</b> = 79.5"	(2020mm)
3 HIGH .....	<b>H</b> = 79.5"	(2020mm)

Ovens available with 1,2,3, 4, and 5 modules

32" deep modules .....	<b>D</b> = 51 ¾"	(1300mm)
3 Tray wide oven .....	<b>W</b> = 74 ½"	(1890mm)
2 Tray wide oven .....	<b>W</b> = 55 ¾"	(1416mm)
1 Tray wide oven .....	<b>W</b> = 37"	(940mm)


## 3.0 SPECIFICATIONS

Dimensions in millimetres  
25.4mm = 1"

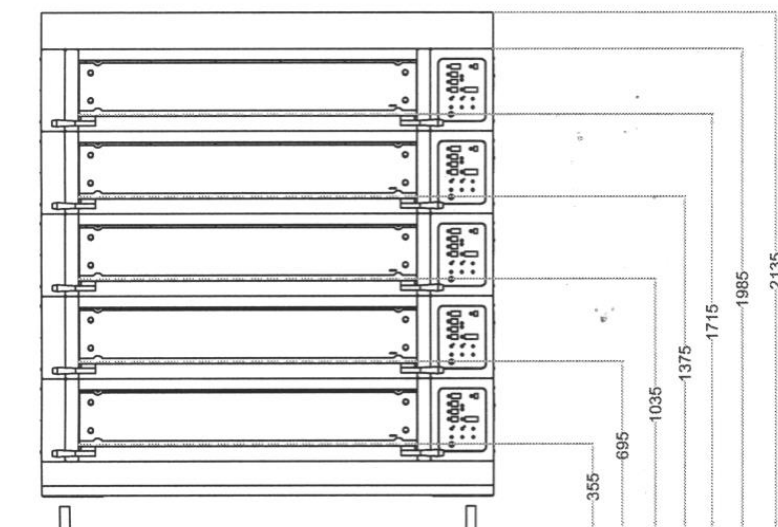



**5 DECK OVEN  
DECK PLATE HEIGHTS**

**4 DECK OVEN  
DECK PLATE HEIGHTS**

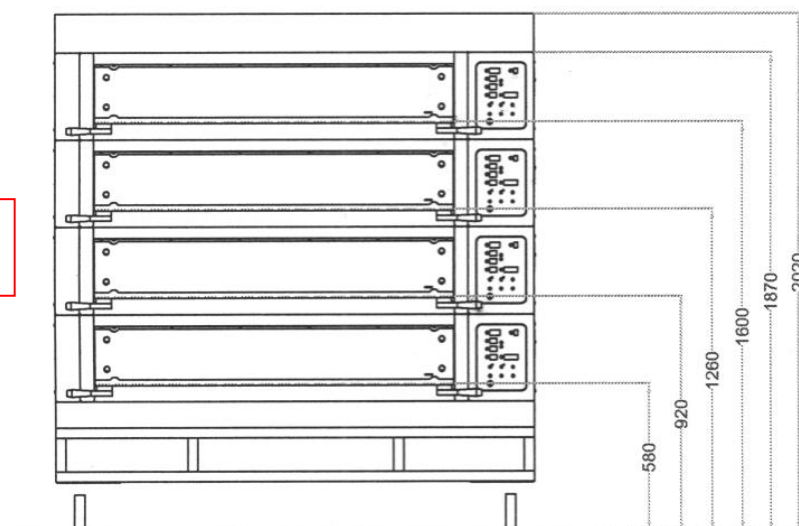

**3 DECK OVEN  
DECK PLATE HEIGHTS**

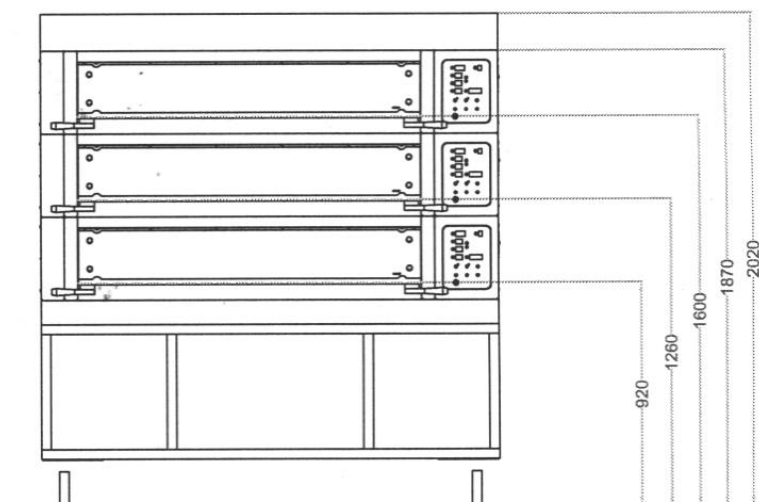

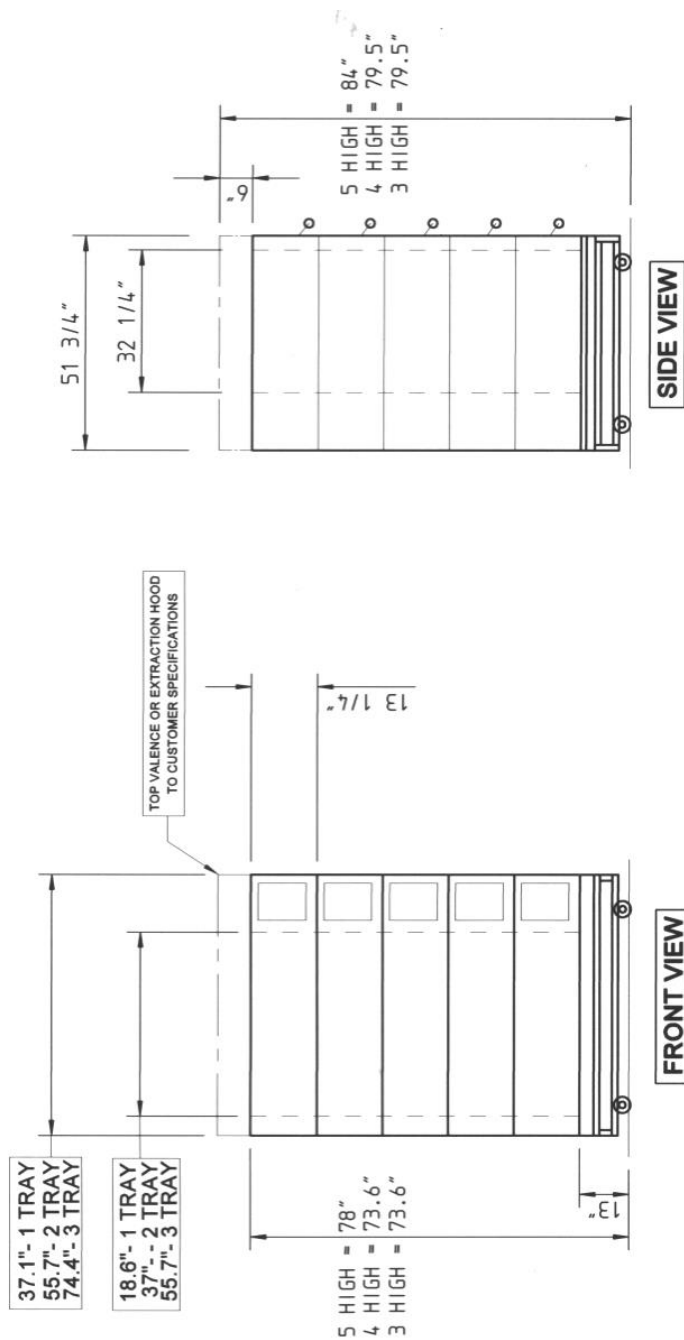

FOR WEIGHTS SEE SPECIFICATION NOTES

NOMINAL TRAY WIDTH	EXTERNAL SURFACE AREA	INTERNAL SURFACE AREA	POWER KW (PER DECK)	No. OF TRAYS (per deck)			
3 tray	26.70FT <sup>2</sup>	12.49FT <sup>2</sup>	220v - 8.85kW	24" X 32"	24" X 16"	18" X 30"	18" X 26"
2 tray	20.00FT <sup>2</sup>	8.288FT <sup>2</sup>	220v - 5.93kW	1	2	2	2
1 tray	13.34FT <sup>2</sup>	4.17FT <sup>2</sup>	220v - 3.00kW	1	1	1	1

## MONO MODULAR DECK OVEN

## **ELECTRICAL LOADINGS:**

- **SUPPLY REQUIRED PER MODULAR DECK:**

	<u>3 TRAY WIDE</u>	<u>2 TRAY WIDE</u>	<u>1 TRAY WIDE</u>
3 Phase (3 wire + ground), 220V. 60Hz	8.85kW, 24Amp	5.93kW, 18Amp	3.0kW, 9Amp
3 Phase (3 wire + ground), 208V. 60Hz	7.90kW, 22Amp	5.31kW, 17Amp	2.7kW, 8.7Amp
OVERLOAD PROTECTION	30AMPS	30AMPS	
3 Phase (3 wire + ground), 480V. 60Hz	8.78kW, 12.4Amp	5.86kW, 8.2Amp	4.9kW, 7Amp
OVERLOAD PROTECTION	20AMPS	20AMPS	

- **SUPPLY REQUIRED FOR CANOPY:**

1 Phase (2 wire + ground), 220V. 60Hz Fused at **6Amps**

1 Phase (2 wire + ground), 208V. 60Hz Fused at **6Amps**

**NOISE LEVEL:** Less than 80 Db

## **WEIGHT:**

(ALL WEIGHTS ARE APPROXIMATE)

Total oven weight	– 2 tray wide, 3 deck	= 1569lbs	(711kg)
(Including base frame)	– 3 tray wide, 3 deck	= 2345lbs	(1064kg)
	– 1 tray wide, 3 deck	= TBA	
Weight per oven chamber module	– 2 tray wide	= 421lbs	(191.5kg)
	– 3 tray wide	= 575lbs	(261kg)
	– 1 tray wide	= TBA	
Weight per oven canopy module	– 2 tray wide	= 31lbs	(14kg)
	– 3 tray wide	= 38lbs	(17kg)
	– 1 tray wide	= TBA	
Weight per fan module	– 2 tray wide	= 62lbs	(28kg)
	– 3 tray wide	= 62lbs	(28kg)
	– 1 tray wide	= TBA	
Weight of product (max) per deck	– 2 tray wide	= 86lbs	(39kg)
	– 3 tray wide	= 131lbs	(60kg)
	– 1 tray wide	= TBA	



## 4.0 SAFETY

**All maintenance must be made with the oven disconnected from the power supply and then only by fully trained authorized persons.**

- Check all cover panels, and any pipefittings are securely positioned.
- Check oven door handles are not damaged.
- **Do not operate a deck's steaming system with oven door open.**
- Always use oven gloves when loading the oven.
- When products are removed from the oven, ensure:
  - (a) Tins are knocked out and stored directly onto tin storage trolley or rack  
(Do not leave hot tins on the floor or on tables).
  - (b) Trays are put into a rack and the rack is wheeled to a safe cooling area.
- Do not store items on top of the oven.
- Do not store items behind the oven.
- Beware of hot surfaces. Do not touch oven front or door with bare skin.
- All operatives must be fully trained
- People undergoing training must be under direct supervision
- The oven should only be used for baking bread, pastries and cakes (for other products please contact your oven supplier)
- No unauthorized modifications should be made to the oven.
- **Do not walk on the roof of the oven**
- **DISPOSAL**  
Care should be taken when the oven comes to the end of its working life. All parts should be disposed of in the appropriate place, either recycling or other means as the law permits at the time.

**NOTE: BAKERY STAFF MUST NOT UNDER ANY CIRCUMSTANCES REMOVE PANELS TO ACCESS ANY PART OF THE DECK OVEN.**

**Panels should only be removed by an Adamatic maintenance engineer (or other fully trained maintenance contractor) for repairs or maintenance, **after isolating oven from power supply.****

**The Bakery Manager or the Bakery Supervisor must carry out the above daily safety checks**

## 5.0 INSTALLATION

### GENERAL

- A hard smooth level floor is recommended on which to position the oven and access for maintenance should be considered.  
*The oven is not designed to be "built in" so sufficient clearance must be left in front of the access panels (right hand side) to allow for servicing.*
- If not chosen as an oven option, it is recommended that an extraction hood be placed above the oven to disperse excess steam and heat, which could have an adverse effect on the bakery ceiling and ambient temperature.

- A wall isolator rated at 30Amps **must** be available in order to completely isolate the oven.

#### **THIS ISOLATOR MUST BE CLEARLY ACCESSIBLE TO THE OVEN OPERATOR**

- A chain retainer should be fitted, that is shorter than the power cables, to protect them from strain if the oven is moved. (Fit to the wall or floor and the base, using hole provided in castor fixing corner plates).
- Installation must be made by a trained authorized engineer and all utilities must be installed by licensed contractors and must conform to all local and state building codes.
- The oven must be "run in" as stated in the initial start up instructions.

### ELECTRICAL CONNECTIONS

- Each modular deck requires its own power supply.

- **SUPPLY REQUIRED PER MODULAR DECK:**

	<u>3 TRAY WIDE</u>	<u>2 TRAY WIDE</u>	<u>1 TRAY WIDE</u>
3 Phase (3 wire + ground), 220v. 60Hz	8.85kW, 24Amp	5.93kW, 18Amp	3.0kW, 9Amp
3 Phase (3 wire + ground), 208v. 60Hz OVERLOAD PROTECTION	7.90kW, 22Amp 30AMPS	5.31kW, 17Amp 30AMPS	2.7kW, 8.7Amp
3 Phase (3 wire + ground), 480v. 60Hz	8.78kW, 12.4Amp	5.86kW, 8.2Amp	4.9kW, 7Amp
OVERLOAD PROTECTION	20AMPS	20AMPS	

- **SUPPLY REQUIRED FOR CANOPY:**

1 Phase (2 wire + ground), 220v. 60Hz Fused at **6Amps**



1 Phase (2 wire + ground), 208v. 60Hz Fused at **6Amps**

# DECK OVEN BUILDING

- A** BASE TO DECK MODULE
- B** SEALANT
- C** MODULE TO MODULE
- D** FIXING MODULES
- E** FLUE JOINTS
- F** EVAPORATING/DRIP TRAY
- G** SIDE PANELS and EARTHQUAKE BRACKETS
- H** IMPORTANT OPERATIONS
- I** WATER SYSTEM SETUP
- J** EXHAUST CONNECTIONS
- K** INITIAL START-UP

## LIFTING POINTS

**M10 THREADED LIFTING POINTS, 4 POSITIONS  
(ALSO USED AS LOCATORS TO POSITION EACH DECK)**

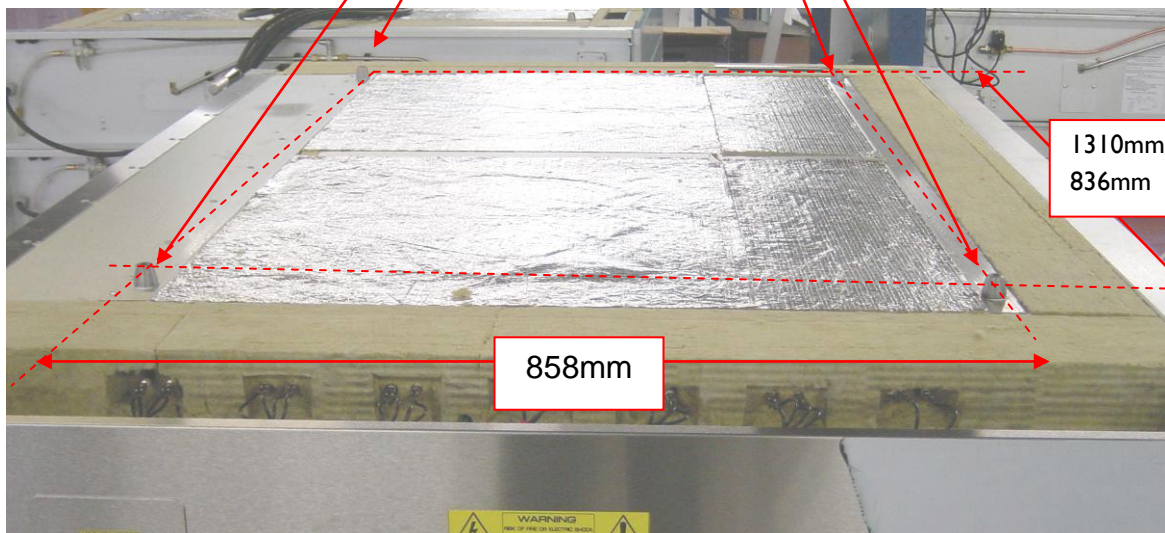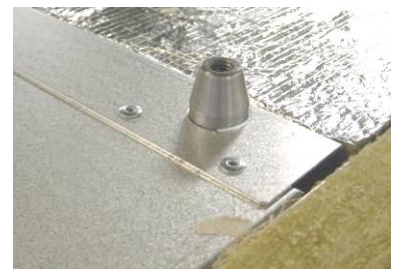


FG257 Adamatic ECOTOUCH MODULAR DECK UL Rev A15

## JOINING DECK SECTIONS

**A**


FRONT

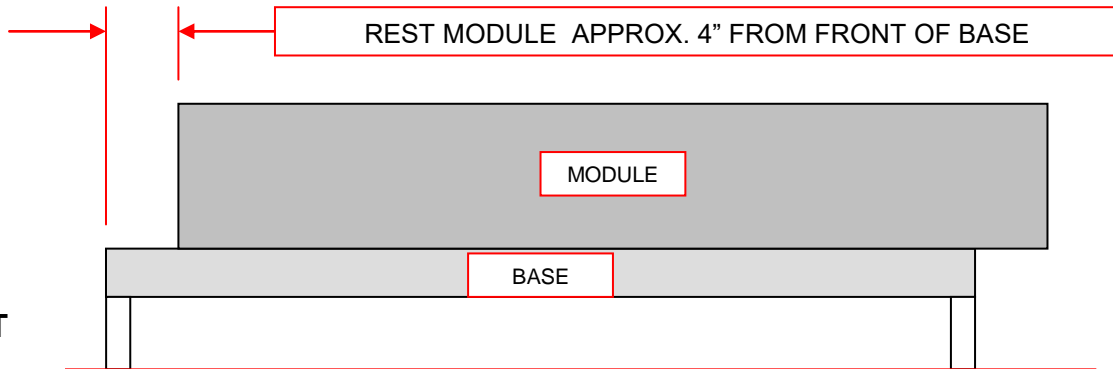

**B**

SEALANT ACROSS  
FRONT

APPLY SILICON ALL THE WAY ACROSS FRONT JOIN AREA.  
LIFT MODULE AND LOWER ONTO POSITIONING PINS  
THIS WILL COMPRESS THE SEALANT.

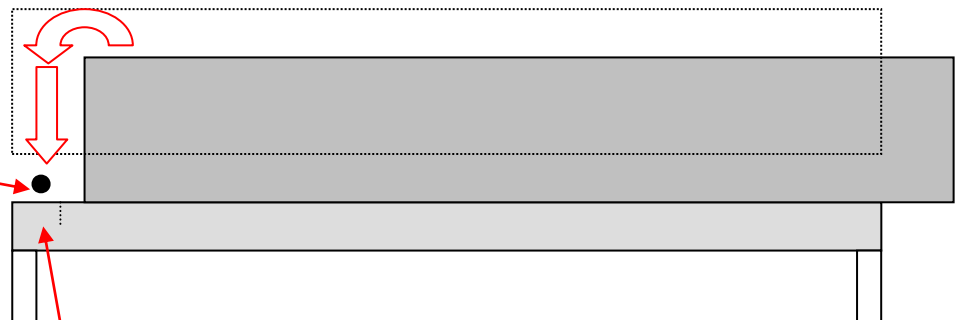


BOLT BASE AND MODULE TOGETHER AT 4 CORNERS

**C**

FRONT


SEAL AND POSITION EACH ADDITIONAL MODULE AS ABOVE.  
SEE INSTRUCTIONS FOLLOWING FOR FIXING.

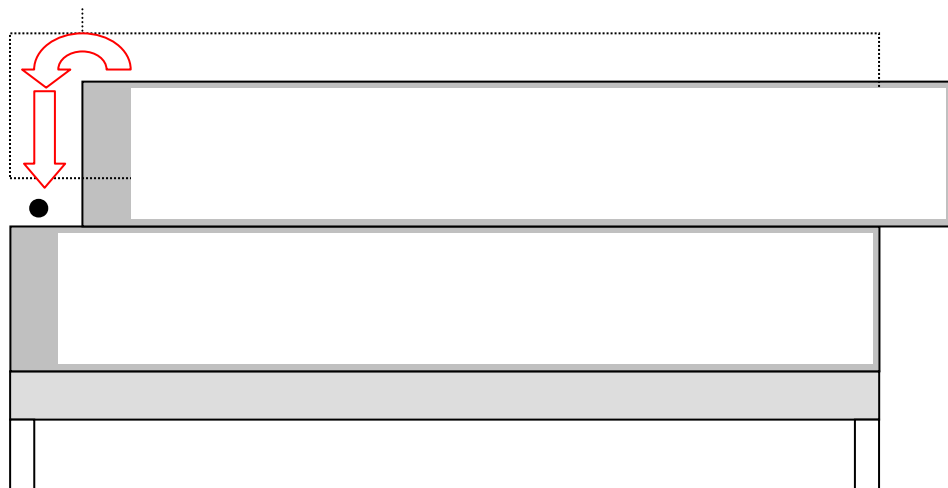


**ENSURE ALL FRONT FACES LINE UP THEN  
BOLT TOGETHER EACH MODULE.  
1 FIXING EACH SIDE AT FRONT.**

**D**

**FRONT**

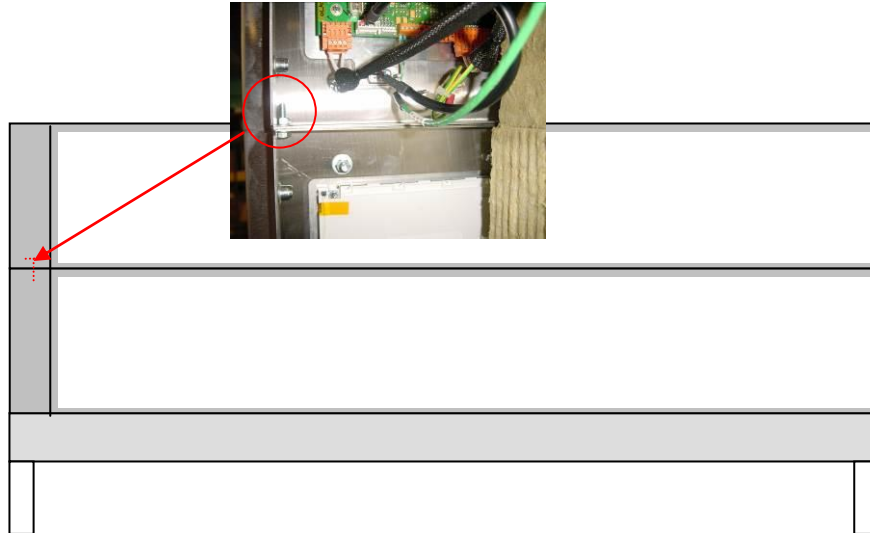

**E**

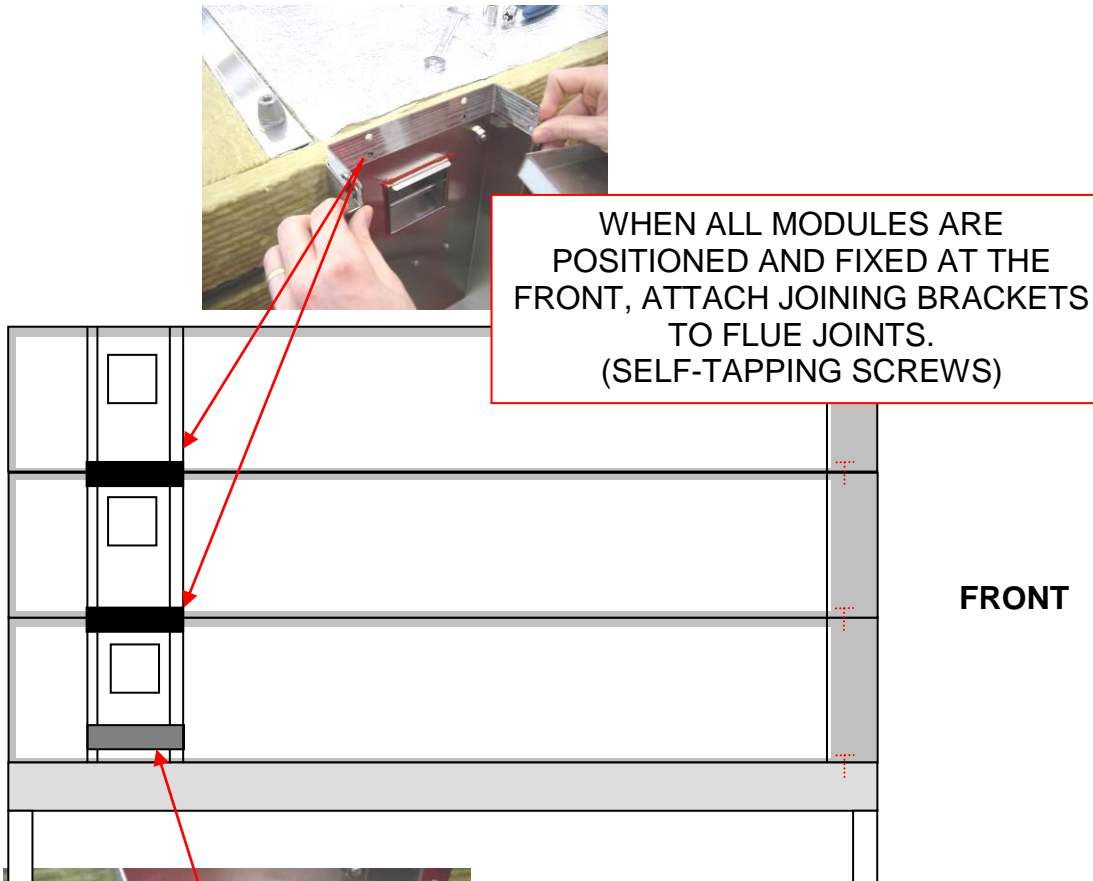

**F**




**FIT EVAPORATING DRIP TRAY  
TO THE BOTTOM SECTION.  
(SELF-TAPPING SCREWS)**

**G**

**FIT SIDE PANELS.**

FIX SCREWS BUT DO NOT TIGHTEN.  
MOVE PANELS TO LINE UP FRONT EDGES  
(HOLES ARE SLOTTED) AND THEN TIGHTEN SCREWS.

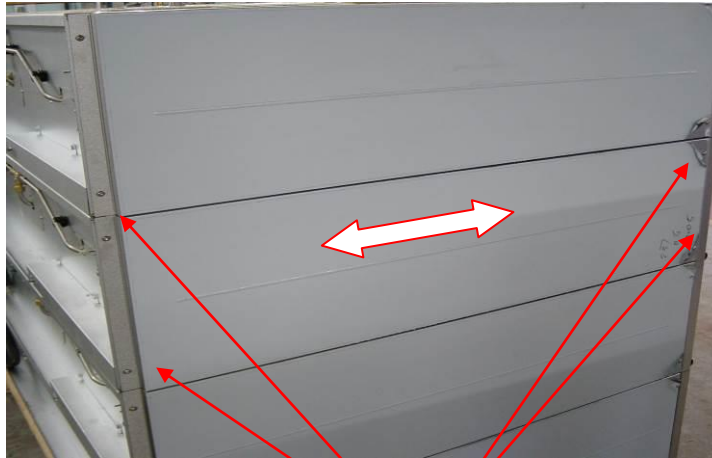

**FRONT**


**SCREWS**

**CLAMPING DOWN IN EARTHQUAKE ZONES**

The base structure should be held in place by bolting down to the floor with suitable fixings, using bracket part number **247-01-00075** in diagonally opposite corners.



Holes for fixings

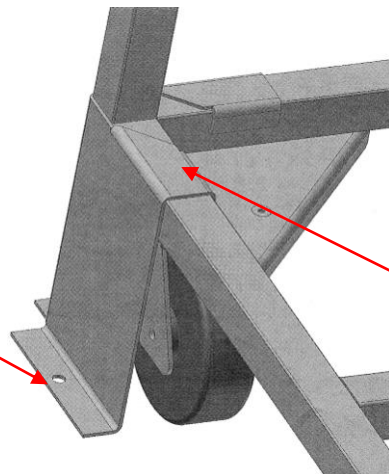

Clamp bracket (247-01-00075) over frame and fix to floor in 2 positions

**NOTE**

If this method of fixing down is used, enough space should be left surrounding the oven to allow for maintenance and cleaning, without moving the oven.




# H

## IMPORTANT OPERATIONS

### EARTH STRAP

EARTH (GROUND) STRAPS **MUST** BE CONNECTED BETWEEN EACH SECTION.

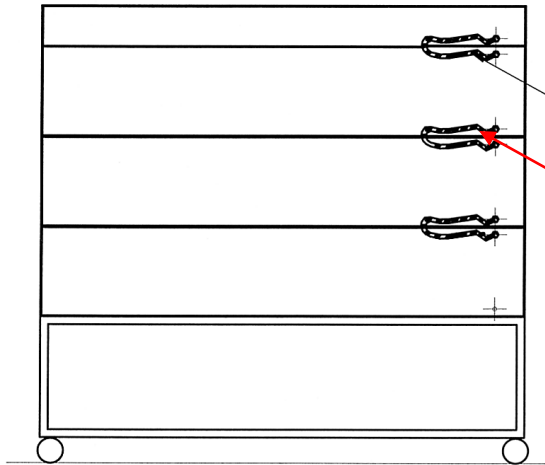

**PART NUMBER  
M158-25-11200  
SUPPLIED**



### TILE RETAINING BRACKETS



RETAINING BRACKETS IN 2 POSITIONS ON EACH DECK



POSITION ON DELIVERY



TURN BRACKET 180 DEGREES.



POSITION AFTER INSTALLATION

REMOVE SCREWS (2 PER BRACKET, NOT SHOWN).  
TURN BRACKET 180 DEGREES.  
ADJUST BRACKET TO TOUCH TILE AND REFIT SCREWS.  
THIS MUST BE DONE ON EACH DECK.

**BRACKET PART No.M257-06-00015**

# I

## WATER SUPPLY REQUIREMENTS

**The set up procedure on the next page must be followed to allow the steaming system to function correctly**

**THIS EQUIPMENT IS TO BE INSTALLED TO COMPLY WITH THE APPLICABLE FEDERAL, STATE, OR LOCAL PLUMBING CODES**

- All ovens with steam require a ½" NPT hot or cold water supply at a pressure of 2 - 3 bar (29 – 44 psi). Located approximately 10" from the right and 4" from the top of the stand when facing the front of the oven.
- Only one water supply is required per oven. A manifold supplies all decks from one connection point.
- For proper operation of the steam system it is recommended that the water supply follows the following specifications:

**Hardness** 0-4 grains per gallon

**PH range** 7.0 to 8.5

**Chloride concentration** 0 –30 ppm

**Calcium** 0 – 4 ppm

**Magnesium** 0 – 4 ppm

**Alkalinity** 0 – 20 ppm

**Consult your water treatment company for proper water filtration system information.**

- No drain is required for this oven.
- A Dual Check Valve Backflow Prevention Device is supplied fitted to the water inlet manifold.




# WATER SYSTEM SETUP PROCEDURE

**It is imperative that the water delivery to the deck oven is checked for the steam system to operate correctly**

1. Flush out the main feed pipe to be used, until water runs clear and free from debris.
2. Connect main feed to oven.
3. Connect flexible hoses to each deck.
4. Place a container under the test valve.
5. Slowly open test valve fully and with the water flowing check the regulator is set to 0.75 bar. If not adjust using the screw above the valve.
  - **Never use the oven above this setting**
6. When the pressure has stabilised shut the test valve.

REPEAT 4,5 AND 6 AT THE END OF INSTALLATION.

**NOTE. DYNAMIC PRESSURE, NOT STATIC, IS BEING MEASURED.**


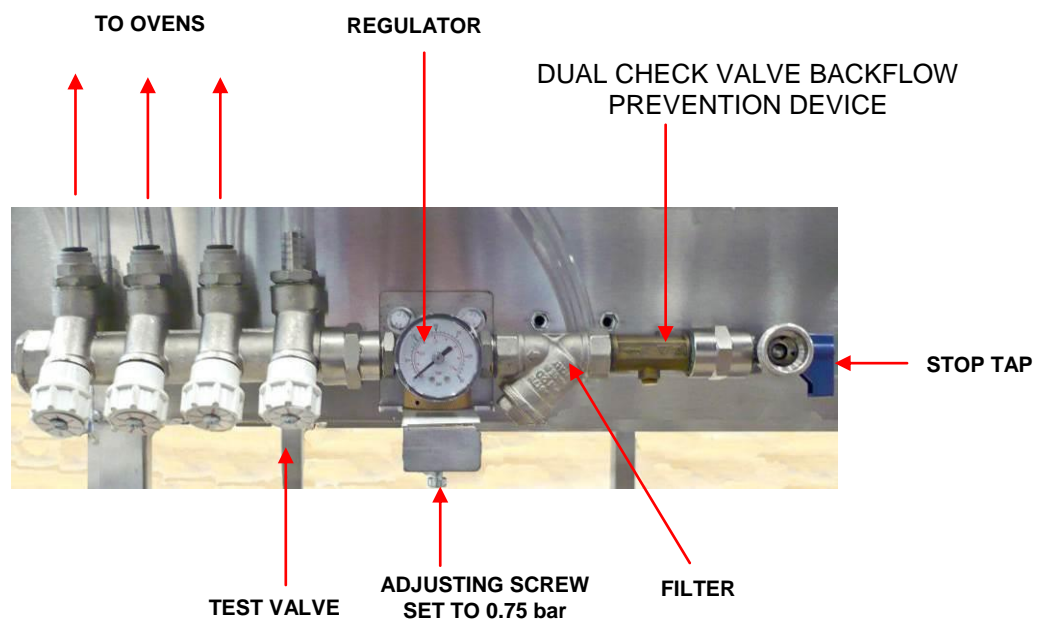


## **WATER REGULATOR SET UP** LOCATED ON REAR OF OVEN

# J

## Exhaust Connections (IF CANOPY FITTED)

- Ideally an exhaust duct should rise 78" (2 metres) above the bakery roof protected from wind and birds by a duct protector.
- It should be of a suitable material to take the high temperatures and humidity expected.
- It should be flexible and easily removable at the oven connection point.  
*This allows the oven to be moved for cleaning when required.*

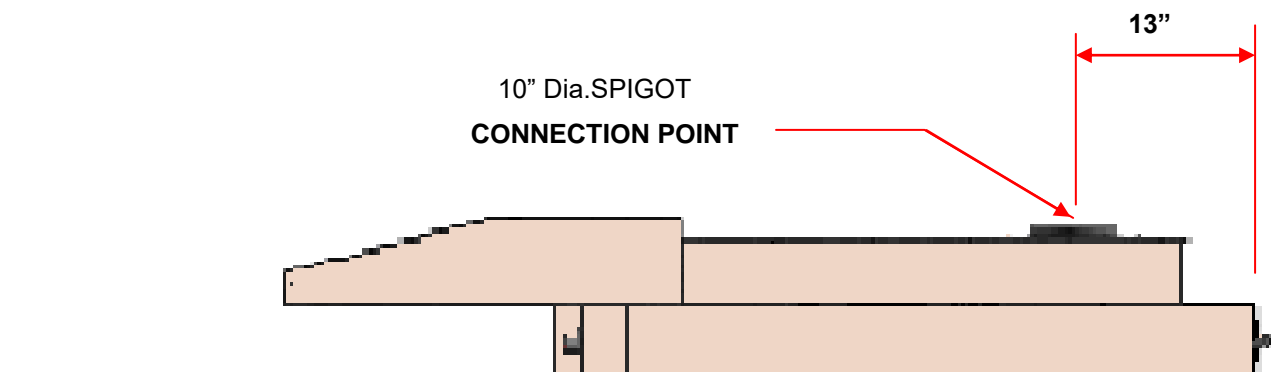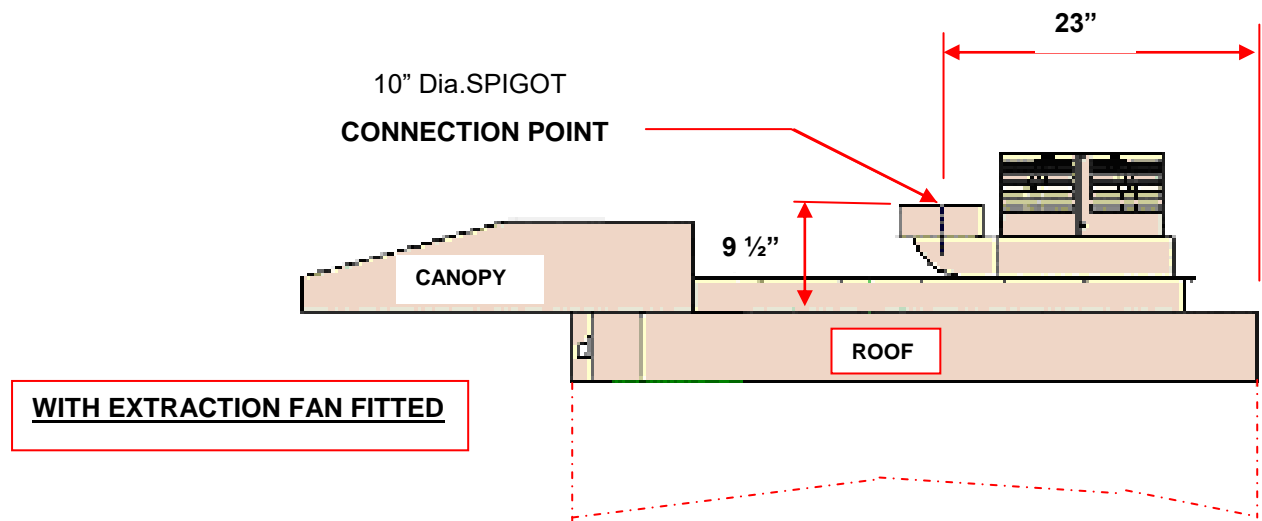

**WITHOUT EXTRACTION FAN FITTED**

# K

## INITIAL START UP

THIS PROCEDURE MUST BE ADHERED TO FOR THE OVEN WARRANTY TO BE VALID.


In order for the oven to give good reliable service the deck tiles must be initially brought up to temperature as stated below. After this running in period the oven can be used as required.

### Running in procedure

1. Turn the oven on and note the temperature shown.  
(This will be the temperature inside the cooking chamber)
2. The temperature needs to rise to 110deg C, at no more than 2deg a minute.  
DO NOT USE BOTTOM HEAT AT ANY TIME.
3. Take the temperature up to 260deg C, at no more than 1deg in 2 minutes.  
THIS WILL TAKE 5 HOURS.

### BAKING TILES -- INSTRUCTIONS FOR FIRST TIME USE

THIS PROCEDURE MUST BE USED FOR THE OVEN WARRANTY TO BE VALID

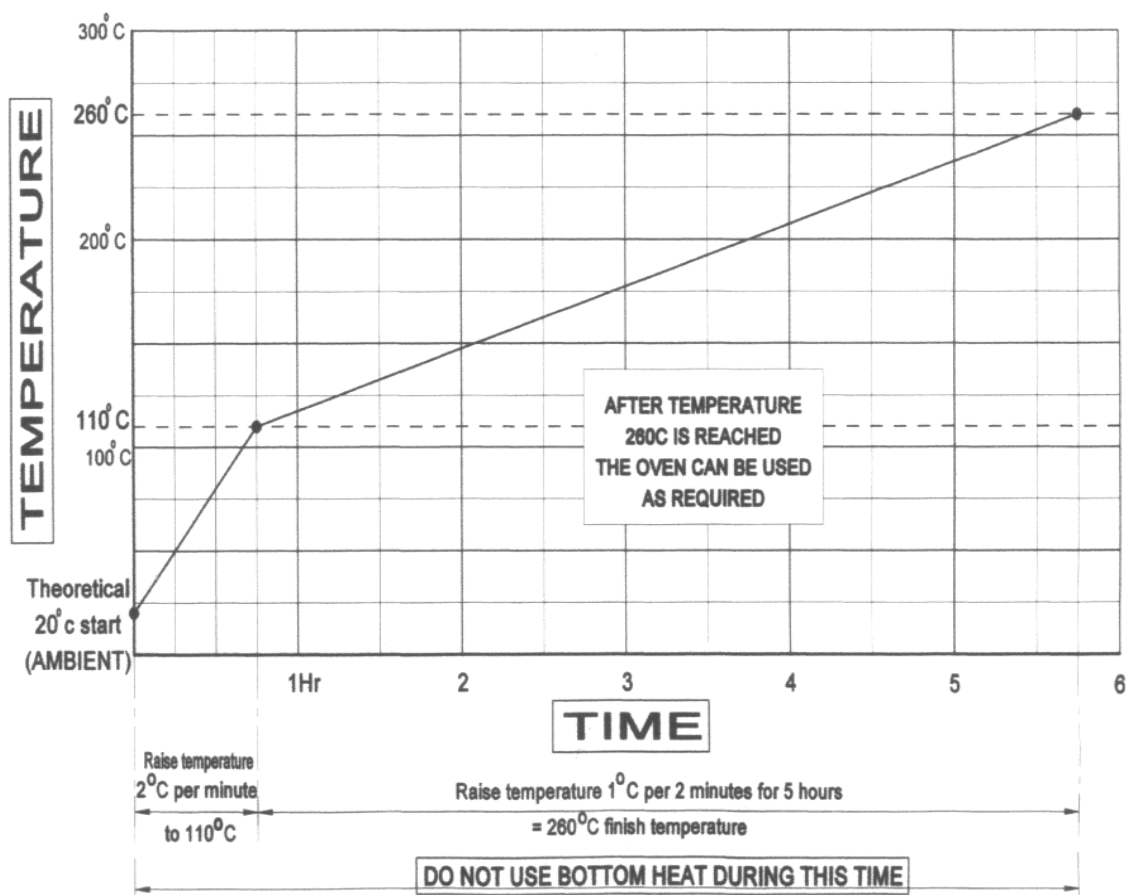

## 6.0 ISOLATION

### **WARNING**

**THE “POWER OFF” BUTTON ON THE FRONT OF THE OVEN DOES NOT ISOLATE THE POWER SUPPLY.**

---

**A WALL ISOLATOR RATED AT 30AMPS MUST BE AVAILABLE IN ORDER TO COMPLETELY ISOLATE THE OVEN.**

**THIS ISOLATOR MUST BE CLEARLY ACCESSIBLE**  
**AND KNOWN TO THE OVEN OPERATOR**

---

**TO STOP THE OVEN IN AN  
EMERGENCY SWITCH OFF AT THE  
MAIN WALL ISOLATOR**

## 7.0 CLEANING

### DAILY CLEANING INSTRUCTIONS

**ISOLATE OVEN FROM MAINS SUPPLY BEFORE CLEANING.**

- After the oven has been allowed to cool, (this could take several hours), sweep any debris out.  
Use a vacuum cleaner with metal attachments (able to take heat) if available.
- Brush down and wipe oven front, back and sides with a damp cloth.
- Spot clean with a damp cloth, which has been soaked in a solution of mild detergent, and hot water, paying particular attention to ensure excess water is not applied around the area of the electrical panels.

**NOTE: TAKE CARE WATER DOES NOT ENTER CONTROL PANEL MOUNTING OR ROOF MOUNTED FAN.**

### WEEKLY CLEANING INSTRUCTIONS

**ISOLATE OVEN FROM MAINS SUPPLY BEFORE CLEANING.**

- Complete daily cleaning as above.
- Scrub oven wheels with a mild detergent and hot water using nylon cleaning brush (excess water will rust metal).
- Ensure the oven roof area is clear of debris and dust build up.  
**(DO NOT STAND ON THE OVEN ROOF)**

## 8.0 OPERATING CONDITIONS

- It is recommended that a space of at least 6 feet be left in front of the oven for ease of operation and safety.
- Bakery utensils must not be used to operate the control panel buttons.

## 9.0 PRINCIPLE OF OPERATION

**NOTE:** REFER TO YOUR OWN COMPANY'S RECIPE MANUAL FOR OVEN TEMPERATURE SETTINGS.

*PLEASE ALSO REFER TO THE BAKING ADVICE ON THE NEXT PAGE*

Products are baked in an insulated heated chamber. The temperature is regulated by a thermocouple having a read-out on the front control panel. Baking heat is radiant with top and bottom heat being adjusted by means of separate controls. This enables heat to be "balanced" according to product requirement.

STEAM is provided from an integral steam unit, and is introduced into the chamber on demand. This is automatically controlled by the programmed parameters.

**Once steamed the oven will not steam until the steam unit has recovered heat, typically 3-8 minutes depending on the amount of steam selected.**

---

All ovens are fitted with a **steam damper** that evacuates steam humidity into a vent at the side of the oven.

## **Baking Advice**

### **For the best results from deck Ovens**

#### **Loading**

1. **Do not place the products too close together.** *If the loaves are close to each other after oven spring (expansion), the loaves sides will be soft and may collapse on cooling.*
2. **Place the product evenly within the oven.** *Product bunched together will be paler than those widely spaced.*
3. **Product should not be placed too close to the edge of the tile.** *As it expands towards the front one side of the loaf may enter the cooler air by the door.*
4. **Door opening should be kept to a minimum** *because cold air enters the oven cooling the sidewalls and roof causing the finished product to be lighter locally at the front and wasting heat. If loading times are consistently long you can alter the front top heat to put more heat at the front.*
5. **If the loading takes a long time product can form a skin,** *which causes an imbalance and a less attractive finish. By using the pre-steam function before loading this can be minimised. This function turns the elements off and injects steam to increase the humidity.*
6. **If whilst baking, the bake is found to be consistently dark or light at the front** *the front top element can also be adjusted for local fluctuations in voltage.*

#### **Bake settings**

1. A good starting point for baking breads in deck ovens is 437F (225C)  
Top heat 60-65 bottom heat 40.
2. For cookies etc the heat in the oven can be turned almost off, however it may still be necessary to place the trays with cookies etc onto upturned trays on the oven sole.
3. **Steam** should be kept to a minimum, for energy efficiency, depending on the product and finish. **Times between 9 and 12 seconds should be adequate.**
4. It is a good idea not to focus on the temperature recovery this can vary from oven to oven.

## **Is the product baked in the time and to the quality you require?**

*Below are some tips for modifying the bake so you get the product that you require.*

- If your product is **light on top**.

Either decrease the bottom heat and extend bake time or increase the top heat.

- If the product **sides are pale** and the **top dark**.

When the products are spaced well apart drop the top heat and extend the bake.

- **If the bake time is too long.**


First increase the top heat to speed recovery.

If this does not give sufficient savings increase the bake temperature.

- **To thicken the crust**

Set the damper to open longer. Different ovens will require different lengths of time.



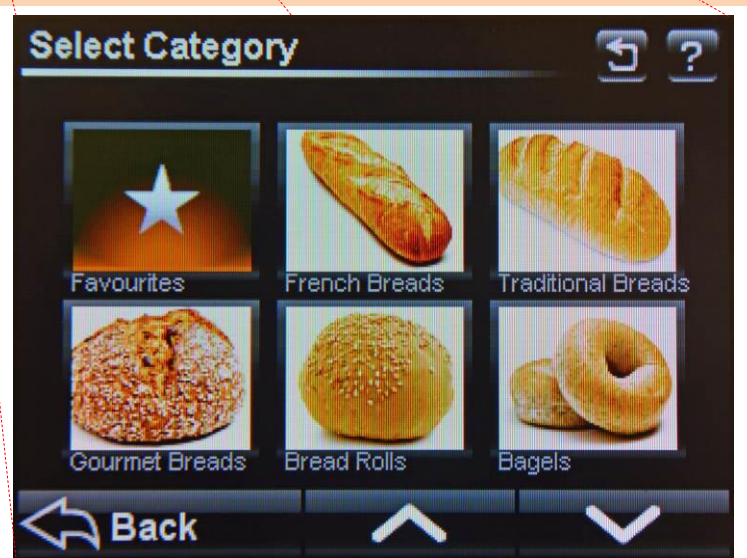


## 10.0 TOUCHSCREEN OPERATING INSTRUCTIONS

# BASIC OPERATION

**ALL OPERATIONS ARE ACTIVATED BY TOUCHING AREAS ON THE SCREEN, WHICH WILL PASS YOU ON TO THE NEXT INFORMATION PANEL.**


DO NOT USE EXCESSIVE FORCE.  
(THE PRESSURE REQUIRED TO OPERATE THE PANEL, CAN BE ALTERED IN THE SETTINGS SECTION)

TOUCH THE SCREEN  
ON THE AREA YOU  
REQUIRE TO  
ACTIVATE

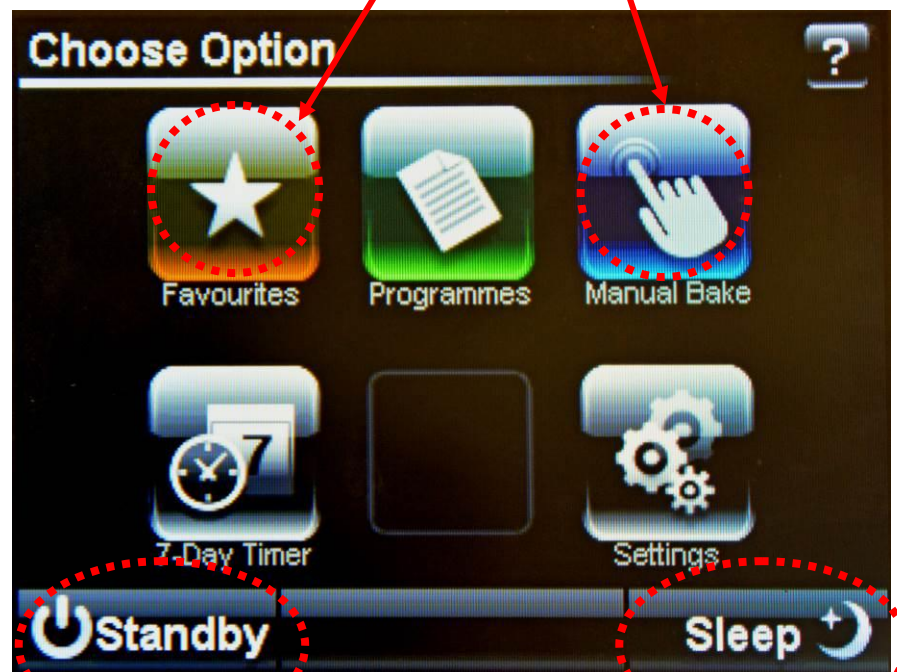

## STANDBY

THE OVEN TURNS OFF.  
TOUCH THE SCREEN TO GO TO  
THE OPTION SCREEN.

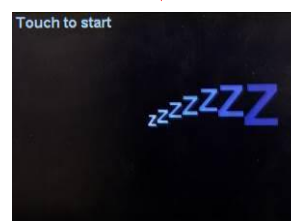

## SLEEP

THE OVEN STAYS AT 100c AND  
HEATS TO LAST PROGRAM  
TEMPERATURE WHEN THE  
SCREEN IS TOUCHED.  
OPTION SCREEN THEN SHOWS.

# 10 -1 BAKING USING “FAVOURITES” MENU

TOUCH TO OPEN  
THE FAVOURITES  
SELECT SCREEN


1



OPTION SCREEN

TOUCH THE  
NAME OF THE  
PRODUCT  
REQUIRED

2

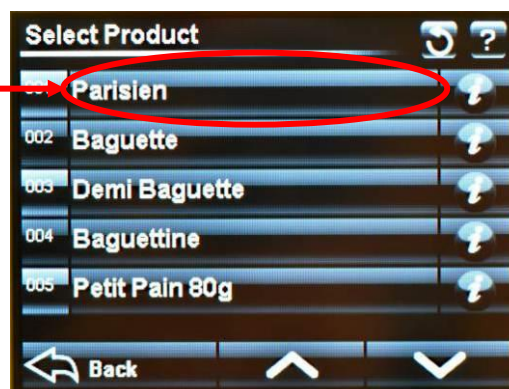


SELECT SCREEN

TOUCH THE  
“FULL LOAD” OR  
“HALF LOAD” AS REQUIRED.

(THIS ONLY APPEARS IF HALF LOAD IS SAVED IN  
THE PROGRAM)

3

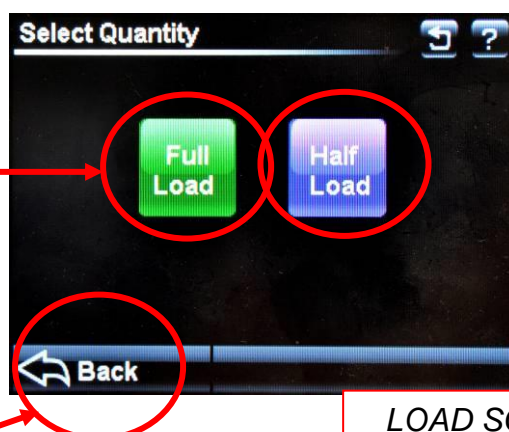

LOAD SCREEN

TO RETURN TO THE  
PREVIOUS SCREEN  
TOUCH THE “BACK”  
BUTTON AT ANY TIME

IF THE OVEN IS NOT UP TO TEMPERATURE IT WILL SHOW THE HEATING SCREEN.

**WAIT FOR THE OVEN TO REACH TEMPERATURE**

IF THE OVEN IS TOO HOT FOR THE TEMPERATURE CHOSEN, THE SCREEN WILL TELL YOU TO OPEN THE DOOR TO AID COOLING.



HEATING SCREEN

READY SCREEN

WHEN OVEN IS AT THE CORRECT TEMPERATURE THE “READY” SCREEN WILL SHOW.

1. OPEN DOOR AND LOAD PRODUCT.
2. CLOSE THE DOOR FULLY.
3. TOUCH “START”

**TIP**

TO HELP TO KEEP THE OVEN HOT, TRY NOT TO KEEP THE DOOR OPEN MORE THAN NEEDED

4



**BAKE IN PROGRESS SCREEN**

THIS SCREEN WILL SHOW WHILE THE PRODUCT IS BAKING

SET TEMPERATURE

TEMPERATURE PROFILE BAR


BAKE TIME PROGRESS BAR

**NOTE**

The actual temperature shown will rise and fall above and below the set temperature as the oven cools and reheats. *This is not a fault*

**ACTUAL OVEN TEMPERATURE**

This will rise and fall round the set temperature

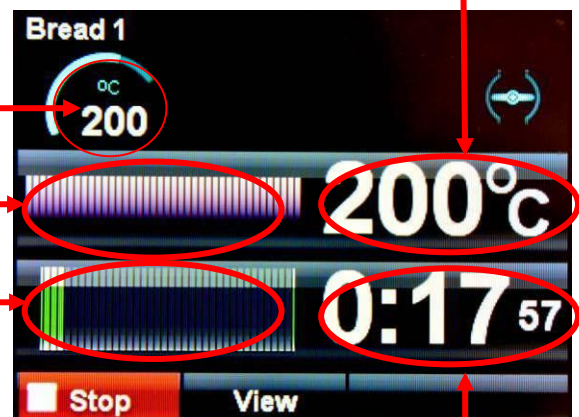

BAKE TIME LEFT



## BAKE OVER SCREEN

AT THE END OF THE BAKE TIME, A  
SOUNDER WILL BE HEARD AND  
"BAKE OVER" WILL FLASH.  
TOUCH "**STOP**" AND OPEN THE  
DOOR TO REMOVE THE PRODUCT.

TO KEEP THE OVEN BAKING FOR  
EXTRA MINUTES  
THE "+ 2 MIN" BUTTON CAN BE  
TOUCHED.  
(This time can be altered in set up)


5



## TOUCHING "VIEW" BUTTON DURING A BAKE

TOUCHING "**VIEW**" BUTTON DURING A  
BAKE WILL SHOW THE SETTINGS FOR  
THE BAKE IN PROGRESS.

TOUCH "**CANCEL**" TO GO BACK TO THE  
PREVIOUS SCREEN.

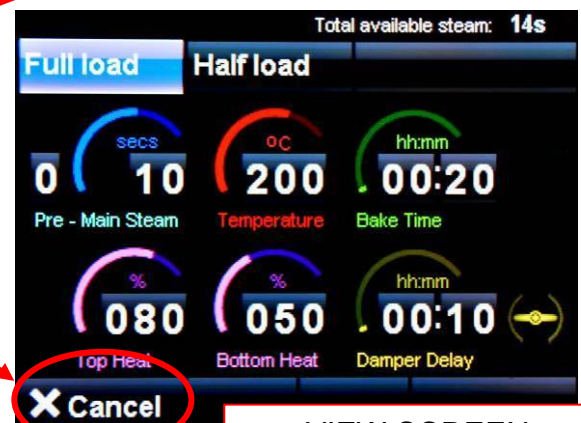

## 10 - 2 BAKING USING MANUAL MENU

TOUCH TO OPEN  
MANUAL BAKE  
SCREEN



OPTION SCREEN

### SET BAKE TIME AND TEMPERATURE

**SET TOP AND  
BOTTOM HEAT**  
TOUCH POSITION ON  
THE SCREEN TO  
ACTIVATE THE  
KEYBOARD SCREEN.  
KEY IN REQUIRED  
SETTING AND  
TOUCH "OK"



MANUAL BAKE SCREEN

**SET BAKE TEMPERATURE**  
TOUCH TEMPERATURE ON THE  
SCREEN TO ACTIVATE THE KEYBOARD  
SCREEN.  
KEY IN REQUIRED TEMPERATURE AND  
TOUCH "OK"

2



**SET BAKE TIME**  
TOUCH TIME ON THE SCREEN TO  
ACTIVATE THE KEYBOARD SCREEN.  
KEY IN REQUIRED TIME AND  
TOUCH "OK"

3



#### NOTE:

TIME DOES NOT HAVE TO BE SET IN MANUAL MODE. (ONLY TEMPERATURE)  
WHEN "START" IS PRESSED, THE TIME WILL COUNT UP INSTEAD OF DOWN.  
TOUCH "STOP" TO FINISH THE BAKE.

# USE STEAM TIME AND DAMPER IF REQUIRED

## STEAM

4

TOUCH AND HOLD FOR THE TIME (SECONDS) STEAM IS REQUIRED.  
(THIS CAN BE USED BEFORE OR DURING THE BAKE)

## DAMPER

5

TOUCH TO OPEN THE DAMPER DURING THE BAKE.  
(SYMBOL SHOWS GREEN)  
  
TOUCH TO CLOSE THE DAMPER.  
(SYMBOL SHOWS RED)

MANUAL BAKE SCREEN 2



## CANCEL

TOUCH AT ANYTIME TO GO BACK TO THE SETTING SCREEN.

## START

6

TOUCH "START" TO START BAKE



TOUCH "STOP" WHEN END OF BAKE BUZZER SOUNDS OR WHEN REQUIRED IF NO TIME WAS ENTERED

7

## SAVE (KEEP) MANUAL PROGRAM, IF REQUIRED




MANUAL BAKE SCREEN 3

### SAVE SETTINGS

IF NO TIME WAS ENTERED AT THE START OF THE BAKE, WHEN STOP IS TOUCHED “**SAVE**” WILL APPEAR AT THE BOTTOM OF THE SCREEN. “**SAVE**” CAN BE TOUCHED AND AN OPTION SCREEN WILL APPEAR.

7

TOUCH “**ADD TO FAVOURITES**”  
OR “**SAVE AS**”

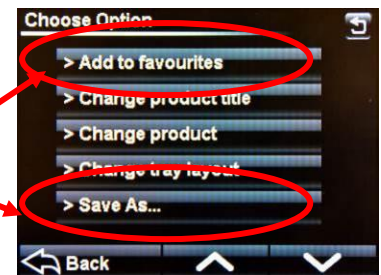

USE KEYBOARD TO TYPE THE REQUIRED  
NAME AND TOUCH “**SAVE**”



NOTE: In manual mode, only one operation of the steam or damper is saved.



# 10 - 3 BAKING USING PROGRAMMES

**NOTE :** THIS COVERS TWO VERSIONS OF FIRMWARE. (THE OVEN IS PRE-SET TO SHOW ONLY ONE OF THEM).

1. **PICTORIAL** VERSION SHOWS CHOICES OF PRODUCT CATERGORIES
2. **NUMERICAL** VERSION SHOWS RANGES OF PROGRAM NUMBERS.

TOUCH TO OPEN  
"CATEGORY" or  
"PROGRAM CHOICE"  
SCREEN

1



OPTION SCREEN

CATEGORY SCREEN

PICTORIAL


OR

PROGRAM CHOICE

NUMERICAL

TOUCH THE TYPE OF  
PRODUCT OR PROGRAM  
RANGE CHOICE WANTED  
AND "SELECT" SCREEN  
OPENS



2

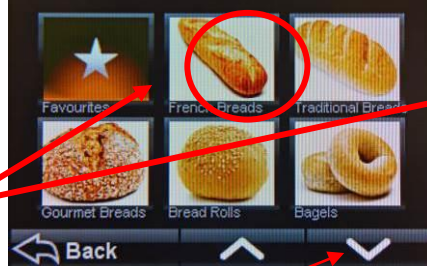

MORE CHOICES

TOUCH THE  
NAME OR NUMBER OF  
THE PRODUCT  
REQUIRED

3

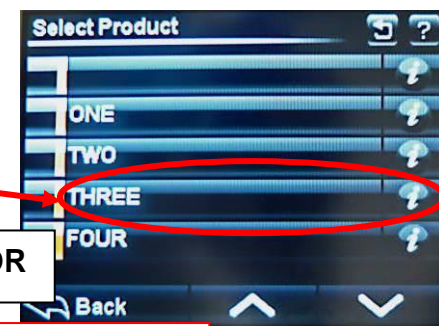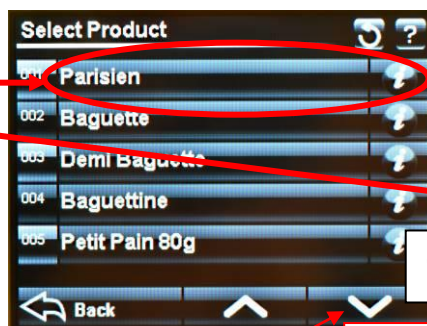

OR

SCROLL DOWN FOR MORE PRODUCTS IF AVAILABLE

SELECT SCREEN

TOUCH THE  
"FULL LOAD" OR  
"HALF LOAD" AS  
REQUIRED.

(THIS ONLY APPEARS IF HALF  
LOAD IS SAVED IN THE PROGRAM)

4




LOAD SCREEN

TOUCH THE "BACK"  
BUTTON AT ANY TIME  
TO RETURN TO THE  
PREVIOUS SCREEN

IF THE OVEN IS NOT UP TO TEMPERATURE IT WILL SHOW THE HEATING SCREEN.

**WAIT FOR THE OVEN TO REACH TEMPERATURE**

IF THE OVEN IS TOO HOT FOR THE TEMPERATURE CHOSEN, WAIT FOR THE TEMPERATURE TO DROP. OPEN THE DOOR TO AID COOLING.

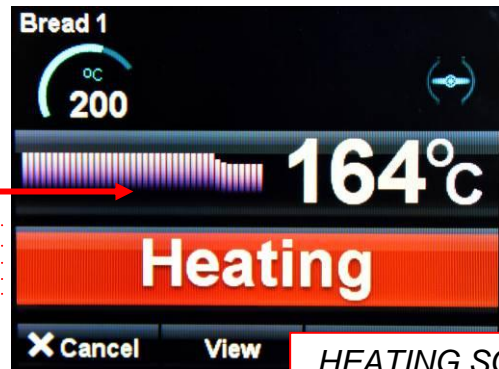

HEATING SCREEN



READY SCREEN

WHEN THE OVEN IS AT THE CORRECT TEMPERATURE, THE "READY" SCREEN WILL SHOW.

1. OPEN DOOR AND LOAD PRODUCT.
2. CLOSE THE DOOR FULLY.
3. TOUCH "START"

**TIP**

TO HELP TO KEEP THE OVEN HOT, TRY NOT TO KEEP THE DOOR OPEN MORE THAN NEEDED

5

THIS SCREEN WILL SHOW WHILE THE PRODUCT IS BAKING

SET TEMPERATURE


TEMPERATURE PROFILE BAR

BAKE TIME PROGRESS BAR

**NOTE**


The actual temperature shown will rise and fall above and below the set temperature as the oven cools and reheats. This is not a fault

ACTUAL OVEN TEMPERATURE

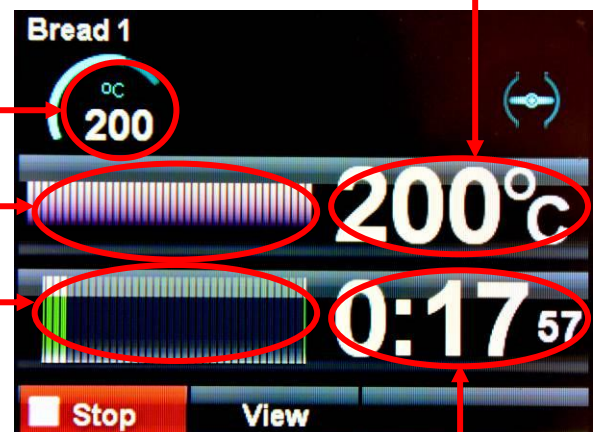

BAKE TIME LEFT

## BAKE OVER SCREEN

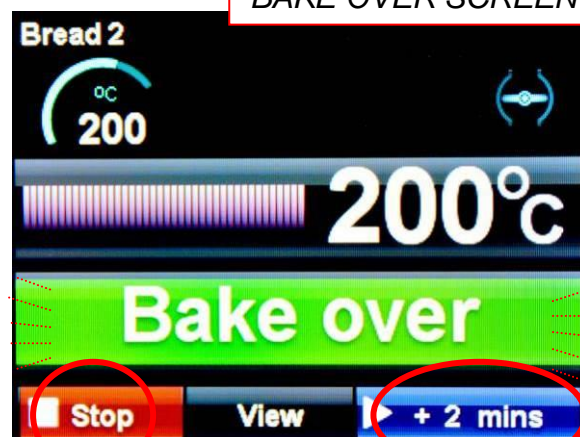


AT THE END OF THE BAKE TIME A SOUNDER WILL BE HEARD AND "BAKE OVER" WILL FLASH. TOUCH "**STOP**" AND OPEN THE DOOR TO REMOVE THE PRODUCT.

TO KEEP THE OVEN BAKING FOR EXTRA MINUTES THE "+ 2 MIN" BUTTON CAN BE TOUCHED. (THIS TIME CAN BE ALTERED IN SET UP)

6

## TOUCHING "VIEW" BUTTON DURING BAKE

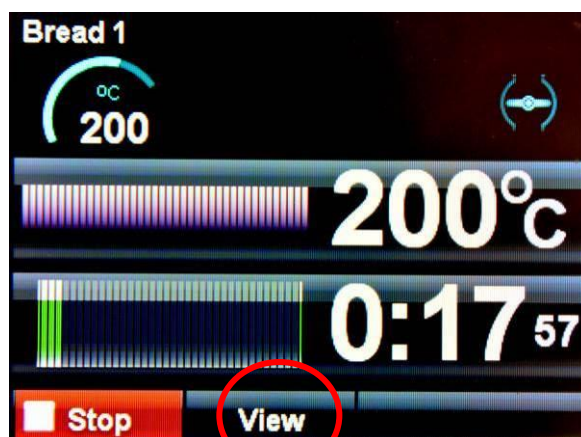

TOUCHING "**VIEW**" BUTTON DURING BAKE WILL SHOW THE SETTINGS FOR THE BAKE IN PROGRESS. TOUCH "**CANCEL**" TO GO BACK TO THE PREVIOUS SCREEN.



## VIEW SCREEN

## 10 - 4 CREATING A PROGRAM

TOUCH TO OPEN  
“CATEGORY”  
SCREEN


1



OPTION SCREEN

TOUCH THE TYPE  
OF PRODUCT  
WANTED AND THE  
“SELECT” SCREEN  
OPENS

2

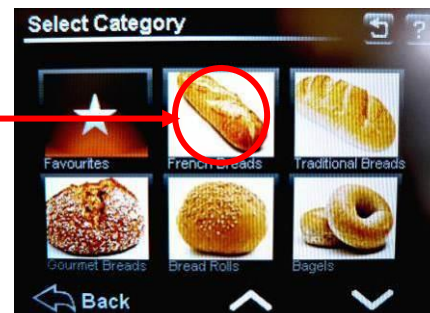

CATEGORY SCREEN



SELECT SCREEN

TOUCH “i” BUTTON  
NEXT TO THE BLANK  
PROGRAM TO OPEN  
NEXT SCREEN

3






INFORMATION SCREEN

TOUCH OPTION TO GO TO  
PASS CODE SCREEN

4


PASS CODE SCREEN

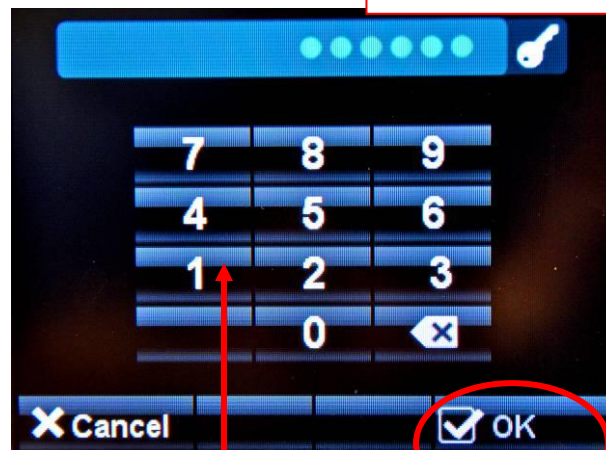

ENTER "SUPERVISOR" PASS CODE AND  
THEN TOUCH OK.  
(DEFAULT CODE = 123456. THIS CAN BE  
CHANGED IN HIGH LEVEL SETTINGS)

5

## CHANGE PRODUCT

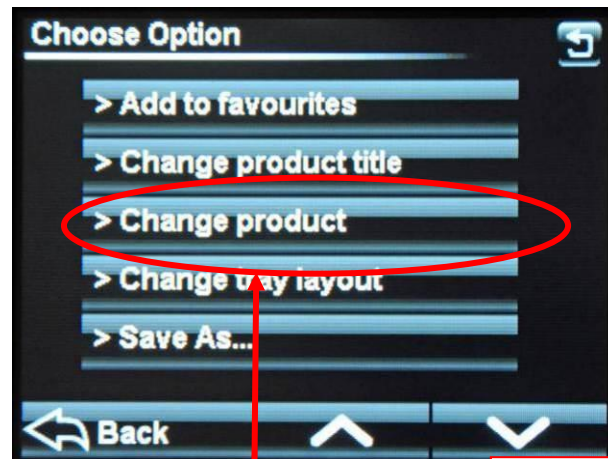

OPTION SCREEN

TOUCH "CHANGE PRODUCT"

6

LOAD  
TYPE

VALUE CHANGE SCREEN



INCREASE

OR USE  
KEYS

DECREASE



ENTER AMOUNT REQUIRED  
AND TOUCH DONE


TOUCH EACH ITEM AND CHANGE THE VALUE BY USING THE UP AND DOWN KEYS OR BY USING THE KEY PAD.

TOUCH "HALF LOAD" TO CHANGE TO "HALF LOAD" SETTINGS IF REQUIRED.  
TOUCH "FULL LOAD" TO GO BACK TO "FULL LOAD"

TOUCH "SAVE" WHEN SATISFIED WITH THE SETTINGS.

7

## CHANGE TRAY LAYOUT

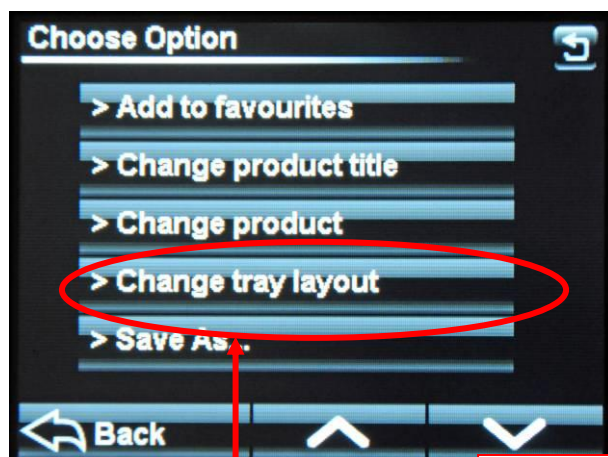


OPTION SCREEN

TOUCH "CHANGE TRAY LAYOUT"

8

TOUCH TO ADJUST  
NUMBER OF PRODUCTS  
ACROSS THE TRAY


TOUCH TO ADJUST  
NUMBER OF PRODUCTS  
DOWN THE TRAY

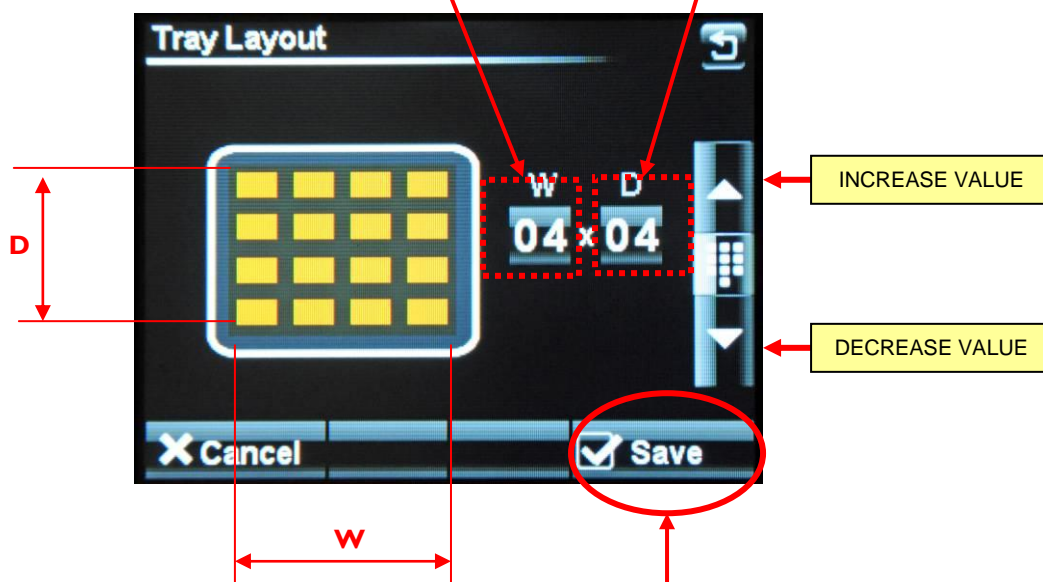

WHEN SATISFIED WITH THE TRAY  
LAYOUT TOUCH SAVE TO RETURN TO  
THE "OPTIONS" SCREEN

9


## SAVE

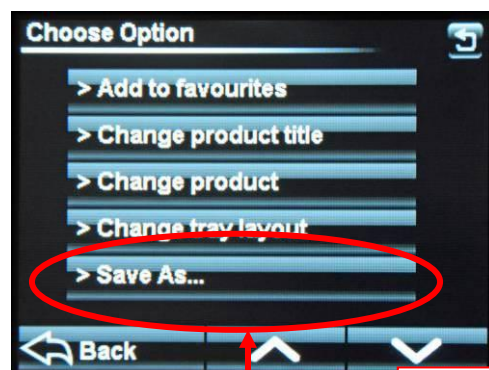

OPTION SCREEN

TOUCH "SAVE AS"

10

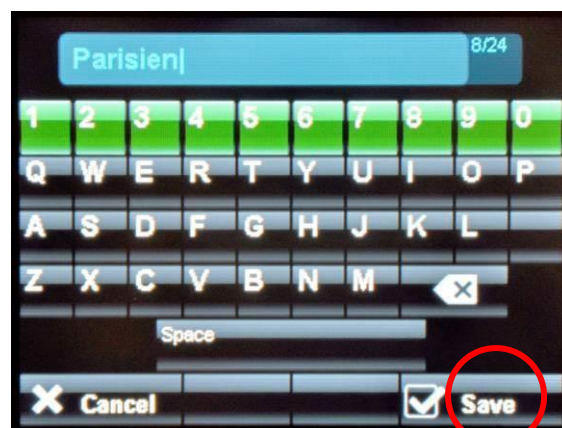


KEYBOARD SCREEN

TYPE IN THE NEW NAME  
AND TOUCH "SAVE"

11




## ADD A PRODUCT TO THE FAVOURITES LIST

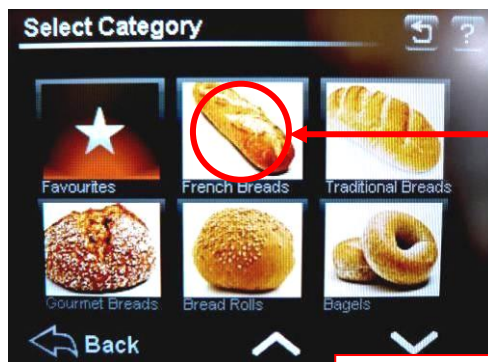

CATEGORY SCREEN

TOUCH THE TYPE OF  
PRODUCT WANTED  
AND THE “SELECT”  
SCREEN OPENS


1

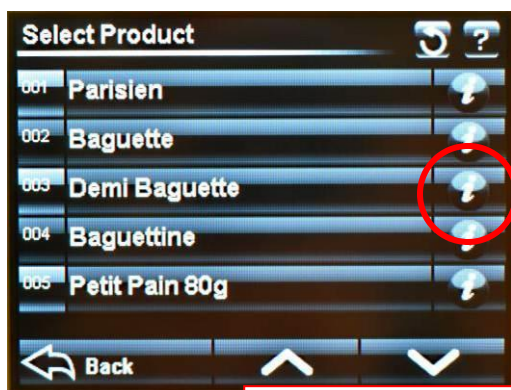

SELECT SCREEN

TOUCH THE “i”  
(INFORMATION)  
BUTTON NEXT TO THE  
PRODUCT YOU WANT  
AS A FAVOURITE.  
THIS OPENS THE  
OPTION SCREEN

2

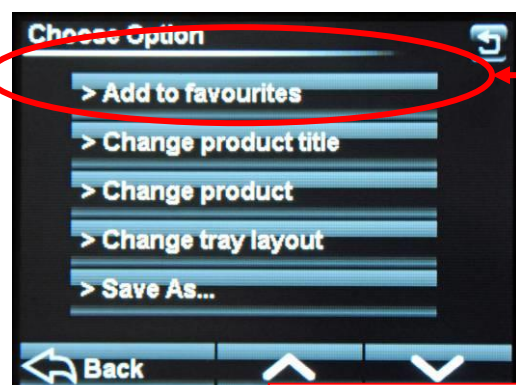

OPTION SCREEN

TOUCH  
“ADD TO FAVOURITES”

THE PRODUCT WILL  
NOW SHOW ON THE  
FAVOURITES LIST

3

## 10 - 5 SETTING 7-DAY TIMER

TOUCH TO OPEN  
"7-DAY TIMER"  
SCREEN



OPTION SCREEN


CHOOSE DAY

SET "ON" TIME

2

SET "OFF" TIME

4

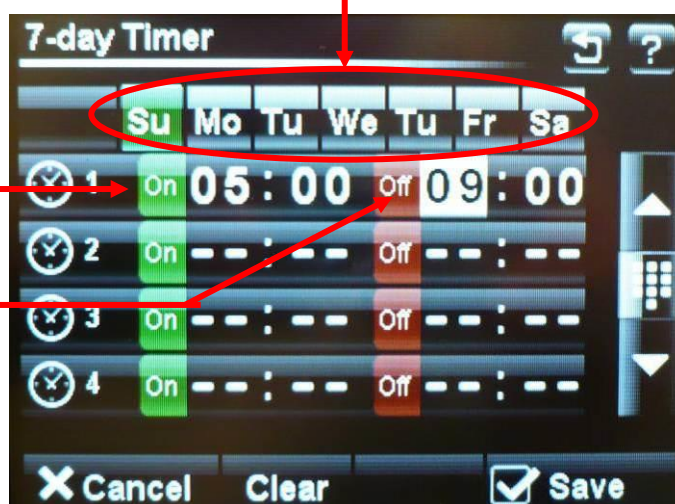

INCREASE VALUE

3

DECREASE VALUE

TIMER SETUP SCREEN

### NOTE

Up to four on/off times can be set for each day.  
Touch "**clear**" to clear the settings on the day shown.  
Touch "**save**" to activate the times set.

## 10 - 6 SETTINGS




TOUCH TO OPEN  
THE "SETTINGS"  
SCREEN

OPTION SCREEN



PASS CODE SCREEN

ENTER "SUPERVISOR"  
PASS CODE AND THEN PRESS  
"OK".  
(DEFAULT CODE = 123456)

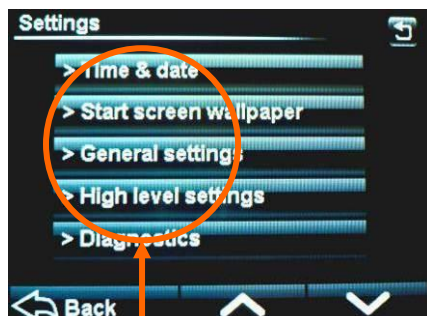


SETTINGS SCREEN

CHOOSE THE SETTING TO ALTER

2

## TIME AND DATE

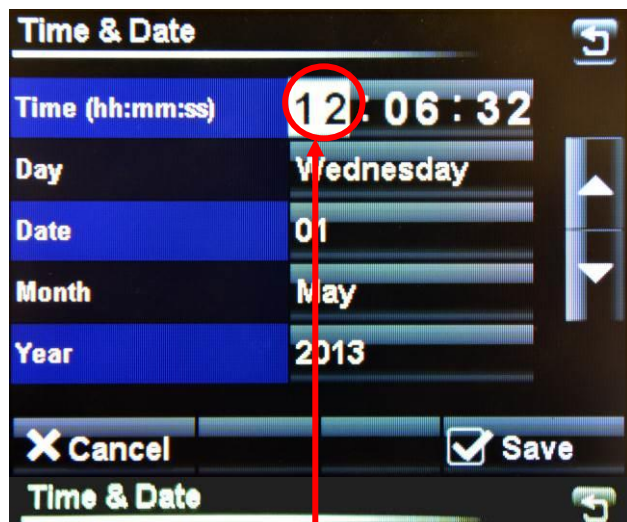


TOUCH THE SCREEN TO HIGHLIGHT THE ITEM TO CHANGE

1

USE THE INCREASE / DECREASE BUTTONS TO ALTER THE SETTINGS


2

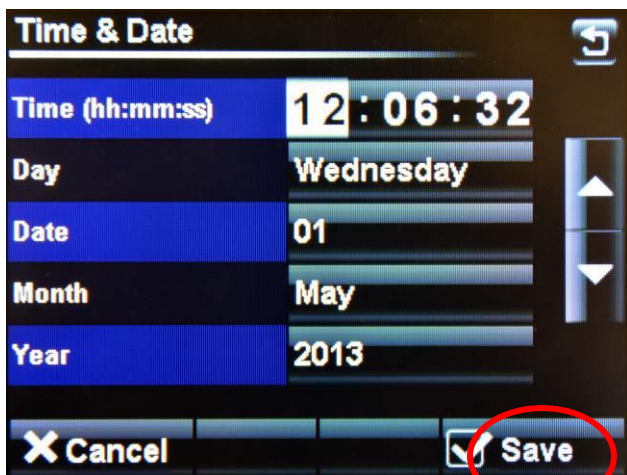

TIME AND DATE SCREEN

WHEN ALL INFORMATION IS CORRECT,  
TOUCH "SAVE".  
THIS WILL RETURN TO THE SETTINGS SCREEN



3

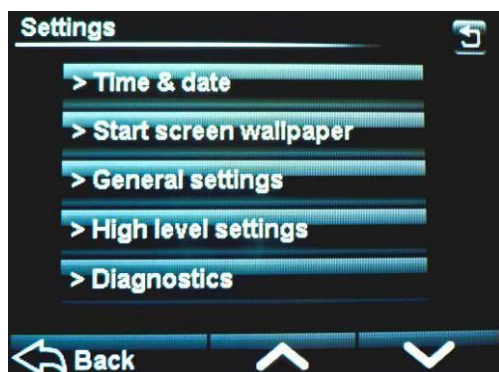

SETTINGS SCREEN



## OVEN SETTINGS (GENERAL)


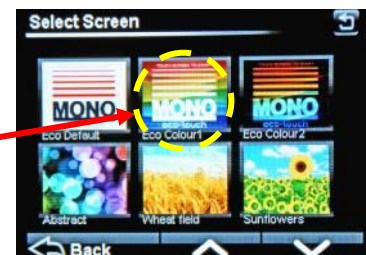
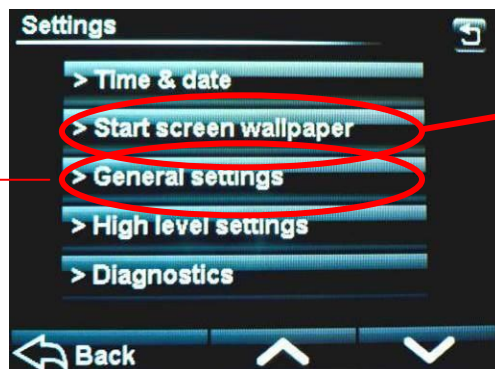


SELECT WALLPAPER.  
TOUCH "BACK" TO CONFIRM

SETTINGS SCREEN

TOUCH "**GENERAL SETTINGS**" AND THE FOLLOWING SCREEN WILL APPEAR.

SCROLL DOWN TO MOVE THROUGH ALL CHOICES  
AND ADJUST EACH ONE AS REQUIRED, USING THE ARROW KEYS.

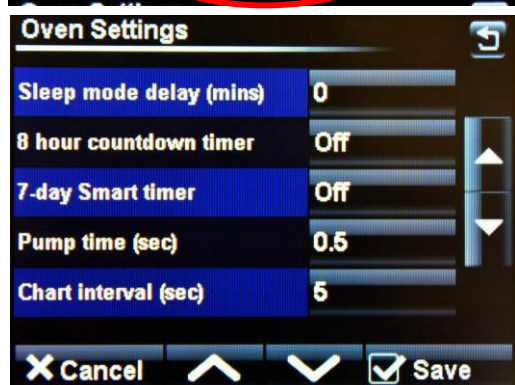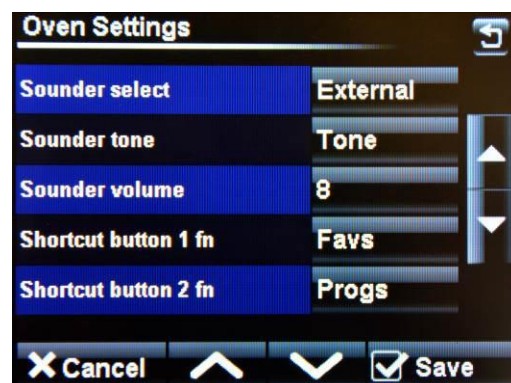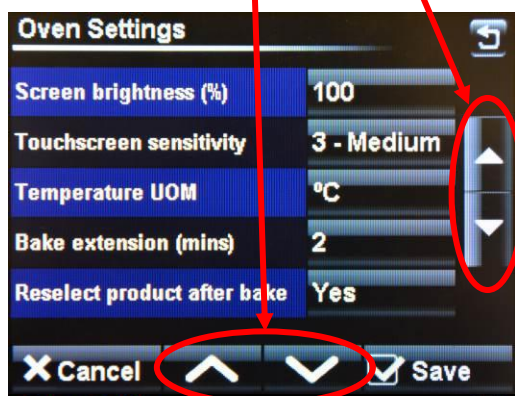

## **OVEN SETTINGS EXPLAINED - GENERAL LEVEL**

### **SCREEN BRIGHTNESS –**

Adjusts the brightness of the viewing screen for user comfort.

### **TOUCHSCREEN SENSITIVITY –**

Adjusts the pressure required to operate the touch screen. (5 settings)

### **TEMPERATURE UNIT OF MEASURE –**

Centigrade (Celsius) or Fahrenheit

### **BAKE EXTENSION (mins) –**

Adjusts the extra time at the end of a bake for each “extra time” button touch. (10mins max)

### **RESELECT PRODUCT AFTER BAKE –**

Resumes with same product program without having to reselect.

### **SLEEP MODE DELAY –**

Oven will go into sleep mode after the set minutes, providing it is up to temperature and has been through at least one bake cycle.

### **8 HOUR COUNTDOWN TIMER –**

After 8 hours the oven gives a warning and then turns off.

Touch any button for an extra hour if required.

### **7 DAY SMART TIMER –**

ON = 7 day timer function

OFF = Controls set start time depending on existing oven temperature.

### **PUMP TIME (SEC) –**

Only used on double depth oven to increase pipe pressure before steaming.

### **CHART INTERVAL –**

Time interval, in seconds, that the bars show on the heat and bake time progress charts.

### **SOUNDER SELECT –**

Set as external or onboard.

### **SOUNDER TONE –**

Select a tone – Voice, Tone or Off

### **SOUNDER VOLUME –**

Adjust to suit the volume required. (onboard sounder only)

### **SHORTCUT BUTTONS –**

**1 fn**

**2 fn**

**3 fn**


**4 fn**

**5 fn**

Gives the choice of what buttons are active and in which order they appear on the options screen.

Options available = Favourites, Programs, Manual bake, Multi bake, 7-day timer . (Settings at **6fn** cannot be changed)

## OVEN SETTINGS (HIGH LEVEL)

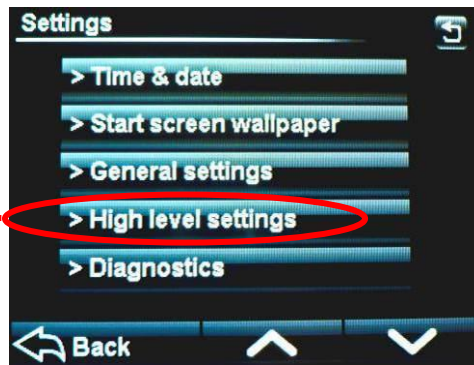

TOUCH "HIGH LEVEL SETTINGS" AND THE FOLLOWING SCREEN WILL APPEAR.

1


SETTINGS SCREEN



ENTER "HIGH LEVEL" PASSCODE AND THEN TOUCH OK.

2

THE FOLLOWING SCREEN WILL APPEAR.

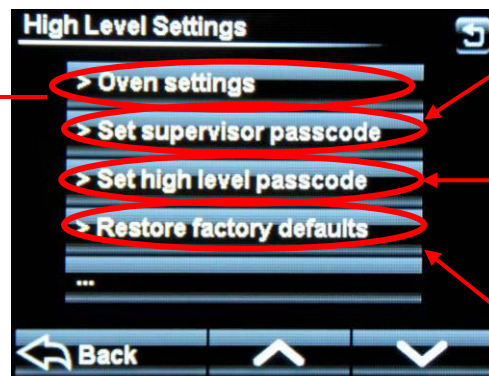

CHANGE SUPERVISOR  
PASSCODE HERE

CHANGE HIGH LEVEL  
PASSCODE HERE

RESTORES ALL SCREENS  
BACK TO ORIGINAL DEFAULT  
SETTINGS  
(NOT PASSCODES)



SCROLL DOWN TO MOVE THROUGH ALL CHOICES AND ADJUST EACH ONE AS REQUIRED, USING THE ARROW KEYS.

3



## **OVEN SETTINGS EXPLAINED - HIGH LEVEL**

### **OVEN TYPE –**

Set this to DX.

### **MAX. BAKE TEMPERATURE –**

Can be set up to 300C , (depending on the oven type)

### **TEMPERATURE OFFSET –**

Can be used to adjust the display to the actual temperature in the oven.

### **BAKE HYSTERISIS –**

Sets bake temperature cycling around a set point. (Above and below).

### **BAKE CYCLE SET POINT ONLY –**

No = Shows set temperature point and actual temperatures on screen.

YES = shows set temperature point only

### **MANUAL DEFAULT TEMPERATURE –**

Set for manual program default temperature

### **SLEEP FALLBACK –**

Temperature of the oven in “sleep mode” (100C is suggested).

### **SLEEP HYSTERISIS –**

Sets “sleep mode” temperature cycling around a set point. (Above and below).

### **READY ACCEPT HIGH –**

Highest temperature for the oven to display “READY”

### **READY ACCEPT LOW –**

Lowest temperature for the oven to display “READY”

### **STEAM TYPE –**

Plate or trough.

### **TOP GAIN –**

0-255 centigrade

### **BOTTOM GAIN –**

0-255 centigrade

### **MONO CONSTANT –**

Factory set **(Do not change unless instructed to do so)**

### **STEAM TROUGH TEMP –**

Degrees Centigrade

### **STEAM HYSTERISIS –**

Degrees Centigrade

### **STEAM TROUGH EXCEPT –**

Degrees Centigrade

FG257 Adamatic ECOTOUCH MODULAR DECK UL Rev A15

**LIGHT OUTPUT SOFT START –**

On/Off Some lights need this for cold start up to stop them blowing.

**HEATER CONTROL –**

Contactor or solid state. Defaults to contactor. (solid state not used at the moment)

**I/O DIAGNOSTIC –**

Displays outputs and inputs at the top of the screen to aid fault finding if needed.

## DEFAULT PASSCODES

**SUPERVISOR (LOW LEVEL) -- 123456**

**HIGH LEVEL -- 654321**

MASTER -- 314159 (This is fixed)

### **SUGGESTION**

To stop unauthorised changes to the oven setup, it is suggested that this page is removed from this manual and kept in a safe place for future reference.


If tampering could be a problem, it is a good idea to change the passcodes at regular intervals.

## CHANGING PASSCODES



**NOTE**  
PASSCODES WILL BE REQUIRED TO GO THROUGH THESE SCREENS AND MAKE CHANGES.

## 10 - 7 USING THE USB PORT

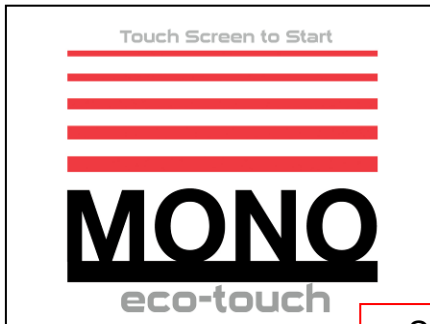

START SCREEN

Ensure the Start screen is showing

1



Insert the USB memory stick into the socket on the oven panel. (Rubber plug may have to be removed first).

2


### NOTE

The USB stick will only fit in one way.  
Do not force into the socket.



Wait for the USB symbol to finish moving

3

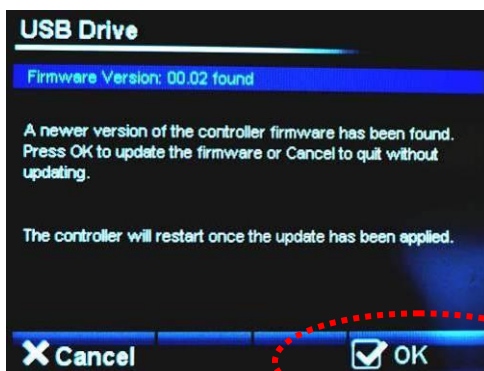

If old firmware is found, the firmware version screen will appear.

Touch **"OK"** to update firmware


-Wait-

Remove USB stick

OR

Touch **"CANCEL"** to choose other items to update or change.  
(see next page)

4

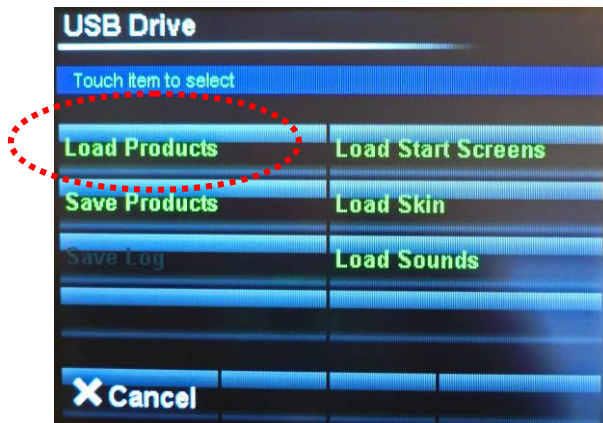

Choose action you would like to do.

5



Select the file required.

6



When confirmation of "file loaded ok" Shows, remove the usb stick.

7

# NOTES ON USING USB STICKS

For a USB stick to function correctly it must have the following folder as a root folder .

## **Mono**

Then into that folder create the following:

**Firmware**

**Products**

**Skins**

**Sounds**

**Startup**

Place your recipe/product files in the “**products**” folder.

The oven will find the “**Mono**” folder automatically when the stick is plugged into the oven.  
Any stick can be used (does not have to be blank) but the Mono folder must be in the root.

The most used folders are explained below:

## **SKINS**

These control the way the screen looks in different modes.

**Pictorial** is when the screen displays categories using pictures.



**Numerical** is when the screen displays program numbers.




## **STARTUP SCREENS**

This is the picture/logo you see when the oven is started.




## **PRODUCT FILES (PROGRAM FILES)**

These are the files that contain the information for baking each product e.g. bread,buns,cakes etc.

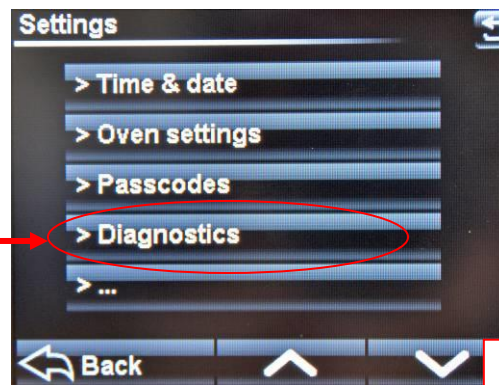


SETTINGS SCREEN

TOUCH “**DIAGNOSTICS**” AND THE FOLLOWING SCREEN WILL APPEAR.

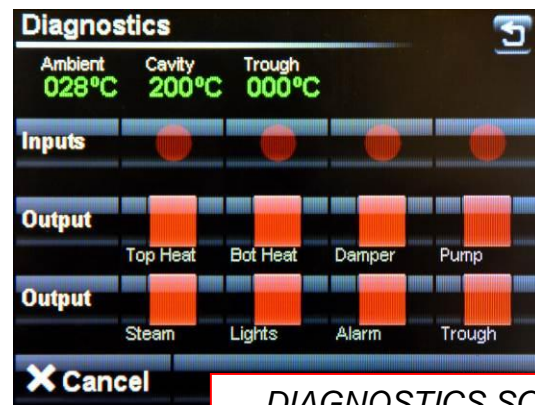

DIAGNOSTICS SCREEN

INPUTS HIGHLIGHT WHEN A SIGNAL IS Received.  
e.g. DOOR OPEN

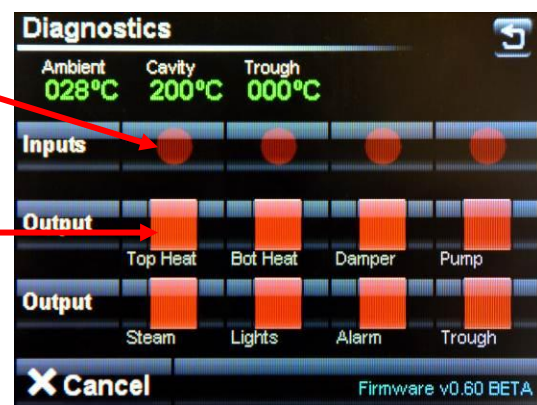

TOUCH THE REQUIRED OUTPUT AND A SIGNAL IS SENT TO THAT ITEM. THE OUTPUT BEING CHECKED IS HIGHLIGHTED WHEN ACTIVE. TO STOP THE OUTPUT, PRESS AGAIN.



## 11.0 TROUBLESHOOTING

### ▪ **NONE OF THE DECKS SWITCHED ON.**

- Is main oven power on?
- Check if bakery main power supply time clock is working (if fitted).
- Is 7-day timer clock set correctly to bring oven on at required time?

### ▪ **ONE DECK HAS NOT SWITCHED ON.**

- Check if individual deck timer is set to bring it on at required time.

### ▪ **UNEVEN OR PATCHY BAKE**

- Door is being opened too often or too long whilst loading.  
(front pale, back burnt).
- Faulty element.
- Top or bottom deck elements not functioning.
- Uneven loading.
- No supply voltage across a phase.

### ▪ **TEMPERATURE GOING WELL OVER SET TEMPERATURE**

When empty the temperature of a deck oven can exceed the set baking temperature. This overheat is marginal when the deck is full of product. If the elements are continuing to work after the set temperature has been reached call Adamatic service. (Please allow up to 60deg.F difference before diagnosing a fault condition),

### ▪ **POOR RECOVERY OF SET TEMPERATURE WHEN LOADED**

- The doors may have been left open too long during loading, allowing heat to escape.
- The damper may have been left open during loading or baking allowing heat to escape.
- Top and/or bottom heat may not be working or set at a low value.
- No supply voltage across a phase.

## 12.0 SERVICE

If a fault arises, please do not hesitate to contact the  
Customer Service Department at: -

MONO Equipment  
Queensway  
Swansea West Industrial Estate  
Swansea.  
SA5 4EB

UK email: [spares@monoequip.com](mailto:spares@monoequip.com)  
Spares Tel. +44(0)1792 564039  
Web site: [www.monoequip.com](http://www.monoequip.com)  
Main Tel. +44(0)1792 561234  
Fax. 01792 561016

### **ERROR MESSAGES**

IF THESE NUMBERS APPEAR IN THE TEMPERATURE WINDOW  
PLEASE CHECK THE FOLLOWING:

**888** – Indicates that the control board is above 80 degrees

**999** – Indicates a problem with the thermocouple.  
Check for connection problems or faulty thermocouple.

# LIGHT REPLACEMENT

**DISCONNECT FROM POWER SUPPLY BEFORE REPLACING LIGHT BULBS**


24v 20w LAMP PART NUMBER ... B855-94-008



HEX HEAD SOCKET SCREWS

1

UNSCREW PLATE NEXT TO  
LIGHT TO BE REPLACED

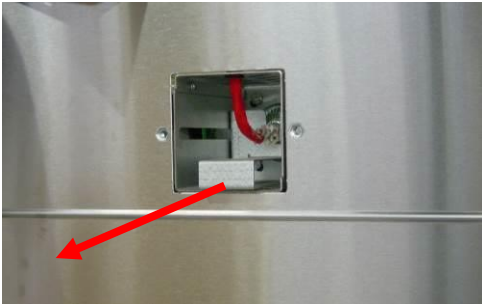

SLIDE FITTING OUT

2



REMOVE LIGHT FROM HOLDING SLOT  
AND UNCLIP FROM CABLE

3



REPLACE LIGHT AND REFIT ALL PARTS

RECONNECT POWER SUPPLY AND TEST

4



## 13.0 SPARES INFORMATION

## **OVEN SPARES– 220v. (480v IN BRACKETS)**

HEATERS MCB	(SEE ELECTRICAL PARTS LIST)
HEATERS MCB	(SEE ELECTRICAL PARTS LIST)
HEATERS MCB	(SEE ELECTRICAL PARTS LIST)
CONTROL CIRCUIT MCB	B872-22-118
OVERHEAT THERMOSTAT	B888-30-015
CONTROL CIRCUIT POWER SUPPLY	B801-93-005 (220v) B801-93-009 (480v)
TOP HEAT	B801-08-021
BOTTOM HEAT CONTACTOR	B801-08-021
WATER SOLENOID (10mm pipe)	A900-34-349(up to May 2007)
WATER SOLENOID (8mm pipe)	A900-34-365 (after May 2007)
INTERIOR LIGHT (BULB)	B855-94-008
OVEN THERMOCOUPLE	B873-95-003
MAIN LED PRINTED CIRCUIT BOARD	M257-25-00000
DAMPER SOLENOID	B749-83-004
CANOPY FAN RELAY	B801-37-001
FROSTED GLASS	M257-02-00027
PLAIN GLASS	M257-02-00028
DOOR BUMPER STOP	M257-03-00027
BAKING TILE 3 ACROSS	M257-02-00046
2 ACROSS	M257-02-00047
1 ACROSS	M257-02-00048
HINGE PIN RHS	M257-03-00005
HINGE PIN LHS	M257-03-00009
BLACK DOOR HANDLE	A900-27-192
DOOR SPRING (3 ACROSS)	M257-03-00017
(2 ACROSS)	M257-03-00011
WIRE ROPE	M257-03-00024
SPRING RETAINING PIN	M257-03-00025
PULLEY	M257-03-00015
PULLEY SPINDLE	M257-03-00013
DAMPER DRIVE COUPLING	M257-07-00007
ELEMENT GASKET	M245-02-01300
24 v 20w DICHROIC LAMP	B855-94-008

## ELEMENT SPARES

### 3 ACROSS

TOP HEAT ELEMENT 1.0kW  
 TOP HEAT ELEMENT 0.6kW  
 BOTTOM HEAT ELEMENT 0.75kW

### 220v

B854-04-090 (B854-04-096)  
 B854-04-088 (B854-04-094)  
 B854-04-089 (B854-04-095)

### 480v

### 2 ACROSS

TOP HEAT ELEMENT 0.65kW  
 TOP HEAT ELEMENT 0.4kW  
 BOTTOM HEAT ELEMENT 0.5kW

B854-04-099 (B854-04-105)  
 B854-04-097 (B854-04-103)  
 B854-04-098 (B854-04-104)

### 1 ACROSS 220V

TOP HEAT ELEMENT 0.325kW  
 TOP HEAT ELEMENT 0.2kW  
 BOTTOM HEAT ELEMENT 0.25kW

B854-04-108  
 B854-04-106  
 B854-04-107

### 1 ACROSS 480V

TOP HEAT ELEMENT 0.525kW  
 TOP HEAT ELEMENT 0.325kW  
 BOTTOM HEAT ELEMENT 0.40kW

(B854-04-114)  
 (B854-04-112)  
 (B854-04-113)



## 14.0 ELECTRICS



## **PARTS LIST FOR DRAWINGS FOLLOWING – 3 TRAY WIDE – 220v. (480v IN BRACKETS)**

F1	HEATERS MCB	B872-22-115 (B872-22-113)
F2	HEATERS MCB	B872-22-115 (B872-22-113)
F3	HEATERS MCB	B872-22-115 (B872-22-113)
F4	CONTROL CIRCUIT MCB	B872-22-118
F5	OVERHEAT THERMOSTAT	B888-30-015
T1	CONTROL CIRCUIT POWER SUPPLY	B801-93-005 (B801-93-009)
K1	TOP HEAT CONTACTOR	B801-08-021
K2	BOTTOM HEAT CONTACTOR	B801-08-021
Y1	WATER SOLENOID (10mm pipe)	A900-34-349(up to May 2007)
	WATER SOLENOID (8mm pipe)	A900-34-365 (after May 2007)
H1	INTERIOR LIGHT	B855-94-008
B1	OVEN THERMOCOUPLE	B873-95-003
U1	MAIN LED PRINTED CIRCUIT BOARD	M257-25-00000
D1	DAMPER SOLENOID	B749-83-004
R1	TOP HEAT ELEMENT 1.0kW	B854-04-090 (B854-04-096)
R2	TOP HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R3	TOP HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R4	TOP HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R5	TOP HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R6	TOP HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R7	TOP HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R8	BOTTOM HEAT ELEMENT 0.75kW	B854-04-089 (B854-04-095)
R9	BOTTOM HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R10	BOTTOM HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R11	BOTTOM HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R12	BOTTOM HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R13	BOTTOM HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
R14	BOTTOM HEAT ELEMENT 0.6kW	B854-04-088 (B854-04-094)
CF1	CANOPY FAN RELAY	B801-37-001



## **PARTS LIST FOR DRAWINGS FOLLOWING – 2 TRAY WIDE – 220v. (480v IN BRACKETS)**

F1	HEATERS MCB	B872-22-114 (B872-22-112)
F2	HEATERS MCB	B872-22-114 (B872-22-112)
F3	HEATERS MCB	B872-22-114 (B872-22-112)
F4	CONTROL CIRCUIT MCB	B872-22-118
F5	OVERHEAT THERMOSTAT	B888-30-015
T1	CONTROL CIRCUIT POWER SUPPLY	B801-93-005 (B801-93-009)
K1	TOP HEAT CONTACTOR	B801-08-021
K2	BOTTOM HEAT CONTACTOR	B801-08-021
Y1	WATER SOLENOID (10mm pipe) WATER SOLENOID (8mm pipe)	A900-34-349(up to May 2007) A900-34-365 (after May 2007)
H1	INTERIOR LIGHT	B855-94-008
B1	OVEN THERMOCOUPLE	B873-95-003
U1	MAIN LED PRINTED CIRCUIT BOARD	M257-25-00000
D1	DAMPER SOLENOID	B749-83-004
CF1	CANOPY FAN RELAY	B801-37-001
R1	TOP HEAT ELEMENT 0.65kW	B854-04-099 (B854-04-105)
R2	TOP HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R3	TOP HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R4	TOP HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R5	TOP HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R6	TOP HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R7	TOP HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R8	BOTTOM HEAT ELEMENT 0.5kW	B854-04-098 (B854-04-104)
R9	BOTTOM HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R10	BOTTOM HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R11	BOTTOM HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R12	BOTTOM HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R13	BOTTOM HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)
R14	BOTTOM HEAT ELEMENT 0.4kW	B854-04-097 (B854-04-103)

## **PARTS LIST FOR DRAWINGS FOLLOWING – 1 TRAY WIDE – 220v. (480v IN BRACKETS)**

F1	HEATERS MCB	B872-22-112 (B872-22-111)
F2	HEATERS MCB	B872-22-112 (B872-22-111)
F3	HEATERS MCB	B872-22-112 (B872-22-111)
F4	CONTROL CIRCUIT MCB	B872-22-118
F5	OVERHEAT THERMOSTAT	B888-30-015
T1	CONTROL CIRCUIT POWER SUPPLY	B801-93-005 (B801-93-009)
K1	TOP HEAT CONTACTOR	B801-08-021
K2	BOTTOM HEAT CONTACTOR	B801-08-021
Y1	WATER SOLENOID (10mm pipe) WATER SOLENOID (8mm pipe)	A900-34-349(up to May 2007) A900-34-365 (after May 2007)
H1	INTERIOR LIGHT	B855-94-008
B1	OVEN THERMOCOUPLE	B873-95-003
U1	MAIN LED PRINTED CIRCUIT BOARD	M257-25-00000
D1	DAMPER SOLENOID	B749-83-004
CF1	CANOPY FAN RELAY	B801-37-001
R1	TOP HEAT ELEMENT 0.35kW (0.525kW)	B854-04-108 (B854-04-114)
R2	TOP HEAT ELEMENT 0.2kW (0.325kW)	B854-04-106 (B854-04-112)
R3	TOP HEAT ELEMENT 0.2kW (0.325kW)	B854-04-106 (B854-04-112)
R4	TOP HEAT ELEMENT 0.2kW (0.325kW)	B854-04-106 (B854-04-112)
R5	TOP HEAT ELEMENT 0.2kW (0.325kW)	B854-04-106 (B854-04-112)
R6	TOP HEAT ELEMENT 0.2kW (0.325kW)	B854-04-106 (B854-04-112)
R7	TOP HEAT ELEMENT 0.2kW (0.325kW)	B854-04-106 (B854-04-112)
R8	BOTTOM HEAT ELEMENT 0.25kW (0.4kW)	B854-04-098 (B854-04-113)
R9	BOTTOM HEAT ELEMENT 0.2kW (0.325kW)	B854-04-097 (B854-04-112)
R10	BOTTOM HEAT ELEMENT 0.2kW (0.325kW)	B854-04-097 (B854-04-112)
R11	BOTTOM HEAT ELEMENT 0.2kW (0.325kW)	B854-04-097 (B854-04-112)
R12	BOTTOM HEAT ELEMENT 0.2kW (0.325kW)	B854-04-097 (B854-04-112)
R13	BOTTOM HEAT ELEMENT 0.2kW (0.325kW)	B854-04-097 (B854-04-112)
R14	BOTTOM HEAT ELEMENT 0.2kW (0.325kW)	B854-04-097 (B854-04-112)

## ELECTRICAL PANEL MAIN COMPONENTS

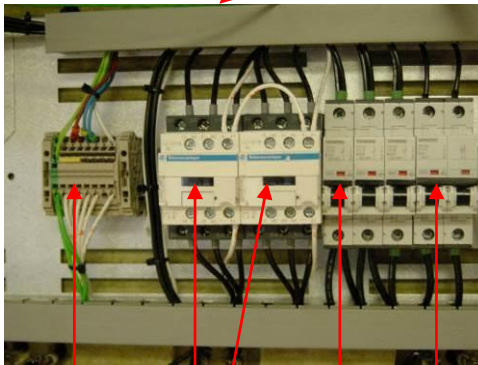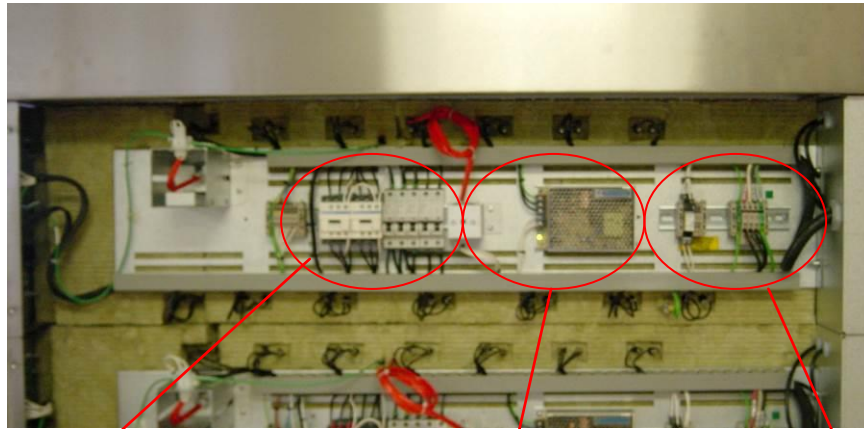


TB2

K1  
K2


F1  
F2  
F3

F4

F5

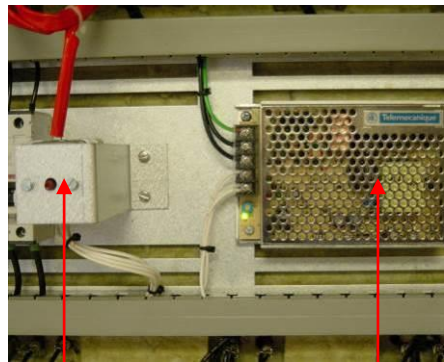

POWER SUPPLY


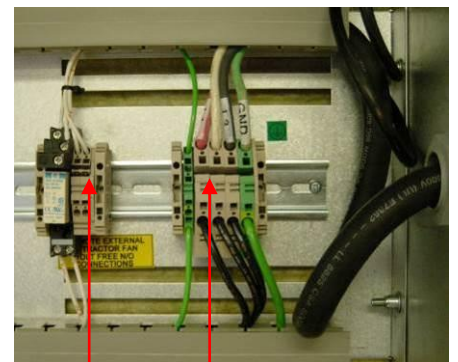


TB3

TB1



IF IN ANY DOUBT - ASK

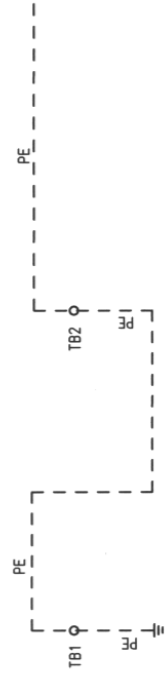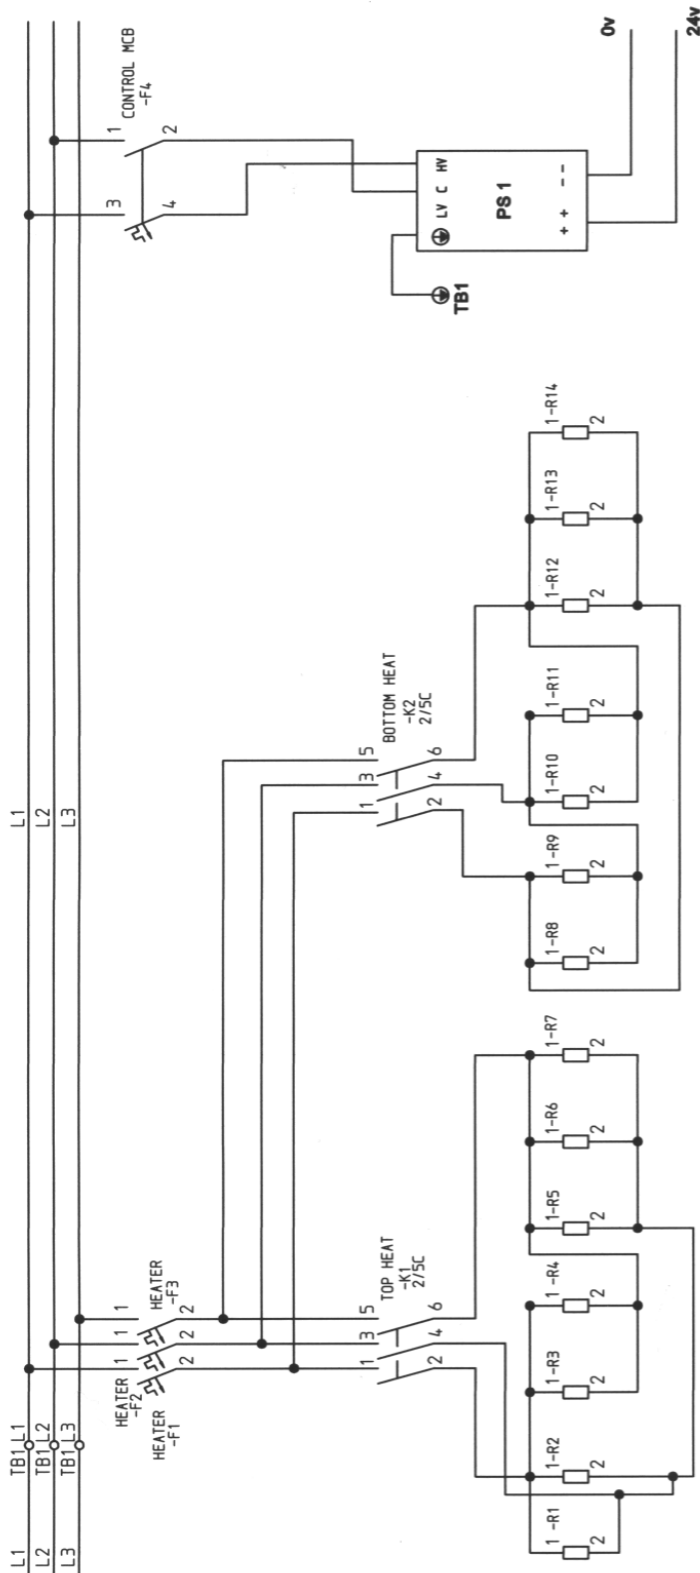


REV	SIG	DATE	REVISION	ECN NO.
1				
<b>MONO</b> MONO EQUIPMENT QUEENSWAY SWANSEA WEST IND PARK SAS 4EB.				
TITLE: MODULAR DECK OVEN POWER CIRCUIT			UL VERSION	
ELECTRICAL SPECIFICATIONS:-			DRAWN: RAC	
480V 3 PHASE 60HZ			ELECTRICALLY APPROVED BY:- PB/AT	
3 WIRE + GROUND			DATE: 9-10-06	
DRAWING NO. M257E25-50800			REV: —	

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.






IF IN ANY DOUBT - ASK

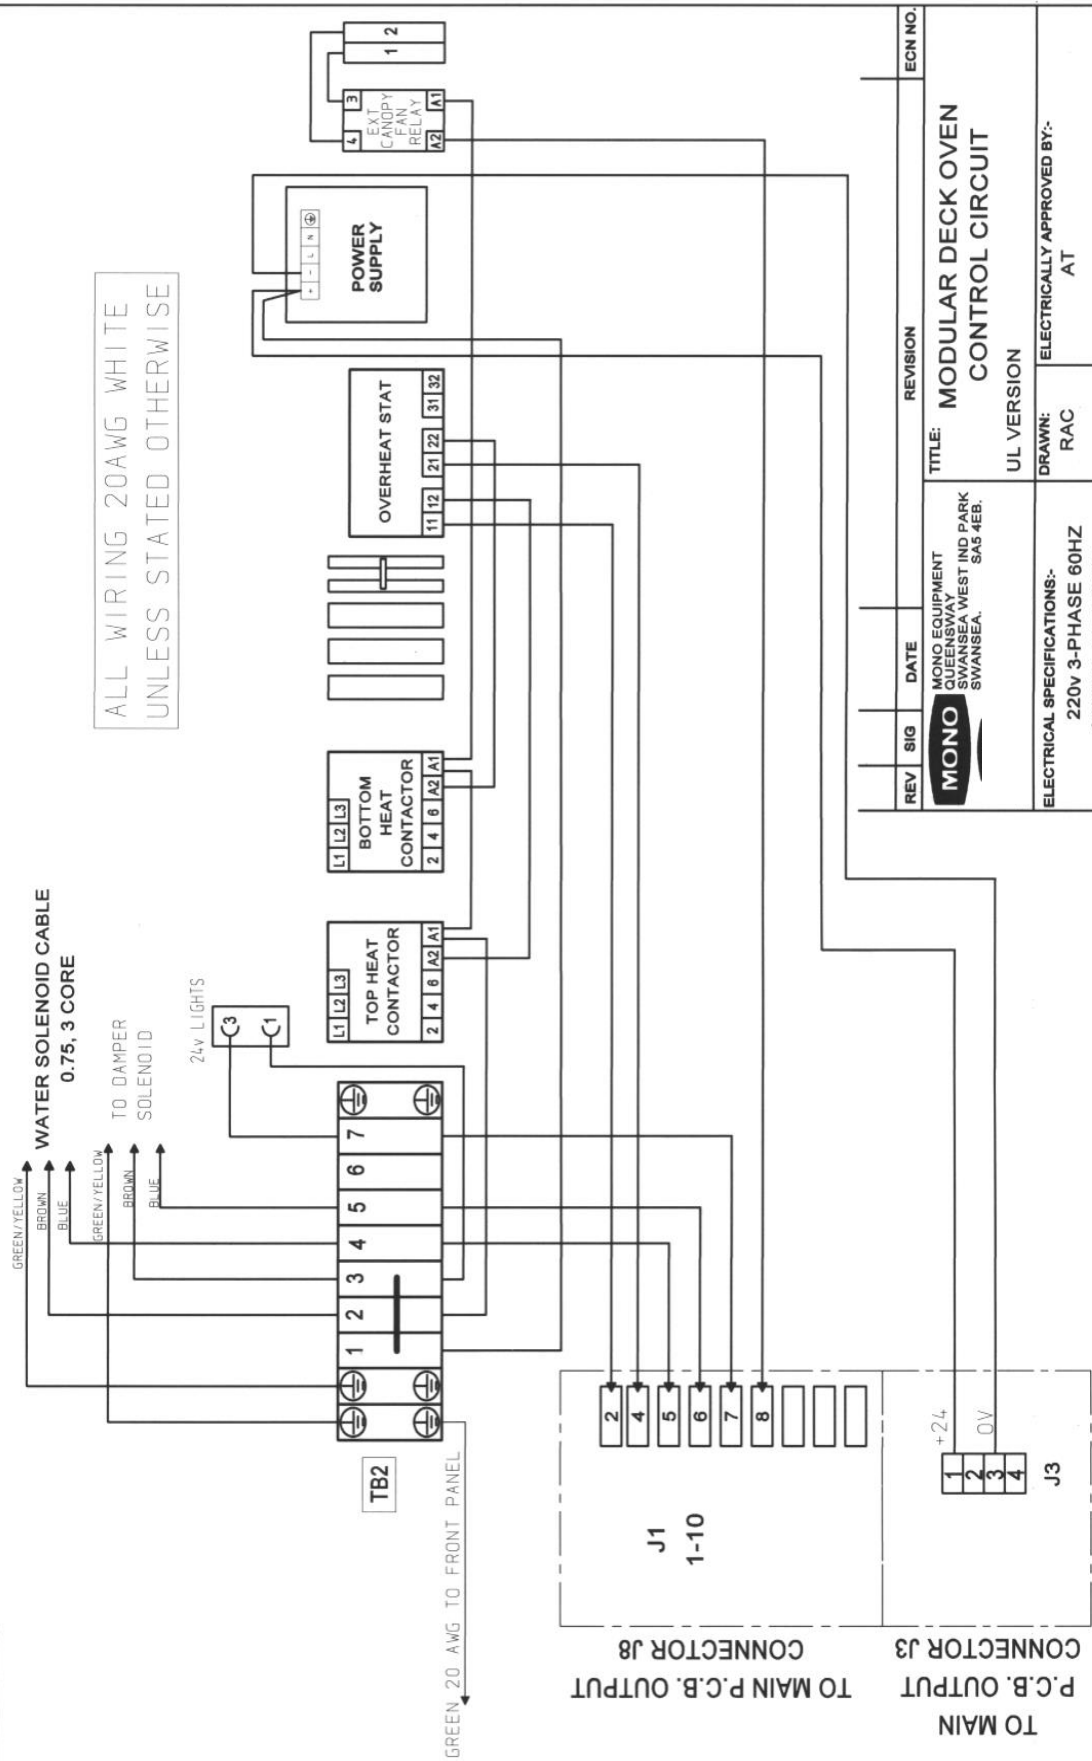


COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

REV	SIG	DATE	REVISION	ECN NO.
TITLE: MODULAR DECK OVEN CONTROL CIRCUIT				
UL VERSION				
ELECTRICAL SPECIFICATIONS:- 220V 3-PHASE 60HZ 3 WIRE + GROUND			DRAWN: RAC	ELECTRICALLY APPROVED BY:- AT
			DATE: 9-10-06	DRAWING NO. M257E25-51300
				REV:-

IF IN ANY DOUBT - ASK

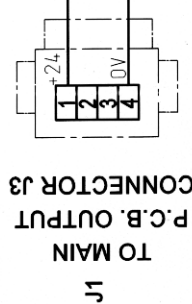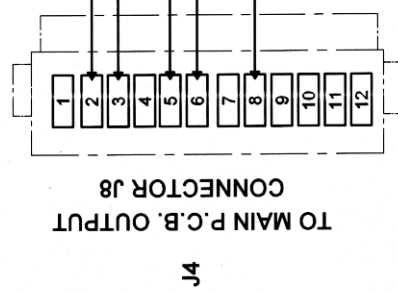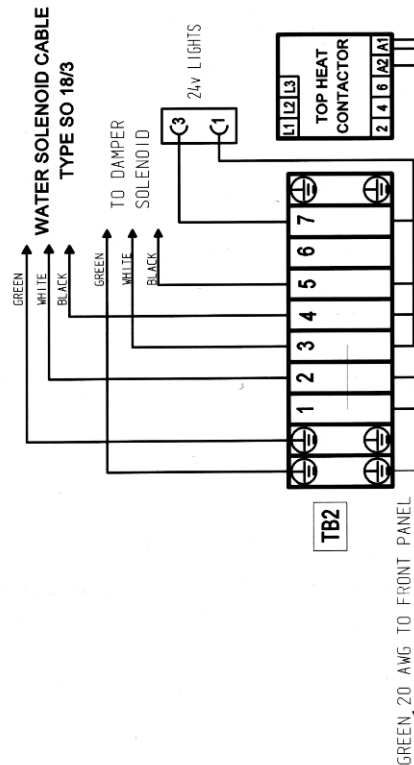

ALL WIRING 20AWG WHITE  
UNLESS STATED OTHERWISE



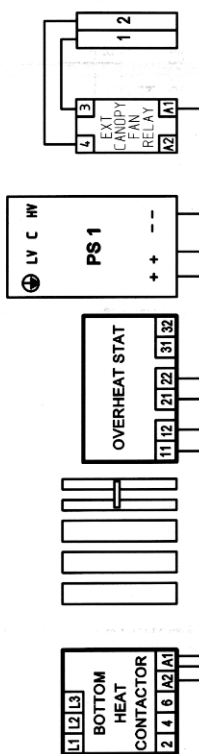


REV	SIG	DATE	REVISION	ECN NO.
TITLE: MODULAR DECK OVEN ECOTOUCH CONTROL CIRCUIT				
UL VERSION				
DRAWN: ELECTRICALLY APPROVED BY:- RAC/JC AT				
DATE: 26-2-15				
REV: -				
DRAWING NO. M257E25-51800				

MOND EQUIPMENT QUEENSWAY SWANSEA WEST IND PARK SWANSEA SAS 4EB. TEL: (01792) 561234 FAX: (01792) 561016	ELECTRICAL SPECIFICATIONS:- 480V 3-PHASE 60HZ 3 WIRE + GROUND
---	---

RIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MOND EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

IF IN ANY DOUBT - ASK

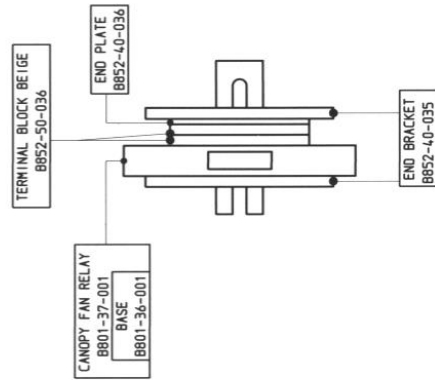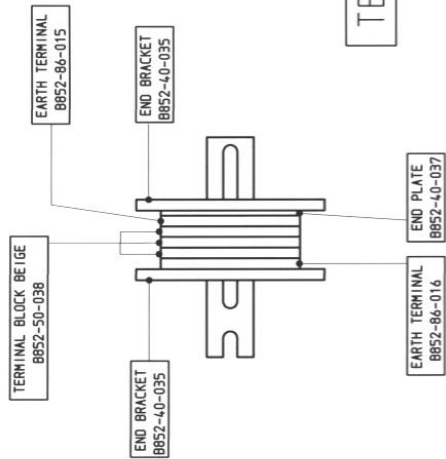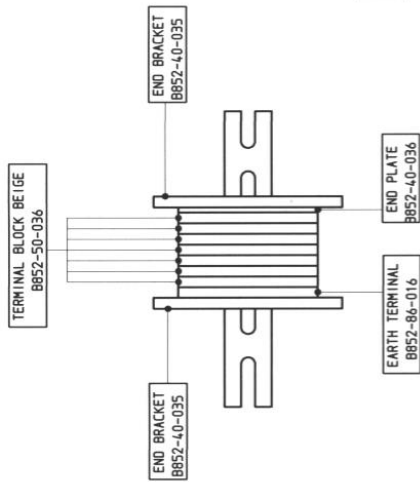

TB3

TB2

TB1


REV	SIG	DATE	REVISION	ECH NO.
MONO		TITLE:		
MONO EQUIPMENT		MODULAR DECK OVEN		
QUEENSWAY		TB1, TB2, TB3		
SWANSEA WEST IND PARK				
SA5 4EB.				
SWANSEA.				
ELECTRICAL SPECIFICATIONS:-		DRAWN:	ELECTRICALLY APPROVED BY:-	
		RAC	AT	
		DATE:	DRAWING NO.	
		8-2-07	M257E25-50400	
			REV:	
			--	

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

## **OVEN CANOPY LAYOUT PARTS LIST**

F1	CANOPY FAN MCB	B872-22-117
C1	CANOPY FAN CAPACITOR	B869-23-005
Q1	CANOPY FAN ON/OFF SWITCH	B895-07-005
M1	CANOPY FAN MOTOR	B869-75-026
X1	EXTRACTION FAN SOCKET CONNECTOR	B831-06-006
	EXTRACTION FAN PLUG CONNECTOR	B831-25-005
	SOCKET TYPE 5669-C	B831-06-006
	PLUG TYPE 5666-C	B831-25-005
	CABLE, 3 CORE TYPE SO14/3	B844-58-001
	CABLE, 3 CORE TYPE SO18/3	B844-58-007
	MCB – 2 POLE – 1.0AMPS – “D”	B872-22-117
	CAPACITOR – 4-6uf – 400VDB – METAL	B869-23-005
	FAN TYPE R2E225-AG01-21 (230V, 0.88AMP, 200W)	B869-75-026

IF IN ANY DOUBT - ASK

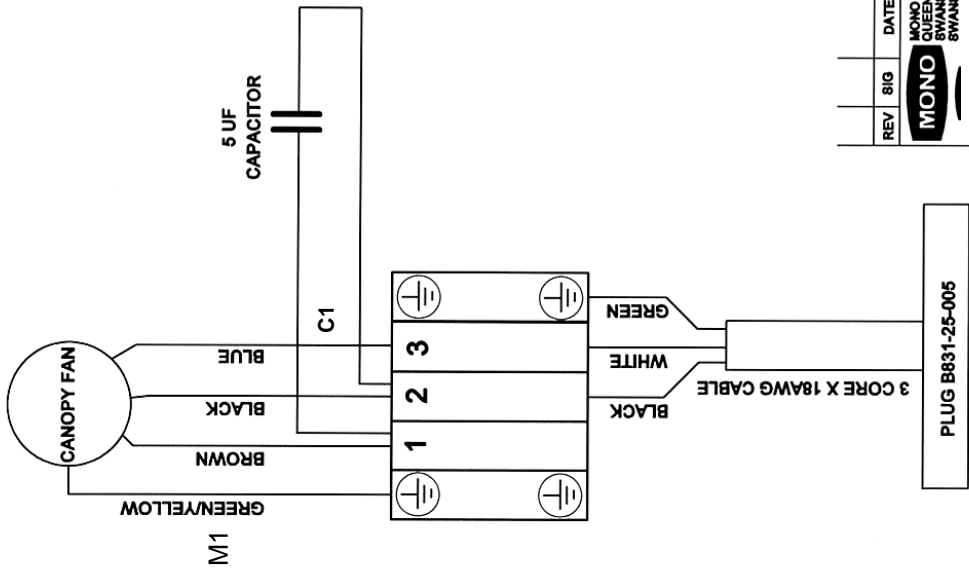

FROM CANOPY CONTROL PANEL


REV	SIG	DATE	REVISION	ECN NO.
TITLE: MODULAR DECK OVEN CANOPY FAN WIRING UL VERSION				
MONO EQUIPMENT SUDBURY SUDBURY WEST IND PARK SUDBURY SWANSEA			DRAWN: RAC	ELECTRICALLY APPROVED BY:- PBI/AT
ELECTRICAL SPECIFICATIONS:-			DATE: 28-4-05	DRAWING NO. M247E25-50600
COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.				REV: -

**X1**

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MOND EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DISCLOSED WITHOUT PRIOR WRITTEN PERMISSION.



IF IN ANY DOUBT - ASK

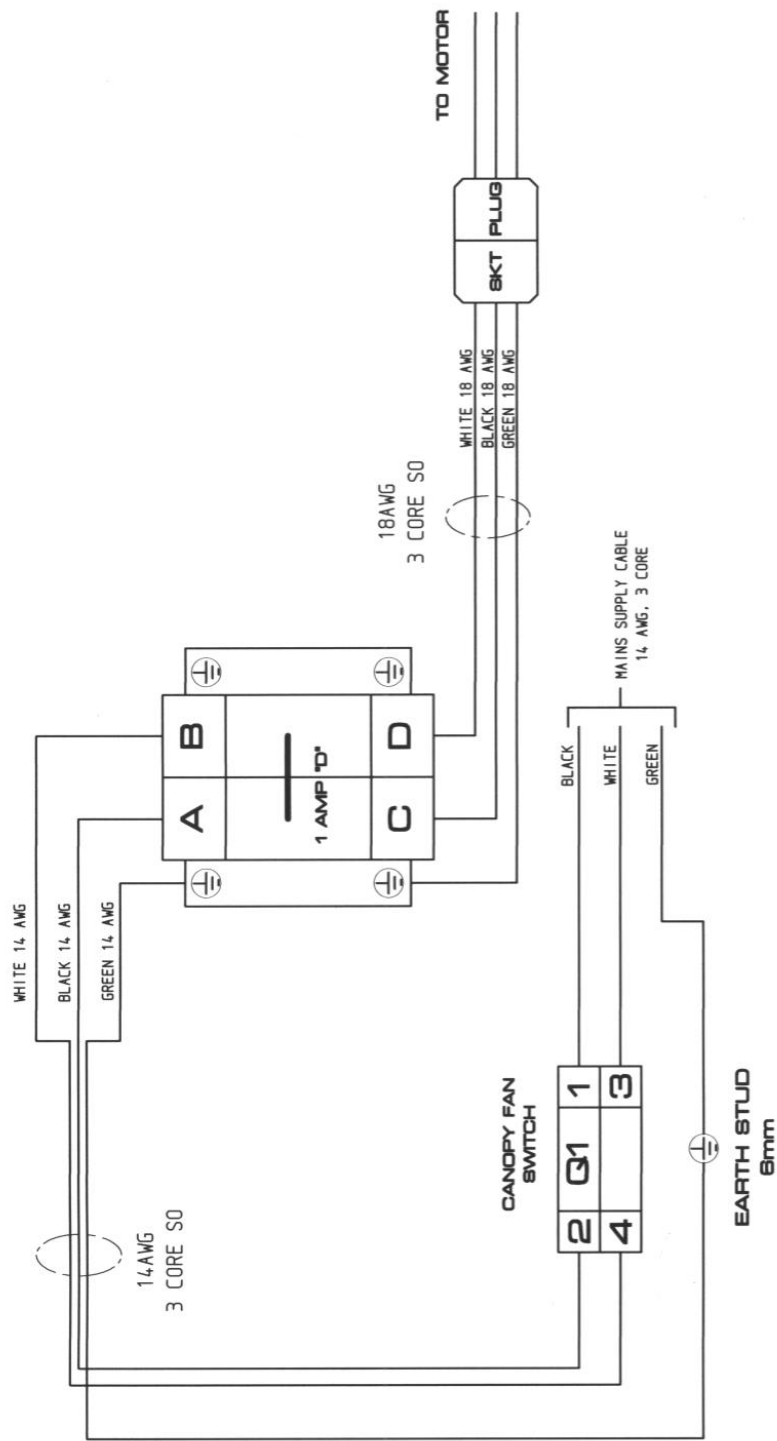

REV	SIG	DATE	REVISION	ECN NO.
TITLE: HARMONY DECK OVEN CANOPY FAN WIRING				
UL				
DRAWN: RAC				
ELECTRICALLY APPROVED BY:- AT				
DATE: 5-02-07				
DRAWING NO. M257E25-50500				
REV: ---				

MONO EQUIPMENT  
QUEENSWAY  
SWANSEA WEST IND PARK  
SA5 4EB.  
SWANSEA.

ELECTRICAL SPECIFICATIONS:-

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

## 15.0 WARNING AND INFORMATION LABELS

### **WARNING - RISK OF ELECTRIC SHOCK**

THESE ARE SUPPLEMENTARY OVERCURRENT-PROTECTIVE DEVICES  
AND ARE NOT INTENDED TO BE SERVICED WHILE ENERGIZED.

**DISCONNECT POWER BEFORE SERVICING**

M257-20-01200

### **SUPPLY CABLE**

### **WARNING - RISK OF FIRE**

**USE A UL LISTED GROUNDING TYPE PLUG RATED FOR  
300 VOLTS, 20 AMPERES, 3 PHASE, 3 WIRE.  
PLUG TO BE SELECTED AND INSTALLED ONLY  
BY QUALIFIED SERVICE PERSONNEL**

M257-20-01000

### **SUPPLY CABLE**

### **WARNING - RISK OF FIRE**

**USE A UL LISTED GROUNDING TYPE PLUG RATED FOR  
300 VOLTS, 30 AMPERES, 3 PHASE, 3 WIRE.  
PLUG TO BE SELECTED AND INSTALLED ONLY  
BY QUALIFIED SERVICE PERSONNEL**

M247-20-01000

### **WARNING - RISK OF FIRE**

**USE A UL LISTED GROUNDING TYPE PLUG RATED FOR  
300 VOLTS, 15 AMPERES, 2 PHASE, 2 WIRE AND GROUND.  
PLUG TO BE SELECTED AND INSTALLED ONLY  
BY QUALIFIED SERVICE PERSONNEL**

M257-20-01100



M257-20-01300




M257-20-0010



M247-20-01300

LABEL TO WARN OF HOT SURFACES

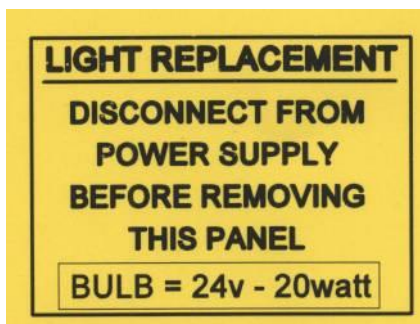

M257-20-00200



M247-20-01400







Belshaw Adamatic Bakery Group  
814 44th Street NW  
Suite 103  
Auburn, Washington 98001  
USA

Tel: 800.578.2547(USA/CANADA)

Fax: 206.322.5425

E-mail: [scottu@belshaw-adamatic.com](mailto:scottu@belshaw-adamatic.com)

Web: [www.belshaw-adamatic.com](http://www.belshaw-adamatic.com)

- **DISPOSAL**

Care should be taken when the machine comes to the end of its working life. All parts should be disposed of in the appropriate place, either recycling or other means as the law permits at the time.