PRODUCT BULLETIN



Product:	Automatic Jammer / Injector
Product Codes:	All FG053 Models
Title:	HOW TO CONNECT & DISCONNECT THE POWER SUPPLY



Correct Procedures for Connecting & Disconnecting the Mains Power Supply if Kycon Snap & Lock Connector Fitted

It has been brought to our attention that some customers who have a Kycon Snap & Lock connector fitted to the Power Supply of their MONO Automatic Jammer / Injector are not aware the connection is actually a two-step process.


If your Automatic Jammer / Injector is fitted with this type of connector, it is imperative that the procedures detailed below are followed; failure to do so may cause electrical issues resulting in damage to the Power Supply and Power Socket Assembly which may invalidate the product's Warranty.

The Kycon Snap & Lock Connector:



Connecting the Power Supply Lead to the back of the Auto Jammer / Injector Base Unit requires a two-step process to ensure the power lead is connected correctly, safely and securely.

Please follow the instruction detailed below when connecting and disconnecting your Unit's Power Supply; this will help prolong the life of your Auto Jammer / Injector.

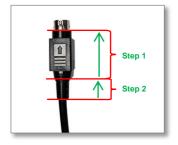


Connecting the Kycon Power Supply to the Base Unit:



FIRSTLY: ALWAYS ensure the flat side of the connector, with the arrow symbol, is facing to the left, when connecting the power supply.



STEP 1: Holding the flat side of the connector between finger and thumb, push until the silver part of the connector is no longer visible.

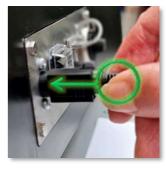


STEP 2: Grip the power lead immediately behind the flat area of the connector and push forwards until you feel / hear a click.

Disconnecting the Kycon Power Supply from the Base Unit:



ALWAYS: Grip the flat area of the connector between thumb and finger and pull gently to remove the power supply.

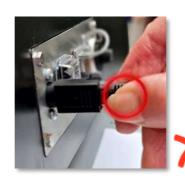

NEVER:
Grip the power lead behind the main part of the connector and pull – this may damage the power supply lead.